




# Installation manual



## Daikin Altherma 4 H W

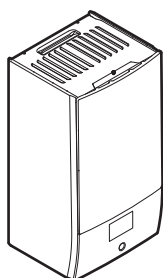

EPBX10A▲4V▼  
EPBX10A▲9W▼  
EPBX14A▲4V▼  
EPBX14A▲9W▼

▲ = 1, 2, 3, ..., 9, A, B, C, ..., Z  
▼ = , , 1, 2, 3, ..., 9

## Table of contents

<b>1</b>	<b>About this document</b>	<b>2</b>
<b>2</b>	<b>Specific installer safety instructions</b>	<b>3</b>
<b>3</b>	<b>About the box</b>	<b>4</b>
3.1	Indoor unit.....	4
3.1.1	To remove the accessories from the indoor unit.....	4
<b>4</b>	<b>Unit installation</b>	<b>4</b>
4.1	Preparing the installation site .....	4
4.1.1	Installation site requirements of the indoor unit .....	4
4.2	Opening and closing the unit.....	5
4.2.1	To open the indoor unit.....	5
4.2.2	To close the indoor unit.....	6
4.3	Installing the indoor unit.....	6
4.3.1	To install the indoor unit.....	6
4.3.2	To connect the drain hose to the drain .....	6
<b>5</b>	<b>Piping installation</b>	<b>7</b>
5.1	Preparing water piping.....	7
5.1.1	To check the water volume and flow rate .....	7
5.1.2	Third-party tank requirements.....	8
5.2	Connecting water piping .....	8
5.2.1	To connect the water piping.....	8
5.2.2	To fill the water circuit .....	9
5.2.3	To protect the water circuit against freezing .....	9
5.2.4	To fill the domestic hot water tank .....	9
5.2.5	To insulate the water piping .....	9
<b>6</b>	<b>Electrical installation</b>	<b>9</b>
6.1	About electrical compliance.....	10
6.2	Guidelines when connecting the electrical wiring .....	10
6.3	Field IO connections.....	10
6.4	Connections to the indoor unit.....	11
6.4.1	To connect the electrical wiring to the indoor unit.....	13
6.4.2	To connect the main power supply .....	14
6.4.3	To connect the backup heater power supply .....	15
6.4.4	To connect the normally closed shut-off valve (inlet leak stop) .....	17
6.4.5	To connect the shut-off valve.....	17
6.4.6	To connect the domestic hot water pump .....	17
6.4.7	To connect the alarm output .....	18
6.4.8	To connect the space cooling/heating ON/OFF output.....	18
6.4.9	To connect the changeover to external heat source... ..	18
6.4.10	To connect the bivalent bypass valve .....	18
6.4.11	To connect the electricity meters .....	19
6.4.12	To connect the safety thermostat (normally closed contact) .....	19
6.4.13	Smart Grid.....	19
6.4.14	To connect the WLAN cartridge (delivered as accessory).....	21
<b>7</b>	<b>Configuration</b>	<b>21</b>
7.1	Configuration wizard.....	22
	[10.1] Location and language .....	22
	[10.2] Timezone .....	22
	[10.3] Time/date .....	22
	[10.4] System 1/4 .....	22
	[10.5] System 2/4 .....	23
	[10.6] System 3/4 .....	23
	[10.7] System 4/4 .....	23
	[10.8] Backup heater .....	24
	[10.9] Main zone 1/4 .....	24
	[10.10] Main zone 2/4 .....	24
	[10.11] Main zone 3/4 (Heating WD curve).....	25
	[10.12] Main zone 4/4 (Cooling WD curve).....	25

	[10.13] Additional zone 1/4 .....	25
	[10.14] Additional zone 2/4 .....	25
	[10.15] Additional zone 3/4 (Heating WD curve) ..	25
	[10.16] Additional zone 4/4 (Cooling WD curve) ..	25
	[10.17] Configuration wizard – DHW 1/2 .....	25
	[10.18] Configuration wizard – DHW 2/2 .....	26
	[10.19] Configuration wizard .....	26
7.2	Weather-dependent curve.....	26
7.2.1	What is a weather-dependent curve? .....	26
7.2.2	Using weather-dependent curves .....	26
7.3	Menu structure: Overview installer settings.....	27
<b>8</b>	<b>Commissioning</b>	<b>28</b>
8.1	Checklist before commissioning .....	29
8.2	Checklist during commissioning .....	29
8.2.1	To unlock the outdoor unit (compressor) .....	29
8.2.2	To open the stop valve of the outdoor unit's refrigerant vessel .....	31
8.2.3	To update the user interface software .....	32
8.2.4	To check the minimum flow rate .....	32
8.2.5	To perform an air purge .....	32
8.2.6	To perform an operation test run .....	33
8.2.7	To perform an actuator test run .....	33
8.2.8	To perform an underfloor heating screed dryout.....	34
<b>9</b>	<b>Hand-over to the user</b>	<b>36</b>
<b>10</b>	<b>Technical data</b>	<b>37</b>
10.1	Piping diagram: Indoor unit.....	37
10.2	Wiring diagram: Indoor unit .....	38

## 1 About this document

### Target audience

Authorised installers

### Documentation set

This document is part of a documentation set. The complete set consists of:

- **General safety precautions:**
  - Safety instructions that you must read before installing
  - Format: Paper (in the box of the indoor unit)
- **Operation manual:**
  - Quick guide for basic usage
  - Format: Paper (in the box of the indoor unit)
- **User reference guide:**
  - Detailed step-by-step instructions and background information for basic and advanced usage
  - Format: Digital files on <https://www.daikin.eu>. Use the search function 🔍 to find your model.
- **Installation manual – Outdoor unit:**
  - Installation instructions
  - Format: Paper (in the box of the outdoor unit)
- **Installation manual – Indoor unit:**
  - Installation instructions
  - Format: Paper (in the box of the indoor unit)
- **Installer reference guide:**
  - Preparation of the installation, good practices, reference data, ...
  - Format: Digital files on <https://www.daikin.eu>. Use the search function 🔍 to find your model.
- **Configuration reference guide:**
  - Configuration of the system.
  - Format: Digital files on <https://www.daikin.eu>. Use the search function 🔍 to find your model.

### • Addendum book for optional equipment:

- Additional info about how to install optional equipment
- Format: Paper (in the box of the indoor unit) + Digital files on <https://www.daikin.eu>. Use the search function 🔍 to find your model.

The latest revision of the supplied documentation is published on the regional Daikin website and is available via your dealer.

The original instructions are written in English. All other languages are translations of the original instructions.

### Technical engineering data

- A **subset** of the latest technical data is available on the regional Daikin website (publicly accessible).
- The **full set** of the latest technical data is available on the Daikin Business Portal (authentication required).

### Online tools

In addition to the documentation set, some online tools are available for installers:

#### • Daikin Technical Data Hub

- Central hub for technical specifications of the unit, useful tools, digital resources, and more.
- Publicly accessible via <https://daikintechdatahub.eu>.

#### • Heating Solutions Navigator

- Digital toolbox that offers a variety of tools to facilitate the installation and configuration of heating systems.
- To access the Heating Solutions Navigator, registration to the Stand By Me platform is required. For more information, see <https://professional.standbyme.daikin.eu>.

#### • Daikin e-Care

- Mobile app for installers and service technicians that allows you to register, configure and troubleshoot heating systems.
- Use the QR codes below to download the mobile app for iOS and Android devices. Registration to the Stand By Me platform is required to access the app.

App Store

Google Play



## 2 Specific installer safety instructions

Always observe the following safety instructions and regulations.

### Installation site (see "4.1 Preparing the installation site" ▶ 4))



#### WARNING

Follow the service space dimensions in this manual to install the unit correctly. See "4.1.1 Installation site requirements of the indoor unit" ▶ 4].

### Opening and closing the unit (see "4.2 Opening and closing the unit" ▶ 5))



#### DANGER: RISK OF ELECTROCUTION



#### DANGER: RISK OF BURNING/SCALDING

### Installing the indoor unit (see "4.3 Installing the indoor unit" ▶ 6))



#### WARNING

The indoor unit installation MUST be in accordance with the instructions from this manual. See "4.3 Installing the indoor unit" ▶ 6].

### Piping installation (see "5 Piping installation" ▶ 7))



#### WARNING

Field piping MUST be in accordance with the instructions from this manual. See "5 Piping installation" ▶ 7].



#### WARNING

Adding anti-freeze solutions (e.g. glycol) to the water is NOT allowed.

### Electrical installation (see "6 Electrical installation" ▶ 9))



#### DANGER: RISK OF ELECTROCUTION



#### WARNING

Electrical wiring MUST be in accordance with the instructions from:

- This manual. See "6 Electrical installation" ▶ 9].
- The wiring diagram, which is delivered with the unit, located on the inside of the indoor unit switch box cover. For a translation of its legend, see "10.2 Wiring diagram: Indoor unit" ▶ 38].



#### WARNING

- All wiring MUST be performed by an authorised electrician and MUST comply with the applicable national wiring regulation.
- Make electrical connections to the fixed wiring.
- All components procured on-site and all electrical construction MUST comply with the applicable legislation.



#### WARNING

ALWAYS use multicore cable for power supply cables.



#### WARNING

If the supply cord is damaged, it MUST be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



#### CAUTION

Do NOT push or place redundant cable length into the unit.



#### WARNING

The backup heater MUST have a dedicated power supply and MUST be protected by the safety devices required by the applicable legislation.



#### CAUTION

If the indoor unit has a tank with a built-in electrical booster heater, use a dedicated power circuit for the backup heater and booster heater. NEVER use a power circuit shared by another appliance. This power circuit MUST be protected with the required safety devices according to the applicable legislation.



#### CAUTION

To guarantee the unit is completely earthed, ALWAYS connect the backup heater power supply and the earth cable.



#### INFORMATION

For details on the fuse ratings, the fuse types and the circuit breaker ratings, see "6 Electrical installation" ▶ 9].

## 3 About the box

Commissioning (see "8 Commissioning" ▶ 28)




### WARNING

Commissioning **MUST** be in accordance with the instructions from this manual. See "8 Commissioning" ▶ 28].



### WARNING

After commissioning, do NOT turn OFF the circuit breakers (c) to the units so that the protection remains activated. In case of normal kWh rate power supply (a), there is one circuit breaker. In case of preferential kWh rate power supply (b), there are two.

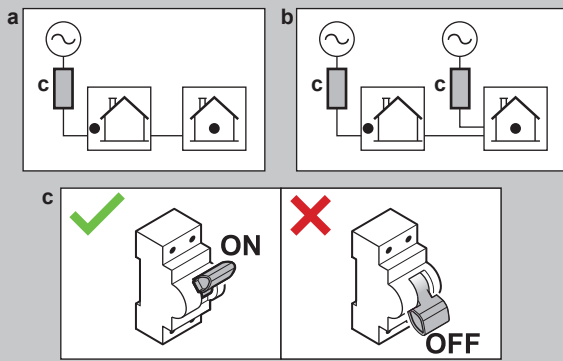

## 3 About the box


Keep the following in mind:

- At delivery, the unit **MUST** be checked for damage and completeness. Any damage or missing parts **MUST** be reported immediately to the claims agent of the carrier.
- Bring the packed unit as close as possible to its final installation position to prevent damage during transport.
- Prepare in advance the path along which you want to bring the unit to its final installation position.

### 3.1 Indoor unit

#### 3.1.1 To remove the accessories from the indoor unit

Some accessories are located inside the unit. For more information on opening the unit, see "4.2.1 To open the indoor unit" ▶ 5].

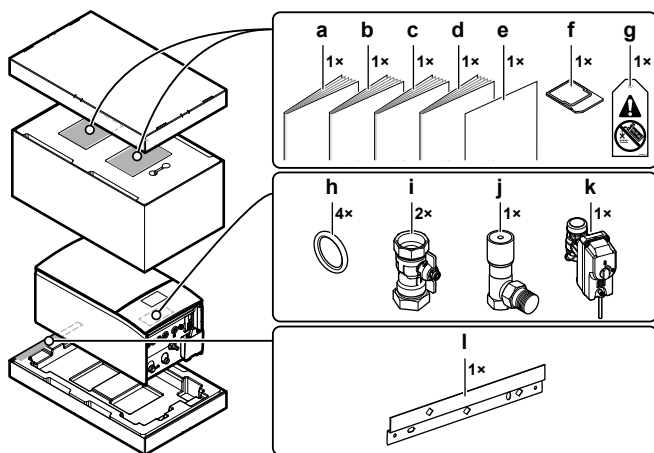

- a General safety precautions
- b Addendum book for optional equipment
- c Indoor unit installation manual
- d Operation manual
- e Addendum - Updating the BRC1HH\* firmware
- f WLAN cartridge
- g "No glycol" tag (to attach to the field piping near the filling point)
- h Sealing ring for shut-off valve
- i Shut-off valve
- j Differential pressure bypass valve
- k Normally closed shut-off valve (inlet leak stop)
- l Wall bracket

- g "No glycol" tag (to attach to the field piping near the filling point)
- h Sealing ring for shut-off valve
- i Shut-off valve
- j Differential pressure bypass valve
- k Normally closed shut-off valve (inlet leak stop)
- l Wall bracket

## 4 Unit installation

### 4.1 Preparing the installation site


#### 4.1.1 Installation site requirements of the indoor unit

- The indoor unit is designed for indoor installation only and for the following ambient temperatures:
  - Space heating operation: 5~30°C
  - Space cooling operation: 5~35°C
  - Domestic hot water production: 5~35°C
- Mind the measurement guidelines:

Maximum height difference between indoor unit and outdoor unit	10 m
Maximum height difference between domestic hot water tank and outdoor unit	10 m
Maximum water piping length between indoor unit and domestic hot water tank (piping diameter 1 1/4" <sup>(a)</sup> )	10 m <sup>(a)</sup>
Maximum distance between the 3-way valve and the indoor unit (for installations with domestic hot water tank)	3 m
Maximum water piping length between outdoor unit and indoor unit in case of...	
1 1/4" field piping	20 m <sup>(a)</sup> (single run)
1 1/2" field piping + V3 outdoor model (1N~)	30 m <sup>(a)</sup> (single run)
1 1/2" field piping + W1 outdoor model (3N~)	50 m <sup>(a)</sup> (single run)

<sup>(a)</sup> The precise water piping length and diameter can be determined using the Hydronic Piping Calculation tool. The Hydronic Piping Calculation tool is part of the Heating Solutions Navigator which can be reached via <https://professional.standbyme.daikin.eu>. Contact your dealer if you have no access to the Heating Solutions Navigator.

- Mind the following spacing installation guidelines:

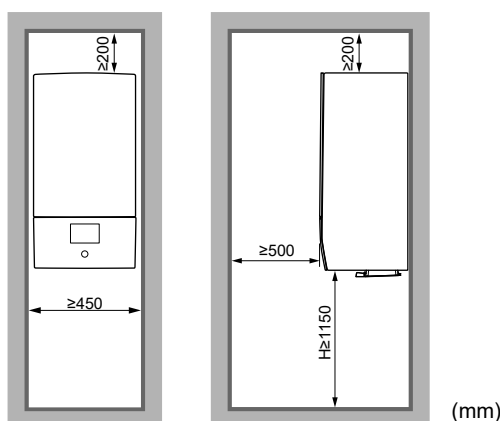


H Height measured from the bottom of the casing to the floor

## 4.2 Opening and closing the unit


### 4.2.1 To open the indoor unit

#### Overview

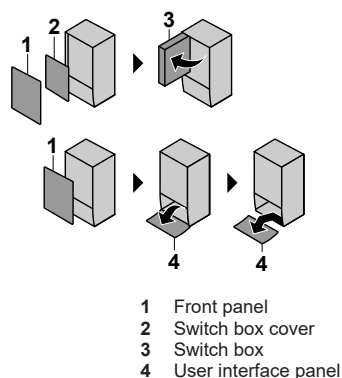


#### Open


- 1 Remove the front panel.

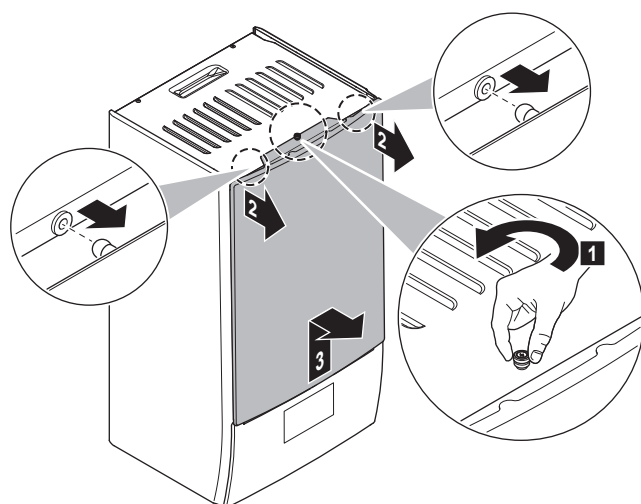


- 2 If you have to connect electrical wiring, remove the switch box cover.

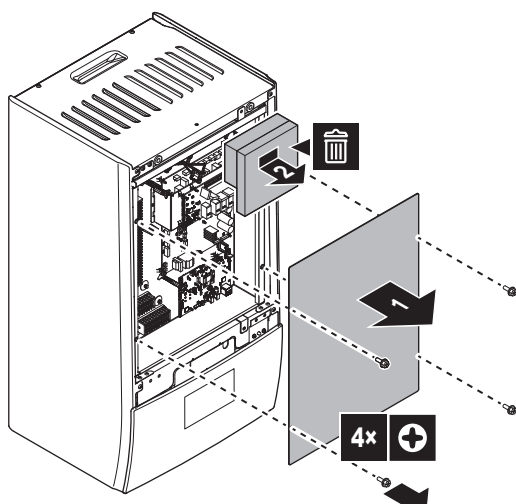

- 3 If you have to do work behind the switch box, open the switch box.

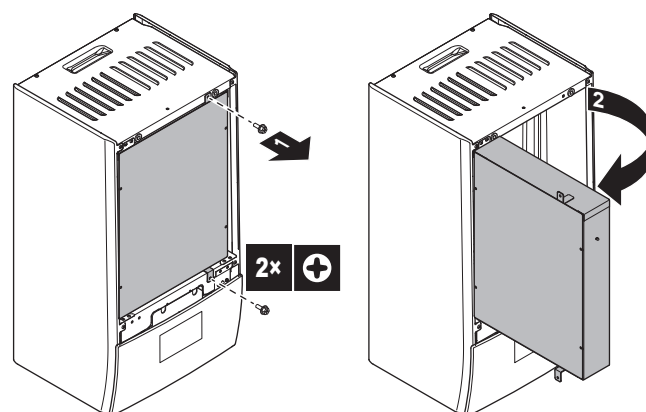

- 4 If you have to do work behind the user interface panel, open the user interface panel.

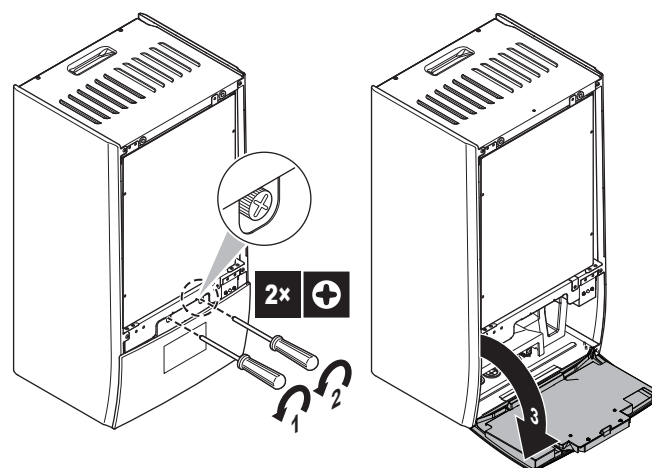


- 5 Optional: Remove the user interface panel.

- (1) Remove the cover (sheet metal).
- (2) Remove the cover (back of user interface).
- (3)(4) Disconnect the wire harnesses.
- (5) Remove the user interface panel.



#### NOTICE

The wire harnesses and connectors are fragile. Handle with care.

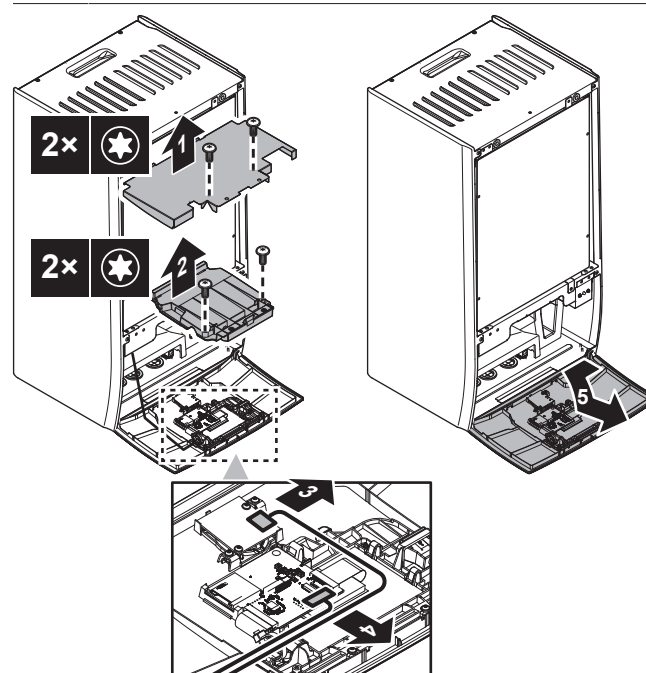

## 4 Unit installation


### 4.2.2 To close the indoor unit

- 1 Reinstall the user interface panel.
- 2 Reinstall the switch box cover and close the switch box.
- 3 Reinstall the front panel.



#### NOTICE

When reconnecting the wire harnesses, mind their orientation, especially for (1).

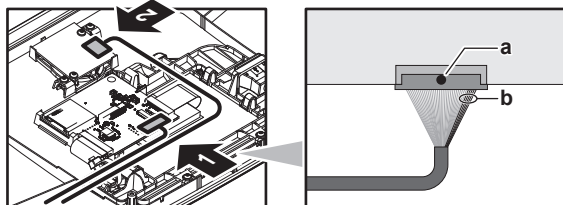

a Black dot on connector = Top side

b 5 red wires = Right side




#### NOTICE

When closing the indoor unit cover, make sure that the tightening torque does NOT exceed 4.1 N•m.

## 4.3 Installing the indoor unit


### 4.3.1 To install the indoor unit

- 1 Fix the wall bracket (accessory) to the wall (level) with 2x Ø8 mm bolts.

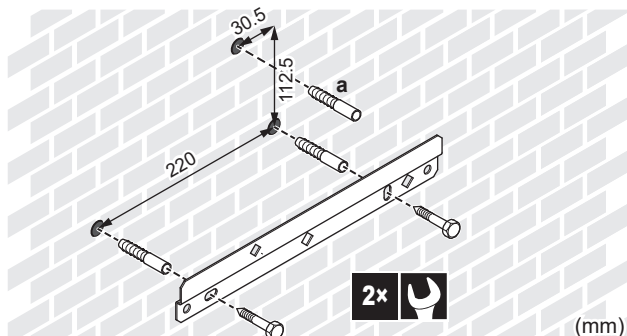


a Optional: If you want to fix the unit to the wall from inside the unit, provide an additional screw plug.

- 2 Lift the unit.

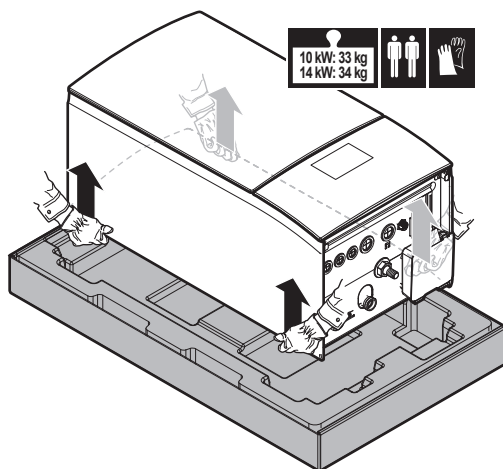


- 3 Attach the unit to the wall bracket:

- Tilt the top of the unit against the wall at the position of the wall bracket.
- Slide the bracket on the back of the unit over the wall bracket. Make sure the unit is fixed properly.

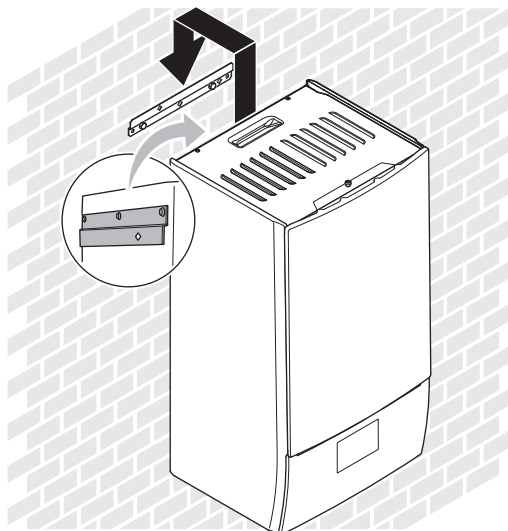

- 4 Optional: If you want to fix the unit to the wall from inside the unit:


- Remove the upper front panel, and open the switch box. See "4.2.1 To open the indoor unit" [p 5].
- Fix the unit to the wall with an Ø8 mm screw.

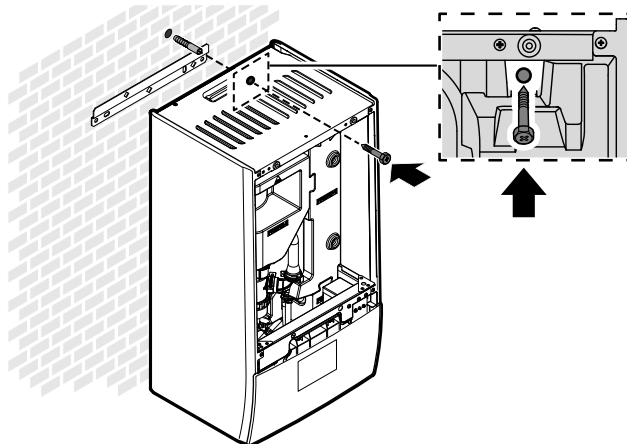

### 4.3.2 To connect the drain hose to the drain

Water coming from the pressure relief valve is collected in the drain pan. You must connect the drain pan to an appropriate drain according to the applicable legislation.

- 1 Connect a drain tube (field supply) to the drain pan connector as follows:

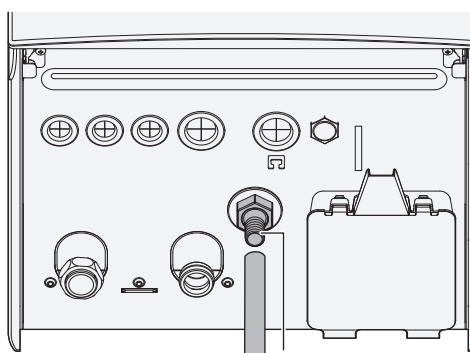

a Drain pan connector



It is recommended to use a tundish to collect the water.

## 5 Piping installation

### 5.1 Preparing water piping



#### NOTICE

In case of plastic pipes, make sure they are fully oxygen diffusion tight according to DIN 4726. The diffusion of oxygen into the piping can lead to excessive corrosion.



#### NOTICE


**Water circuit requirements.** Make sure to comply with the water pressure and water temperature requirements below. For additional water circuit requirements, see the installer reference guide.

- **Water pressure – Space heating/cooling circuit.** The maximum water pressure is 3 bar (=0.3 MPa). Provide adequate safeguards in the water circuit to ensure that the maximum pressure is NOT exceeded. The minimum water pressure to operate is 1 bar (=0.1 MPa).
- **Water temperature.** All installed piping and piping accessories (valve, connections,...) MUST withstand the following temperatures:



#### INFORMATION

The following figure is an example and may NOT completely match your system layout.

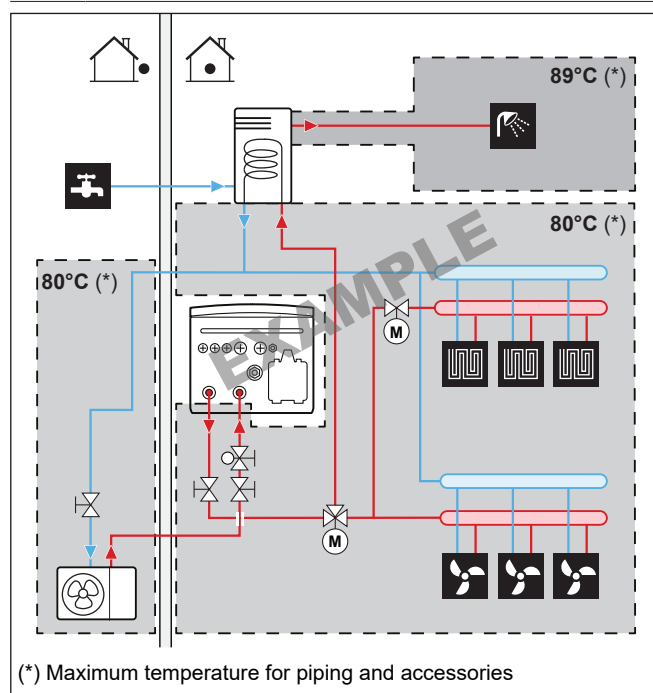

#### INFORMATION

The maximum leaving water temperature is decided based on setting [3.12] Overheating setpoint. This limit defines the maximum leaving water in the system. Depending on the value of this setting, the maximum LWT setpoint will also be reduced by 5°C to allow stable control towards the setpoint.

The maximum leaving water temperature in the main zone is decided based on setting [1.19] Overheating water circuit. This limit defines the maximum leaving water in the main zone. Depending on the value of this setting, the maximum LWT setpoint will also be reduced by 5°C to allow stable control towards the setpoint.

### 5.1.1 To check the water volume and flow rate


#### Minimum water volume

The installation needs to be made in such a way that a minimum water volume (see table below) is always available in the space heating/cooling loop of the unit, even when the available volume towards the unit is reduced because of closure of valves (heat emitters, thermostatic valves, etc.) in the space heating/cooling circuit. The internal water volume of the outdoor unit is NOT considered for this minimum water volume.

If...	Then the minimum water volume is...
Cooling operation	For EPBX10: 25 l For EPBX14: 30 l
Heating/defrost operation in case DHW tank is present	For EPBX10: 55 l For EPBX14: 55 l
Heating/defrost operation in case DHW tank is not present	For EPBX10: 55 l For EPBX14: 55 l

#### Maximum water volume

Use the following graph to determine the maximum water volume for the calculated pre-pressure.

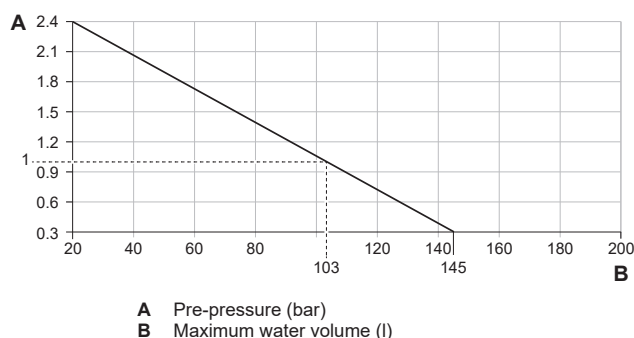

#### Minimum flow rate

Check that the minimum flow rate in the installation is guaranteed in all conditions. For this purpose, use the differential pressure bypass valve delivered with the unit, and respect the minimum water volume.

If operation is...	Then the minimum required flow rate is...
Cooling/heating/defrost/backup heater operation	For EPBX10: 22 l/min For EPBX14: 24 l/min
Domestic hot water production	25 l/min



#### NOTICE

When circulation in each or certain space heating loops is controlled by remotely controlled valves, it is important that the minimum flow rate is guaranteed, even if all valves are closed. In case the minimum flow rate cannot be reached, a flow error 7H will be generated (no heating or operation).

## 5 Piping installation

See the installer reference guide for more information.

See the recommended procedure as described in ["8.2 Checklist during commissioning"](#) [p 29].

### 5.1.2 Third-party tank requirements

In case of a third-party tank, the tank shall adhere to the following requirements:

- The heat exchanger coil of the tank is  $\geq 1.05 \text{ m}^2$  and  $\leq 3.7 \text{ m}^2$ .
- The tank thermistor must be located above the heat exchanger coil.
- The booster heater must be located above the heat exchanger coil.



#### NOTICE

**Performance.** Performance data for third-party tanks CANNOT be provided, and performance CANNOT be guaranteed.



#### NOTICE

**Configuration.** Configuration of a third-party tank depends on the size of the heat exchanger coil of the tank. For more information, see the configuration reference guide.

## 5.2 Connecting water piping

### 5.2.1 To connect the water piping




#### NOTICE

Do NOT use excessive force when connecting the field piping and make sure the piping is aligned properly. Deformed pipes can cause the unit to malfunction.


Delivered as accessory:

1 normally closed shut-off valve (+ quick clip)	To prevent refrigerant from entering the indoor unit in case of a refrigerant leak in the outdoor unit.
2 shut-off valves (+ O-rings)	To facilitate service and maintenance.
1 differential pressure bypass valve	To ensure the minimum flow rate (and prevent overpressure).

- 1 Remove the protective caps.

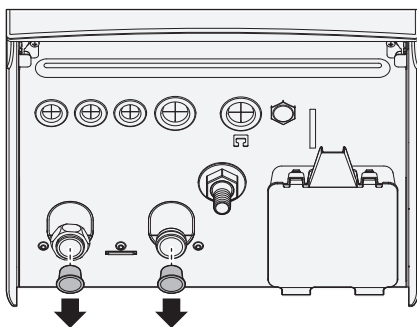

- 2 Install the normally closed shut-off valve (+ quick clip), and shut-off valves (+ O-rings) as follows:

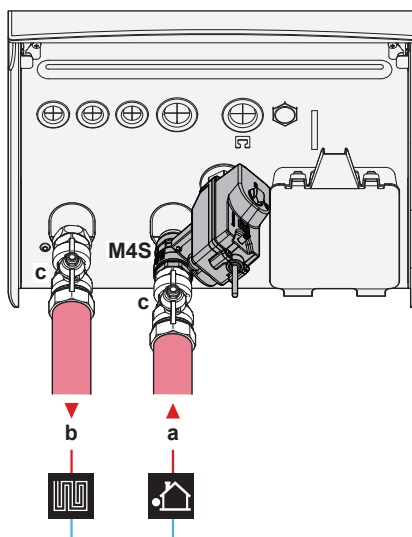

- a Water IN from outdoor unit (screw connection, 1 1/4")
- b Water OUT to space heating (screw connection, 1 1/4")
- c Shut-off valve (+ O-rings)(male 1" – female 1 1/4")
- M4S Normally closed shut-off valve (+ quick clip)(inlet leak stop)(quick coupling – female 1")

- 3 Install the differential pressure bypass valve on the space heating water outlet.



#### NOTICE



**Differential pressure bypass valve** (delivered as accessory). We recommend to install the differential pressure bypass valve in the space heating water circuit.

- Mind the minimum water volume when choosing the installation location of the differential pressure bypass valve (at the indoor unit, or at the collector). See ["5.1.1 To check the water volume and flow rate"](#) [p 7].
- Mind the minimum flow rate when adjusting the differential pressure bypass valve setting. See ["5.1.1 To check the water volume and flow rate"](#) [p 7] and ["8.2.4 To check the minimum flow rate"](#) [p 32].



#### NOTICE

Install air purge valves at all local high points.



#### NOTICE

In case an optional domestic hot water tank is installed: A pressure relief valve (field supply) with an opening pressure of maximum 10 bar (= 1 MPa) must be installed on the domestic cold water inlet connection in accordance with the applicable legislation.



**NOTICE**

In case an optional domestic hot water tank is installed:

- A drain device and pressure relief device must be installed on the cold water inlet connection of the domestic hot water cylinder.
- To avoid back siphonage, it is recommended to install a non-return valve on the water inlet of the domestic hot water tank in accordance with the applicable legislation. Make sure it is NOT between the pressure relief valve and the DHW tank.
- It is recommended to install a pressure reducing valve on the cold water inlet in accordance with the applicable legislation.
- It is recommended to install an expansion vessel on the cold water inlet in accordance with the applicable legislation.
- It is recommended to install the pressure relief valve on a higher position than the top of the domestic hot water tank. Heating of the domestic hot water tank causes water to expand and without pressure relief valve the water pressure inside the tank can rise above the tank design pressure. Also the field installation (piping, tapping points, etc.) connected to the tank is subjected to this high pressure. To prevent this, a pressure relief valve needs to be installed. The overpressure prevention depends on the correct operation of the field installed pressure relief valve. If this is NOT working correctly, overpressure will deform the tank and water leakage may occur. To confirm good operation, regular maintenance is required.

### 5.2.2 To fill the water circuit

To fill the water circuit, use a field supply filling kit. Make sure you comply with the applicable legislation.

Attach the "No glycol" tag (delivered as accessory) to the field piping near the filling point.

**WARNING**

Adding anti-freeze solutions (e.g. glycol) to the water is NOT allowed.

**NOTICE**

If automatic air purge valves are installed in the field piping:

- Between the outdoor unit and the indoor unit (on the entering water pipe of the indoor unit), they must be closed after commissioning.
- After the indoor unit (on the emitter side), they may remain open after commissioning.

**NOTICE**

To prevent the pump from running in dry conditions, only power ON the unit when there is water in the unit.

### 5.2.3 To protect the water circuit against freezing

#### About freeze protection

Frost can damage the system. To prevent the hydraulic components from freezing, the unit is equipped with the following:

- The software is equipped with special frost protection functions such as water pipe freeze prevention that include the activation of a pump in case of low temperatures. However, in case of a power failure, these functions cannot guarantee protection.
- The outdoor unit is equipped with two freeze protection valves. Freeze protection valves drain the water from the system before it can freeze.

If needed, install **additional freeze protection valves** at all lowest points of the field piping. Insulate these field installed freeze protection valves in a similar way as the water piping, but do NOT insulate the inlet and outlet (release) of these valves.

Optionally, you can install **normally closed valves** (located indoors near the piping entry/exit points). These valves can prevent that all water from the indoor piping is drained when the freeze protection valves open. **Note:** The normally closed shut-off valve that is delivered as accessory with the indoor unit, which is mandatory to install on the indoor unit for safety reasons (inlet leak stop), does NOT prevent drainage of the indoor piping when the freeze protection valves open. For this, you need additional normally closed valves (optional).

For more information, see the installer reference guide.

**NOTICE**

When freeze protection valves are installed, set the minimum cooling setpoint (default=7°C) at least 2°C higher than the maximum opening temperature of the freeze protection valves (the opening temperature of the factory-mounted freeze protection valves is 3°C ±1).

If you set the minimum cooling setpoint lower than the safe value (i.e. maximum opening temperature of freeze protection valves + 2°C), you risk that the freeze protection valves open when cooling to the minimum setpoint.

**INFORMATION**

The minimum leaving water temperature is decided based on setting [3.11] Undercooling setpoint. This limit defines the minimum leaving water **in the system**. Depending on the value of this setting, the minimum LWT setpoint will also be increased by 4°C to allow stable control towards the setpoint.

The minimum leaving water temperature **in the main zone** is decided based on setting [1.20] Undercooling water circuit. This limit defines the minimum leaving water **in the main zone**. Depending on the value of this setting, the minimum LWT setpoint will also be increased by 4°C to allow stable control towards the setpoint.

**WARNING**

Adding anti-freeze solutions (e.g. glycol) to the water is NOT allowed.

### 5.2.4 To fill the domestic hot water tank

See the installation manual of the domestic hot water tank.

### 5.2.5 To insulate the water piping

The piping in the complete water circuit **MUST** be insulated to prevent condensation during cooling operation and reduction of the heating and cooling capacity.

#### Outdoor water piping insulation

See the installation manual of the outdoor unit, or the installer reference guide.

## 6 Electrical installation

**DANGER: RISK OF ELECTROCUTION**

## 6 Electrical installation



### WARNING

- All wiring **MUST** be performed by an authorised electrician and **MUST** comply with the applicable national wiring regulation.
- Make electrical connections to the fixed wiring.
- All components procured on-site and all electrical construction **MUST** comply with the applicable legislation.



### WARNING

ALWAYS use multicore cable for power supply cables.



### WARNING

If the supply cord is damaged, it **MUST** be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.



### CAUTION

Do NOT push or place redundant cable length into the unit.



### NOTICE

The distance between the high voltage and low voltage cables should be at least 50 mm.



### INFORMATION

When installing field supply or option cables, foresee sufficient cable length. This will make it possible to open the switch box and gain access to other components during service.

## 6.1 About electrical compliance

Only for the backup heater of the indoor unit

See "6.4.3 To connect the backup heater power supply" ▶ 15].

## 6.2 Guidelines when connecting the electrical wiring



### NOTICE

We recommend using solid (single-core) wires. If stranded wires are used, slightly twist the strands to consolidate the end of the conductor for either direct use in the terminal clamp or insertion in a round crimp-style terminal. Details are described in "Guidelines when connecting the electrical wiring" in the installer reference guide.

### Tightening torques

Indoor unit:

Item	Tightening torque (N•m)
M3.5 (X44M, X45M)	0.88 ±10%
M4 (X40M, X41M)	1.47 ±10%
M4 (earth)	1.47 ±10%


## 6.3 Field IO connections

When connecting the electrical wiring, for certain components, you can choose which terminal pins to use. After connection, you must tell the user interface (via [13] Field IO) which terminal pins you used so that it matches your system layout.

- |   |  |
|---|--|
| 1 | Choose which terminal pins to use for which component. |
|---|--|

1a In case of Field IO inputs:

Choose between the standard possibilities (1 2 3 4 5) as shown in the respective topics of "6.4 Connections to the indoor unit" ▶ 11] and in the addendum book for optional equipment). For example:

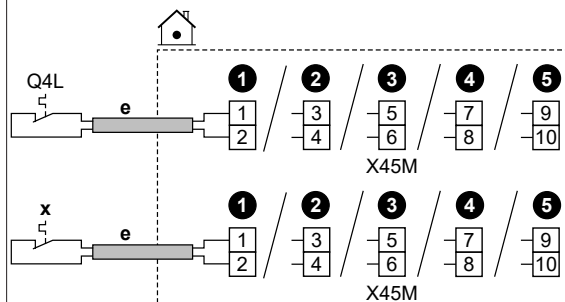


1b In case of Field IO outputs:

You have multiple options.

1b.1 **Option 1 (preferred)**; only possible if the running current and/or inrush current of the connected component does NOT exceed the maximum running current and/or inrush current of the terminals as listed in the respective topic):

Choose between the standard possibilities (1 2 3 4) as shown in the respective topics of "6.4 Connections to the indoor unit" ▶ 11] and in the addendum book for optional equipment). For example:


- Maximum running current and/or inrush current of respective terminals = 0.3 A
- Maximum running current and/or inrush current of connected component is ≤0.3 A

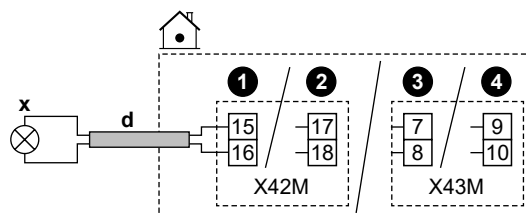

1b.2 **Option 2** (in case the running current and/or inrush current of the connected component exceeds the maximum running current and/or inrush current of the terminals as listed in the respective topic):

Choose between the standard possibilities (1 2 3 4) as shown in the respective topics of "6.4 Connections to the indoor unit" ▶ 11] and in the addendum book for optional equipment), but instead of directly connecting to the component, install a relay (field supply) with an external power supply outside of the switch box in-between. For example:

- Maximum running current and/or inrush current of respective terminals = 0.3 A
- Maximum running current and/or inrush current of connected component is >0.3 A

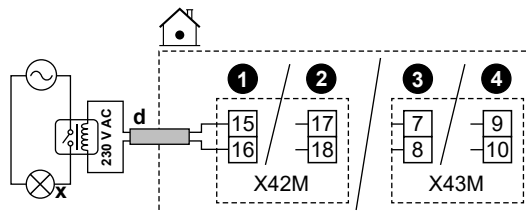

1b.3	<b>Option 3:</b> Alternatively, instead of choosing one of the standard possibilities (1234), you can use the terminal pins of any of the other Field IO outputs. However, you must also check if the running current and/or inrush current of the connected component exceeds the maximum running current and/or inrush current of the terminals as listed in the respective topic. If exceeded, you must install a relay in-between (similar to <b>Option 2</b> ).								
2	<b>Tell the user interface which terminal pins you used for which component.</b>								
2.1	Go to [13] Field IO.								
2.2	Select the used terminal block. <b>Result:</b> The screen with the connections on that terminal block is shown. For example: <div style="border: 1px solid black; padding: 10px; margin: 10px 0;"> <p style="text-align: center;">Field IO <span style="float: right;">?</span></p> <table style="width: 100%; border-collapse: collapse;"> <tr> <th style="width: 50%; background-color: #f0f0f0;">Terminal block X43M</th><th style="width: 50%; background-color: #f0f0f0;">Function</th></tr> <tr> <td style="text-align: center;">Pin 1-3</td><td style="text-align: center;">Shut off valve</td></tr> <tr> <td style="text-align: center;">Pin 4-6</td><td style="text-align: center;">External heat source</td></tr> <tr> <td style="text-align: center;">Pin 10-11-12</td><td style="text-align: center;">Alarm</td></tr> </table> <div style="display: flex; justify-content: space-between; align-items: center;"> <span>Invert</span> <input type="checkbox"/> </div> <div style="display: flex; justify-content: space-between; align-items: center; margin-top: 10px;"> <span>⏮ ⏪</span> <span>⏩ ⏭</span> </div> </div>	Terminal block X43M	Function	Pin 1-3	Shut off valve	Pin 4-6	External heat source	Pin 10-11-12	Alarm
Terminal block X43M	Function								
Pin 1-3	Shut off valve								
Pin 4-6	External heat source								
Pin 10-11-12	Alarm								
2.3	On the left, select the used terminal pins.								
2.4	On the right, select the connected component: <ul style="list-style-type: none"> <li>Field IO inputs (see table below)</li> <li>Field IO outputs (see table below)</li> </ul>								
2.5	Set whether the logic has to be inverted: <table style="width: 100%; border-collapse: collapse; margin-top: 10px;"> <thead> <tr> <th style="width: 50%; background-color: #f0f0f0;">If the component is...</th><th style="width: 50%; background-color: #f0f0f0;">Then set...</th></tr> </thead> <tbody> <tr> <td>Normally open</td><td>Invert = OFF</td></tr> <tr> <td>Normally closed</td><td>Invert = ON</td></tr> </tbody> </table>	If the component is...	Then set...	Normally open	Invert = OFF	Normally closed	Invert = ON		
If the component is...	Then set...								
Normally open	Invert = OFF								
Normally closed	Invert = ON								

## Field IO inputs

If the connected component is...	Then select Function = ...
Remote outdoor sensor. See addendum book for optional equipment (and "6.4 Connections to the indoor unit" ▶ 11).	External outdoor sensor
Remote indoor sensor. See addendum book for optional equipment (and "6.4 Connections to the indoor unit" ▶ 11).	External indoor sensor
Smart Grid contacts. See "6.4.13 Smart Grid" ▶ 19.	HV/LV Smart Grid Contact 1 HV/LV Smart Grid Contact 2
Preferential kWh rate power supply contact. See "6.4.2 To connect the main power supply" ▶ 14.	HP Tariff Contact
Safety thermostats for main zone and unit. See "6.4.12 To connect the safety thermostat (normally closed contact)" ▶ 19.	Safety Thermostat Main Safety thermostat unit
Smart Grid meter contact. See "6.4.13 Smart Grid" ▶ 19.	Smart Meter Contact







## Field IO outputs
















If the connected component is...	Then select Function = ...
Shut-off valves for main zone and additional zone. See "6.4.5 To connect the shut-off valve" ▶ 17.	Main zone shut-off valve Add. zone shut-off valve
Alarm output. See "6.4.7 To connect the alarm output" ▶ 18.	Alarm
Changeover to external heat source. See "6.4.9 To connect the changeover to external heat source" ▶ 18.	External heat source
Bivalent bypass valve. See "6.4.10 To connect the bivalent bypass valve" ▶ 18.	Bivalent bypass valve
Space cooling/heating operation ON/OFF output for the main zone or additional zone. See "6.4.8 To connect the space cooling/heating ON/OFF output" ▶ 18.	Cooling/Heating mode
Heat pump convectors. See addendum book for optional equipment (and "6.4 Connections to the indoor unit" ▶ 11).	
DHW pump + extra external pumps. See "6.4.6 To connect the domestic hot water pump" ▶ 17.	DHW pump C/H secondary pump C/H pump ext. main C/H pump ext. add.
Booster heater (in case of DHW tank). See addendum book for optional equipment (and "6.4 Connections to the indoor unit" ▶ 11).	Booster heater
3-way valve (in case of DHW tank). See addendum book for optional equipment (and "6.4 Connections to the indoor unit" ▶ 11).	3-Way Valve

## 6.4 Connections to the indoor unit

Item	Description
Power supply (main)	See "6.4.2 To connect the main power supply" ▶ 14.
Power supply (backup heater)	See "6.4.3 To connect the backup heater power supply" ▶ 15.
Normally closed shut-off valve (inlet leak stop)	See "6.4.4 To connect the normally closed shut-off valve (inlet leak stop)" ▶ 17.
Shut-off valve	See "6.4.5 To connect the shut-off valve" ▶ 17.
Domestic hot water pump	See "6.4.6 To connect the domestic hot water pump" ▶ 17.
Alarm output	See "6.4.7 To connect the alarm output" ▶ 18.
Space cooling/heating operation control	See "6.4.8 To connect the space cooling/heating ON/OFF output" ▶ 18.

## 6 Electrical installation

Item	Description
Changeover to external heat source control	See "6.4.9 To connect the changeover to external heat source" ▶ 18].
Electricity meters	See "6.4.11 To connect the electricity meters" ▶ 19].
Safety thermostat	See "6.4.12 To connect the safety thermostat (normally closed contact)" ▶ 19].
Smart Grid	See "6.4.13 Smart Grid" ▶ 19].
WLAN cartridge	See "6.4.14 To connect the WLAN cartridge (delivered as accessory)" ▶ 21].
Room thermostat (wired or wireless)	 See below table.
	 Wires: 0.75 mm <sup>2</sup> Maximum running current: 100 mA
	 For the main zone: <ul style="list-style-type: none"> <li>[1.12] Control</li> <li>[1.13] External room thermostat</li> </ul> For the additional zone: <ul style="list-style-type: none"> <li>[2.12] Control</li> <li>[2.13] External room thermostat</li> </ul>
Heat pump convector	 There are different controllers and setups possible for the heat pump convectors.  Depending on the setup, you also need to implement a relay (field supply, see addendum book for optional equipment).  For more information, see: <ul style="list-style-type: none"> <li>Installation manual of the heat pump convectors</li> <li>Installation manual of the heat pump convector options</li> <li>Addendum book for optional equipment</li> </ul>
	 Wires: 0.75 mm <sup>2</sup> Maximum running current: 100 mA  This is a Field IO output connection. See "6.3 Field IO connections" ▶ 10].
	 [13] Field IO (Cooling/Heating mode)  For the main zone: <ul style="list-style-type: none"> <li>[1.12] Control</li> <li>[1.13] External room thermostat</li> </ul> For the additional zone: <ul style="list-style-type: none"> <li>[2.12] Control</li> <li>[2.13] External room thermostat</li> </ul>

Item	Description
Remote outdoor sensor	 See: <ul style="list-style-type: none"> <li>Installation manual of the remote outdoor sensor</li> <li>Addendum book for optional equipment</li> </ul>
	 Wires: 2×0.75 mm <sup>2</sup>  This is a Field IO input connection. See "6.3 Field IO connections" ▶ 10].
	 [13] Field IO (External outdoor sensor)  [5.22] Ambient sensor
Remote indoor sensor	 See: <ul style="list-style-type: none"> <li>Installation manual of the remote indoor sensor</li> <li>Addendum book for optional equipment</li> </ul>
	 Wires: 2×0.75 mm <sup>2</sup>  This is a Field IO input connection. See "6.3 Field IO connections" ▶ 10].
	 [13] Field IO (External indoor sensor)  [1.33] External thermostat offset
Human Comfort Interface	 See: <ul style="list-style-type: none"> <li>Installation and operation manual of the Human Comfort Interface</li> <li>Addendum book for optional equipment</li> </ul>
	 Wires: 2×(0.75~1.25 mm <sup>2</sup> ) Maximum length: 500 m
	 [1.12] Control [1.38] Room sensor offset
Bizone kit	 See: <ul style="list-style-type: none"> <li>Installation manual of the bizone kit</li> <li>Addendum book for optional equipment</li> </ul>
	 Use the cable delivered with the bizone kit.
	 [3.10] Bizone kit installed
(in case of DHW tank) 3-way valve	 See: <ul style="list-style-type: none"> <li>Installation manual of the 3-way valve</li> <li>Addendum book for optional equipment</li> </ul>
	 Wires: 3×0.75 mm <sup>2</sup> Maximum running current: 100 mA  This is a Field IO output connection. See "6.3 Field IO connections" ▶ 10].
	 [13] Field IO (3-Way Valve) [4] Domestic hot water

Item	Description
(in case of DHW tank) Domestic hot water tank thermistor	<div> <div>See:</div> <ul style="list-style-type: none"> <li>Installation manual of the domestic hot water tank</li> <li>Addendum book for optional equipment</li> </ul> </div> <div> <div>Wires: 2</div> <div>The thermistor and connection wire (12 m) are delivered with the domestic hot water tank.</div> </div> <div> <div>[4] Domestic hot water</div> </div>
(in case of DHW tank) Power supply for booster heater (from indoor unit to thermal protector of booster heater)	<div> <div>See:</div> <ul style="list-style-type: none"> <li>Installation manual of the DHW tank</li> <li>Addendum book for optional equipment</li> </ul> </div> <div> <div>Wires: (2+GND)×2.5 mm<sup>2</sup></div> </div> <div> <div>[4.14] Booster heater</div> </div>
(in case of DHW tank) Power supply for booster heater (from mains to indoor unit)	<div> <div>See:</div> <ul style="list-style-type: none"> <li>Installation manual of the domestic hot water tank</li> <li>Addendum book for optional equipment</li> </ul> </div> <div> <div>Wires: 2+GND</div> <div>Maximum running current: 13 A</div> </div> <div> <div>[4.14] Booster heater</div> </div>



for room thermostat (wired or wireless):


In case of...	See...
Wireless room thermostat	<ul style="list-style-type: none"> <li>Installation manual of the wireless room thermostat</li> <li>Addendum book for optional equipment</li> </ul>
Wired room thermostat without multi-zoning base unit	<ul style="list-style-type: none"> <li>Installation manual of the wired room thermostat</li> <li>Addendum book for optional equipment</li> </ul>
Wired room thermostat with multi-zoning base unit	<ul style="list-style-type: none"> <li>Installation manual of the wired room thermostat (digital or analogue) + multi-zoning base unit</li> <li>Addendum book for optional equipment</li> <li>In this case: <ul style="list-style-type: none"> <li>You need to connect the wired room thermostat (digital or analogue) to the multi-zoning base unit</li> <li>You need to connect the multi-zoning base unit to the outdoor unit</li> <li>For cooling/heating operation, you also need to implement a relay (field supply, see addendum book for optional equipment)</li> </ul> </li> </ul>

### 6.4.1 To connect the electrical wiring to the indoor unit

#### Opening the unit

See "4.2.1 To open the indoor unit" ▶ 5].

#### Cable routing

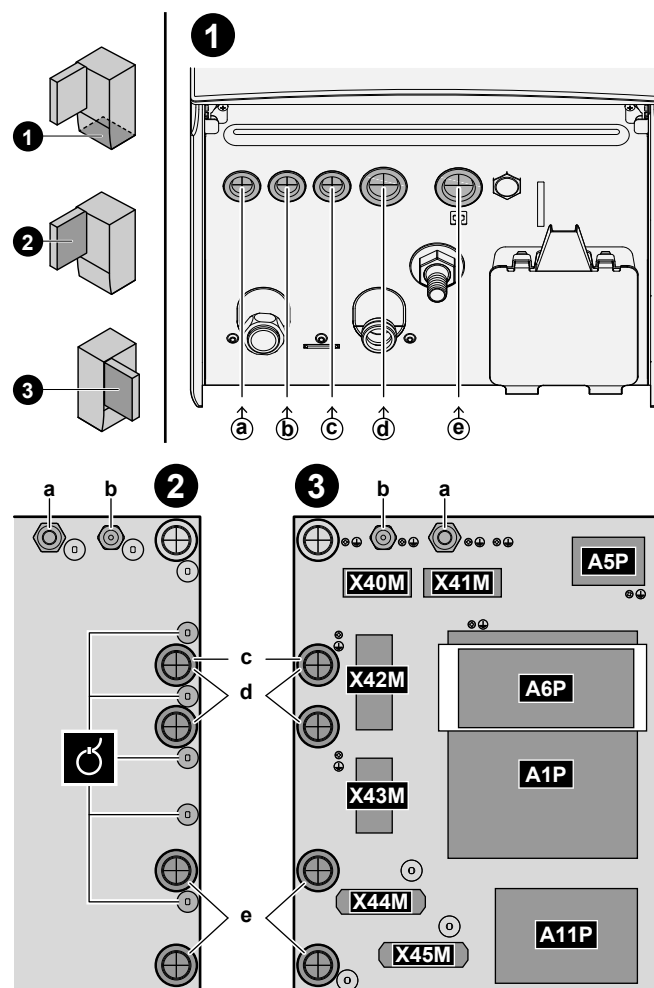

1	Entry into the unit (from the bottom)
2	Entry into the switch box (from the back) + strain relief (cable ties or cable glands)
3	Terminal blocks and PCBs (inside the switch box): <ul style="list-style-type: none"> <li>A1P: Hydro PCB</li> <li>A5P: Power supply PCB</li> <li>A6P: Multistep backup heater PCB</li> <li>A11P: Interface PCB</li> </ul>

#### Cables

#	Cable	Terminal block
a	Backup heater power supply	X41M
b	Interconnection cable (= main power supply)	X40M
c	Normal kWh rate power supply for the indoor unit (in case the outdoor unit is connected to a preferential kWh rate power supply)	X42M

## 6 Electrical installation

#	Cable	Terminal block
d	High voltage options: <ul style="list-style-type: none"> <li>Heat pump convector (option kit)</li> <li>Room thermostat (option kit)</li> <li>Shut-off valve (field supply)</li> <li>Domestic hot water pump + extra external pumps (field supply)</li> <li>Alarm output (field supply)</li> <li>Changeover to external heat source control (field supply)</li> <li>Bivalent bypass pass (field supply)</li> <li>Space heat/cool operation control (field supply)</li> <li>Smart Grid (high voltage contacts) (field supply)</li> <li>3-way valve (in case of DHW tank)</li> <li>Power supply for booster heater (from mains to indoor unit) (in case of DHW tank)</li> <li>Power supply for booster heater and thermal protection (from indoor unit DHW tank) (in case of DHW tank)</li> </ul>	X42M+X43M
e	Low voltage options: <ul style="list-style-type: none"> <li>Preferential power supply contact (field supply)</li> <li>Human Comfort Interface (option kit)</li> <li>Outdoor ambient temperature sensor (option kit)</li> <li>Indoor ambient temperature sensor (option kit)</li> <li>Electricity meters (field supply)</li> <li>Safety thermostat (field supply)</li> <li>Smart Grid (field supply)</li> <li>Domestic hot water tank thermistor (option kit) (in case of DHW tank)</li> </ul>	X44M+X45M



### INFORMATION

When installing field supply or option cables, foresee sufficient cable length. This will make it possible to remove/reposition the switch box and gain access to other components during service.




### CAUTION

Do NOT push or place redundant cable length into the unit.

	<b>b</b> Interconnection cable (= main power supply) (outdoor unit connected to a normal kWh rate power supply)	<ul style="list-style-type: none"> <li>Follow cable route <b>b</b>→ in "6.4.1 To connect the electrical wiring to the indoor unit" [p 13].</li> <li>Wires: (3+GND)×1.5 mm<sup>2</sup></li> </ul>
	—	

**In case the outdoor unit is connected to a preferential kWh rate power supply**

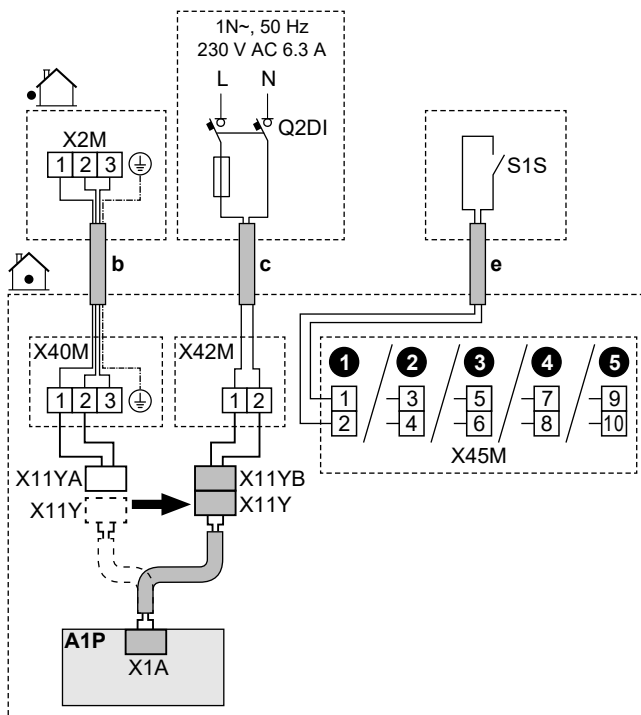


### 6.4.2 To connect the main power supply

This topic describes 2 possible ways to connect the main power supply:

- In case of normal kWh rate power supply
- In case of preferential kWh rate power supply

**In case the outdoor unit is connected to a normal kWh rate power supply**

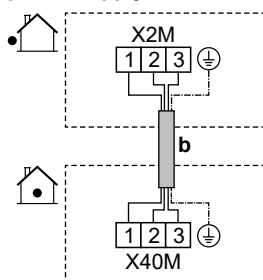



	<b>b</b> Interconnection cable (= main power supply) (outdoor unit connected to a preferential kWh rate power supply)	<ul style="list-style-type: none"> <li>Follow cable route <b>ⓑ</b> in "6.4.1 To connect the electrical wiring to the indoor unit" ▶ 13].</li> <li>Wires: (3+GND)×1.5 mm<sup>2</sup></li> </ul>
	<b>c</b> Normal kWh rate power supply for the indoor unit	<ul style="list-style-type: none"> <li>Follow cable route <b>ⓒ</b> in "6.4.1 To connect the electrical wiring to the indoor unit" ▶ 13].</li> <li>Wires: 2×1.5 mm<sup>2</sup></li> <li>Maximum running current: 6.3 A</li> <li>Q2DI: Earth leakage circuit breaker</li> <li>Recommended field fuse: 16 A</li> </ul>
	<b>e</b> Preferential kWh rate power supply contact (S1S)	<ul style="list-style-type: none"> <li>Follow cable route <b>ⓔ</b> in "6.4.1 To connect the electrical wiring to the indoor unit" ▶ 13].</li> <li>Wires: 2×(0.75~1.25 mm<sup>2</sup>)</li> <li>Maximum length: 50 m.</li> <li>Preferential kWh rate power supply contact: 16 V DC detection (voltage supplied by PCB). The voltage-free contact shall ensure the minimum applicable load of 15 V DC, 10 mA.</li> <li>This is a Field IO input connection. See "6.3 Field IO connections" ▶ 10].</li> </ul>
	<b>X11</b>	<ul style="list-style-type: none"> <li>Disconnect X11Y from X11YA.</li> </ul>
	<b>Y</b>	<ul style="list-style-type: none"> <li>Connect X11Y to X11YB.</li> </ul>
		<ul style="list-style-type: none"> <li>[13] Field IO (HP Tariff Contact)</li> <li>[5.25.1] Operation mode (Heat pump tariff)</li> </ul>

### 6.4.3 To connect the backup heater power supply



#### WARNING

The backup heater **MUST** have a dedicated power supply and **MUST** be protected by the safety devices required by the applicable legislation.



#### CAUTION

To guarantee the unit is completely earthed, **ALWAYS** connect the backup heater power supply and the earth cable.



#### CAUTION

If the indoor unit has a tank with a built-in electrical booster heater, use a dedicated power circuit for the backup heater and booster heater. **NEVER** use a power circuit shared by another appliance. This power circuit **MUST** be protected with the required safety devices according to the applicable legislation.



#### NOTICE

If the backup heater is not powered, then:


- Space heating and tank heat-up is not allowed.
- Error AA-01 (Backup heater overheated or BUH power cable not connected) is generated.




#### NOTICE

The output of the backup heater depends on the wiring and the selection in the user interface. Make sure that the power supply matches the selection in the user interface.


### Possible layouts in case of 9W models (9 kW multistep backup heater)

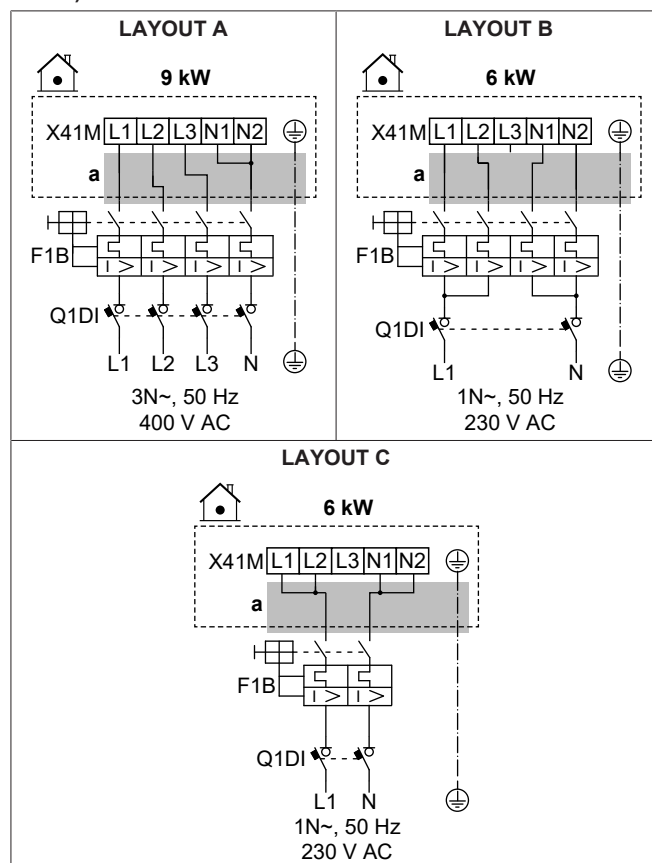

### Possible layouts in case of 4V models (4.5 kW multistep backup heater)

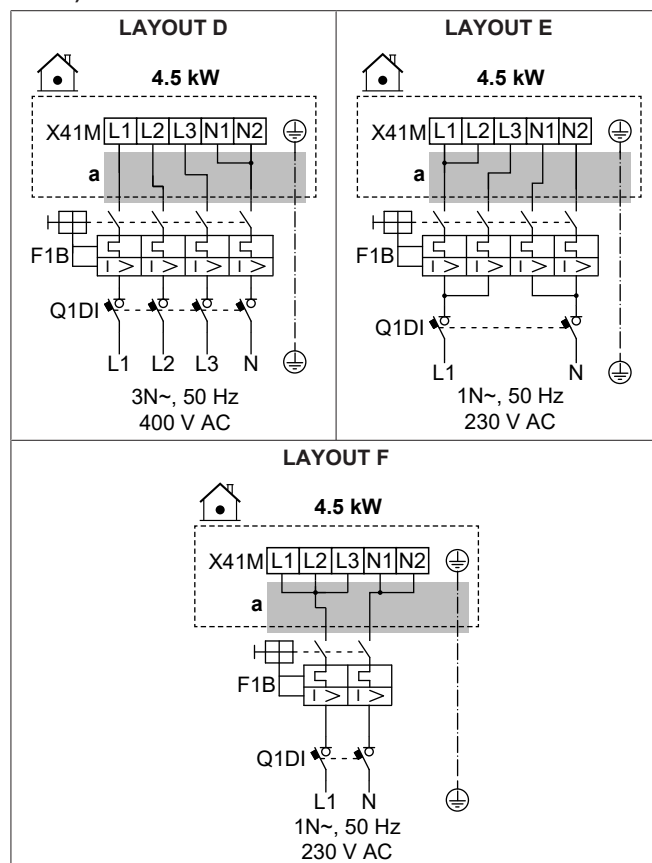

## 6 Electrical installation

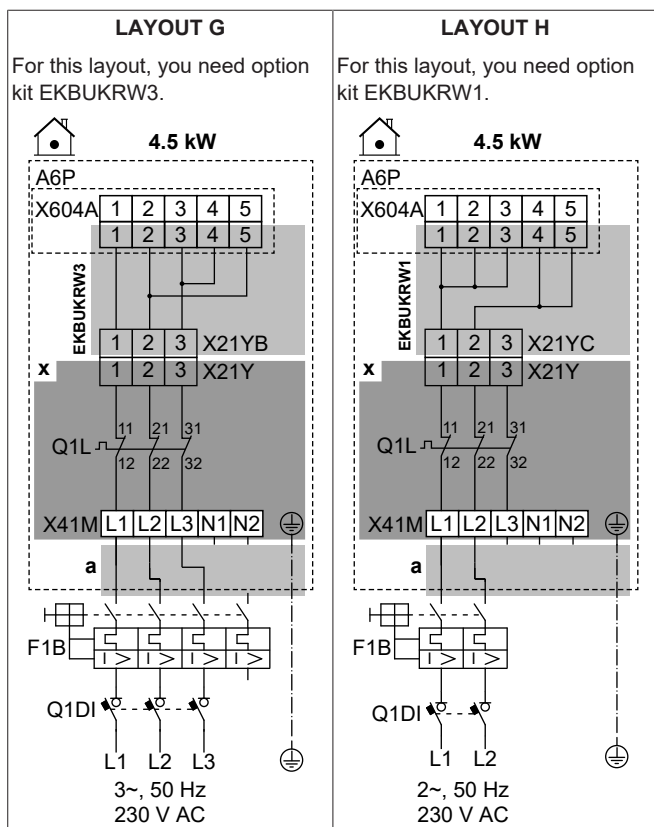


	<b>a</b>	Follow cable route  in "6.4.1 To connect the electrical wiring to the indoor unit"  13].
<b>x</b>		Factory-mounted
EKBUKRW1		Option kit: Backup heater wire harness for a 2-phase 230 V without N power supply. To be used instead of the factory-mounted wire harness (with connector X21YA).
EKBUKRW3		Option kit: Backup heater wire harness for a 3-phase 230 V without N power supply. To be used instead of the factory-mounted wire harness (with connector X21YA).
F1B		Overcurrent fuse (field supply)
Q1DI		Earth leakage circuit breaker (field supply)
Q1L		Thermal protector backup heater
		[5.5] Backup heater

### Specifications of wiring components

Component		LAYOUT							
		A	B	C	D	E	F	G	H
Power supply:									
	Voltage	390-410 V	220-240 V		390-410 V	220-240 V			
	Power	9 kW	6 kW		4.5 kW				
	Rated current	13 A	13 A	26.1	6.5 A	13 A	19.6	17 A <sup>(a)</sup>	19.6 A <sup>(a)</sup>
	Phase	3N~	1N~		3N~	1N~		3~	2~
	Frequency	50 Hz							
Wire size		MUST comply with national wiring regulation							
		Wire size based on the current, but minimum 2.5 mm²		Min. 6 mm²	Wire size based on the current, but minimum 2.5 mm²		Min. 4 mm²	Wire size based on the current, but minimum 2.5 mm²	Min. 4 mm²
		5-core cable		3-core cable	5-core cable		3-core cable	4-core cable	3-core cable
		3L+N+GND	2L+2N+GND	L+N+GND	3L+N+GND	2L+2N+GND	L+N+GND	3L+GND	2L+GND
Recommended overcurrent fuse		4-pole 16A		2-pole 32A	4-pole 10A	4-pole 16A	2-pole 25A	4-pole 20A	2-pole 25A
Earth leakage circuit breaker		MUST comply with national wiring regulation							

<sup>(a)</sup> Electrical equipment complying with EN/IEC 61000-3-12 (European/International Technical Standard setting the limits for harmonic currents produced by equipment connected to public low-voltage systems with input current >16 A and ≤75 A per phase).

### 6.4.4 To connect the normally closed shut-off valve (inlet leak stop)

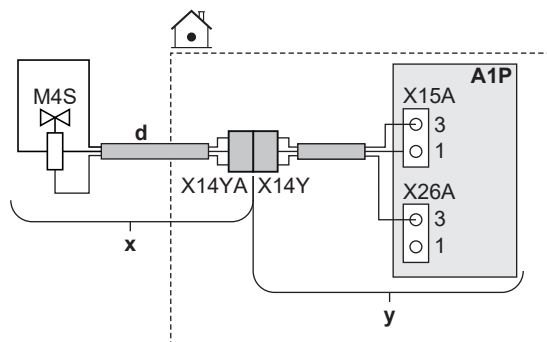

	<b>x</b>	Delivered as accessory
	<b>y</b>	Factory-mounted
	<b>d</b>	Follow cable route  in "6.4.1 To connect the electrical wiring to the indoor unit"  13].
	M4S	Normally closed shut-off valve (inlet leak stop)
	X14Y	Connect X14YA to X14Y.
	—	

### 6.4.5 To connect the shut-off valve



#### INFORMATION


**Shut-off valve usage example.** In case of one LWT zone, and a combination of underfloor heating and heat pump convectors, install a shut-off valve before the underfloor heating to prevent condensation on the floor during cooling operation.




#### NOTICE

Wiring is different for a NC (normally closed) valve and a NO (normally open) valve.

#### In case of normally closed shut-off valves

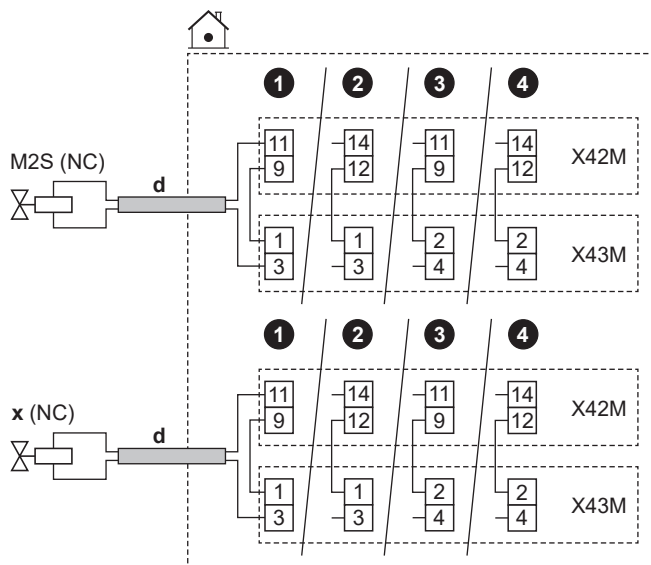


#### In case of normally open shut-off valves

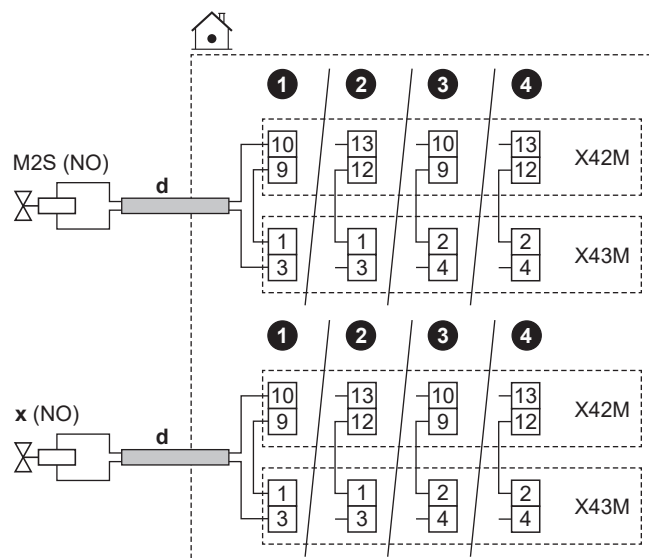



	<b>d</b>	<ul style="list-style-type: none"> <li>Follow cable route  in "6.4.1 To connect the electrical wiring to the indoor unit"  13].</li> <li>Wires: (2 + bridge)×0.75 mm<sup>2</sup></li> <li>This is a Field IO output connection. See "6.3 Field IO connections"  10].</li> </ul>
	M2S	Shut-off valve for the main zone
	<b>x</b>	Shut-off valve for the additional zone
	NC	Normally closed
	NO	Normally open
		<ul style="list-style-type: none"> <li>[13] Field IO: <ul style="list-style-type: none"> <li>Main zone shut-off valve</li> <li>Add. zone shut-off valve</li> </ul> </li> </ul>

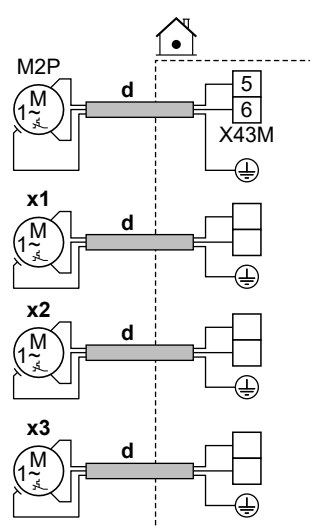
### 6.4.6 To connect the domestic hot water pump






## 6 Electrical installation


	d	<ul style="list-style-type: none"><li>Follow cable route ①➔ in "6.4.1 To connect the electrical wiring to the indoor unit" [p 13].</li><li>Wires: (2+GND)×0.75 mm²</li><li>This is a Field IO output connection. See "6.3 Field IO connections" [p 10].</li></ul>	
	M2P	DHW pump: <ul style="list-style-type: none"><li>Maximum load: 2 A (inrush), 230 V AC, 1 A (continuous)</li></ul>	
	x1	Extra external pumps	Use the terminal pins of any of the other Field IO outputs. However, you must also check if you need to install a relay in-between.
	x2		
	x3		
 MMI	<ul style="list-style-type: none"><li>[13] Field IO<ul style="list-style-type: none"><li>DHW pump: Pump used for instant hot water and/or disinfection operation. In this case you must also specify the functionality in setting [4.13] DHW pump:<ul style="list-style-type: none"><li>* Instant hot water</li><li>* Disinfection</li><li>* Both</li></ul></li><li>C/H secondary pump: Pump runs when there is a request from the main or additional zone.</li><li>C/H pump ext. main: Pump runs when there is a request from the main zone.</li><li>C/H pump ext. add.: Pump runs when there is a request from the additional zone.</li></ul></li><li>[4.6] Schedule</li></ul>		

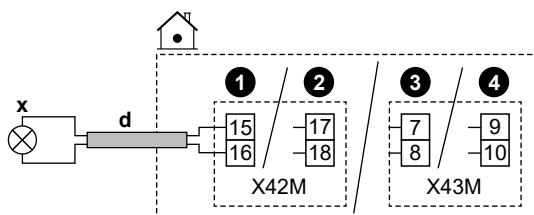

### 6.4.7 To connect the alarm output



	<b>d</b>	<ul style="list-style-type: none"><li>Follow cable route  in "6.4.1 To connect the electrical wiring to the indoor unit" ▶ 13].</li><li>Wires: 2×0.75 mm<sup>2</sup></li><li>This is a Field IO output connection. See "6.3 Field IO connections" ▶ 10].</li></ul>
	<b>x</b>	Alarm output: <ul style="list-style-type: none"><li>Maximum load: 0.3 A, 250 V AC</li></ul>
		<ul style="list-style-type: none"><li>[13] Field IO (Alarm)</li></ul>
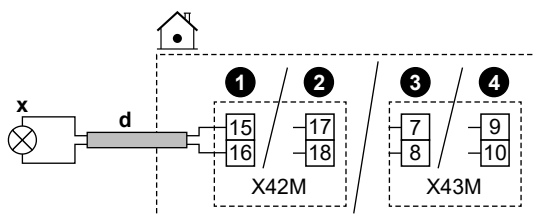
### 6.4.8 To connect the space cooling/heating ON/OFF output



	<b>d</b>	<ul style="list-style-type: none"><li>Follow cable route ①➔ in "6.4.1 To connect the electrical wiring to the indoor unit" ▶ 13].</li><li>Wires: 2×0.75 mm<sup>2</sup></li><li>This is a Field IO output connection. See "6.3 Field IO connections" ▶ 10].</li></ul>
	<b>x</b>	<p>Space cooling/heating ON/OFF output:</p> <ul style="list-style-type: none"><li>Maximum load: 0.3 A, 250 V AC</li></ul>
	▪ [13] Field IO (Cooling/Heating mode)	


### 6.4.9 To connect the changeover to external heat source






#### INFORMATION

Bivalent is only possible in case of 1 leaving water temperature zone with:

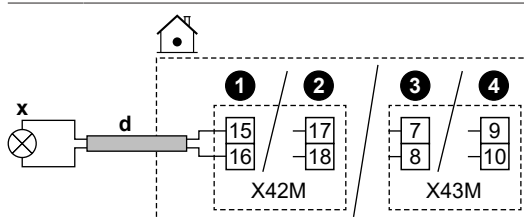- room thermostat control, OR
- external room thermostat control.



	<b>d</b>	<ul style="list-style-type: none"><li>Follow cable route  in "6.4.1 To connect the electrical wiring to the indoor unit" ▶ 13].</li><li>Wires: 2×0.75 mm<sup>2</sup></li><li>This is a Field IO output connection. See "6.3 Field IO connections" ▶ 10].</li></ul>
	<b>x</b>	<p>Changeover to external heat source:</p> <ul style="list-style-type: none"><li>Maximum load: 0.3 A, 250 V AC</li><li>Minimum load: 20 mA, 5 V DC</li></ul>
		<ul style="list-style-type: none"><li>[13] Field IO (External heat source)</li><li>[5.14] Bivalent</li><li>[5.14.7] Bivalent (ON)</li></ul>


### 6.4.10 To connect the bivalent bypass valve




#### NOTICE

Wiring is different for a NC (normally closed) valve and a NO (normally open) valve.

#### In case of normally closed bivalent bypass valves

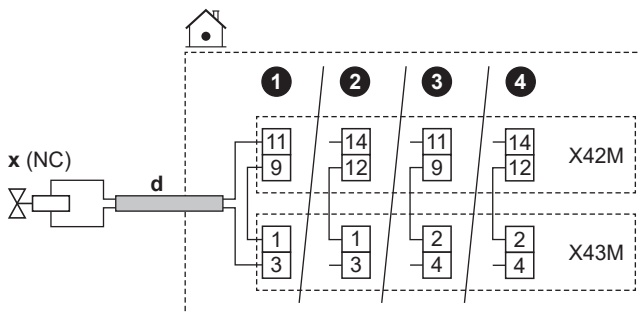

## In case of normally open bivalent bypass valves

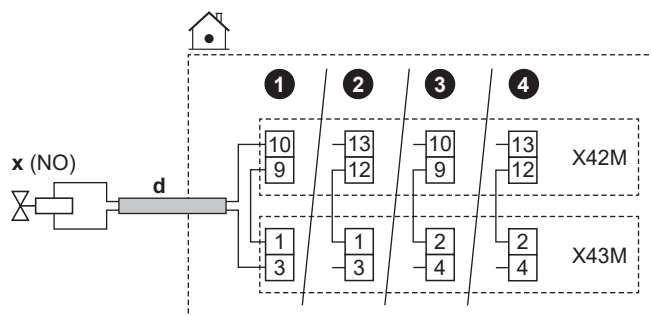


	<b>d</b>	<ul style="list-style-type: none"> <li>Follow cable route ①➔ in "6.4.1 To connect the electrical wiring to the indoor unit" ▶ 13].</li> <li>Wires: (2 + bridge)×0.75 mm<sup>2</sup></li> <li>This is a Field IO output connection. See "6.3 Field IO connections" ▶ 10].</li> </ul>
	<b>x</b>	Bivalent bypass valve (activated when bivalent is active): <ul style="list-style-type: none"> <li>Maximum running current: 0.3 A</li> <li>230 V AC supplied by PCB</li> </ul>
	<b>NC</b>	Normally closed
	<b>NO</b>	Normally open
		<ul style="list-style-type: none"> <li>[13] Field IO (Bivalent bypass valve)</li> <li>[5.14] Bivalent</li> <li>[5.14.7] Bivalent (ON)</li> </ul>

## 6.4.11 To connect the electricity meters



### INFORMATION

This functionality is NOT available in early versions of the user interface software.

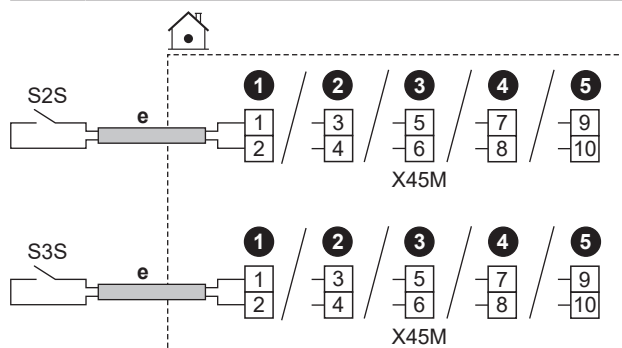

	<b>e</b>	<ul style="list-style-type: none"> <li>Follow cable route ②➔ in "6.4.1 To connect the electrical wiring to the indoor unit" ▶ 13].</li> <li>Wires: 2 (per meter)×0.75 mm<sup>2</sup></li> <li>This is a Field IO input connection. See "6.3 Field IO connections" ▶ 10].</li> </ul>
	<b>S2S</b>	Electricity meter 1
	<b>S3S</b>	Electricity meter 2
		12 V DC pulse detection (voltage supplied by PCB)

## 6.4.12 To connect the safety thermostat (normally closed contact)

You can connect 2 safety thermostats (one for the unit and one for the main zone). They prevent that too high temperatures go to the respective zones.




### NOTICE

Make sure to select and install the safety thermostat according to the applicable legislation.

In any case, to prevent unnecessary tripping of the safety thermostat, we recommend the following:

- The safety thermostat is automatically resettable.
- The safety thermostat has a maximum temperature variation rate of 2°C/min.
- There is a minimum distance of 2 m between the safety thermostat and the motorized 3-way valve delivered with the domestic hot water tank.

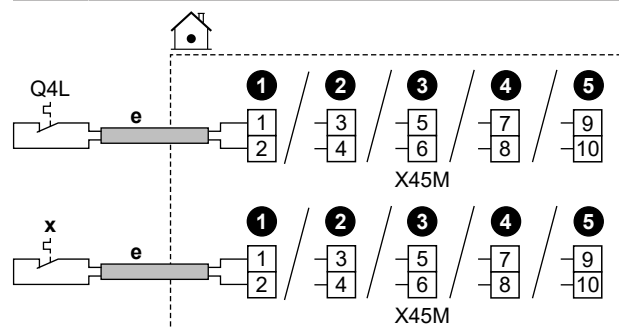

	<b>e</b>	<ul style="list-style-type: none"> <li>Follow cable route ③➔ in "6.4.1 To connect the electrical wiring to the indoor unit" ▶ 13].</li> <li>Wires: 2×0.75 mm<sup>2</sup></li> <li>Maximum length: 50 m</li> <li>This is a Field IO input connection. See "6.3 Field IO connections" ▶ 10].</li> </ul>
	<b>Q4L</b>	Safety thermostat contact for the main zone
	<b>x</b>	Safety thermostat contact for the unit
		16 V DC detection (voltage supplied by PCB). The voltage-free contact shall ensure the minimum applicable load of 15 V DC, 10 mA.
		<ul style="list-style-type: none"> <li>[13] Field IO:</li> <li>Safety Thermostat Main</li> <li>Safety thermostat unit</li> </ul>

## 6.4.13 Smart Grid



### INFORMATION


The Smart Grid photovoltaic power pulse meter (S4S) functionality is NOT available in early versions of the user interface software.

This topic describes different ways to connect the indoor unit to a Smart Grid:


Smart Grid contacts:	The 2 incoming Smart Grid contacts can activate the following Smart Grid modes:		
<ul style="list-style-type: none"> <li>In case of low voltage Smart Grid contacts.</li> <li>In case of high voltage Smart Grid contacts. This requires the installation of <b>2 relays</b> from the Smart Grid relay kit (EKRELSG).</li> </ul>	<b>1</b>	<b>2</b>	<b>Operation mode</b>
	0	0	Free running
	0	1	Forced off
	1	0	Recommended on
	1	1	Forced on
Smart Grid meter:	If the Smart Grid meter is active, only the heat pump is allowed to run with the selected power limit. However, when the unit runs protective functions, additional heat sources could also be used (but still respecting the power limit).		
<ul style="list-style-type: none"> <li>In case of low voltage Smart Grid meter.</li> <li>In case of high voltage Smart Grid meter. This requires the installation of <b>1 relay</b> from the Smart Grid relay kit (EKRELSG).</li> </ul>			

## 6 Electrical installation


The related settings in case of **Smart Grid contacts** are as follows:



	▪ [13] Field IO:
	▪ HV/LV Smart Grid Contact 1
	▪ HV/LV Smart Grid Contact 2
	▪ [5.25] Demand response
	▪ [5.25.1] Operation mode (Smart grid ready contacts)

The related settings in case of **Smart Grid meter** are as follows:

	▪ [13] Field IO (Smart Meter Contact)
	▪ [5.25.1] Operation mode (Smart Meter Contact)
	▪ [5.30] Smart meter limit


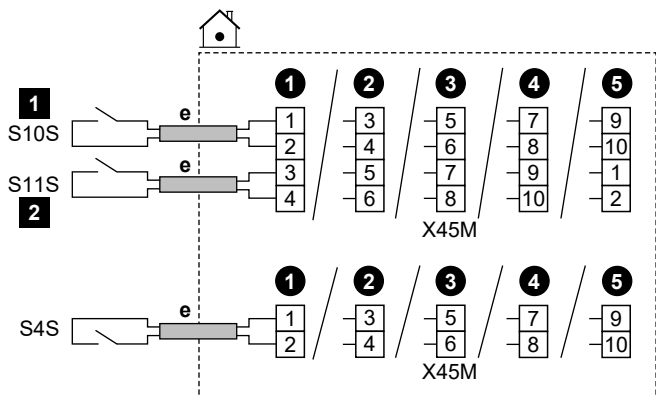
### Connections in case of low voltage Smart Grid contacts





	e	<ul style="list-style-type: none"> <li>Follow cable route  in "6.4.1 To connect the electrical wiring to the indoor unit" [p 13].</li> <li>Wires: 0.5 mm<sup>2</sup></li> <li>This is a Field IO input connection. See "6.3 Field IO connections" [p 10].</li> </ul>
	S4S	Smart Grid photovoltaic power pulse meter
	S10S / <b>1</b>	Low voltage Smart Grid contact 1
	S11S / <b>2</b>	Low voltage Smart Grid contact 2


### Connections in case of high voltage Smart Grid contacts

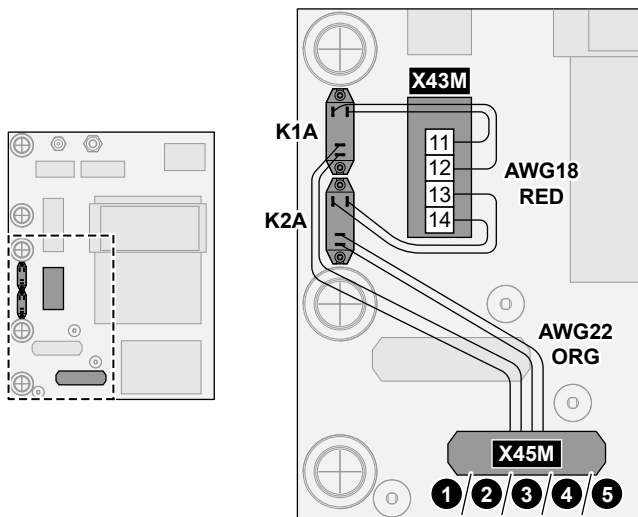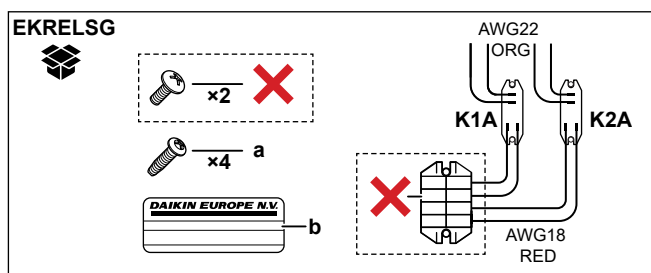1 Install 2 relays from the Smart Grid relay kit (EKRELSG) as follows:




	a	Screws for K1A and K2A
	b	Sticker to put on the high voltage wires
	AWG22 ORG	Wires (AWG22 orange) coming from the contact sides of the relays; to be connected to X45M
	AWG18 RED	Wires (AWG18 red) coming from the coil sides of the relays; to be connected to X42M
	K1A, K2A	Relays
		NOT needed


2 Connect as follows:

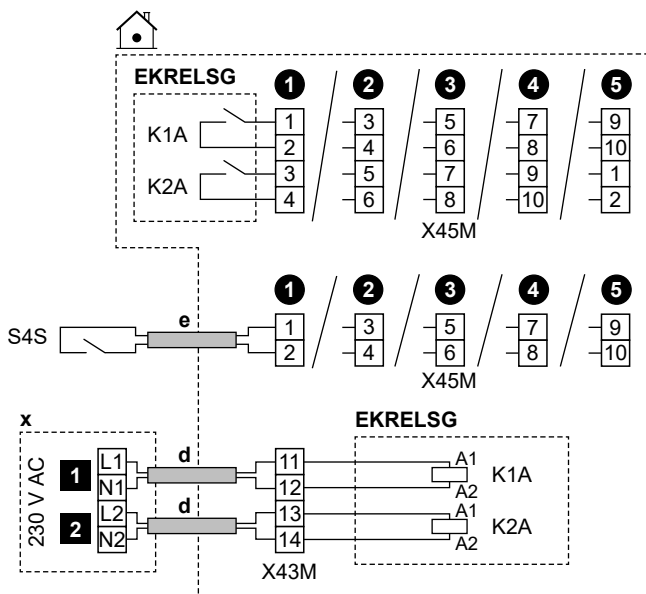




	<b>d</b>	<ul style="list-style-type: none"> <li>Follow cable route ④ in "6.4.1 To connect the electrical wiring to the indoor unit" [13].</li> <li>Wires: 1 mm<sup>2</sup></li> </ul>
	<b>e</b>	<ul style="list-style-type: none"> <li>Follow cable route ⑤ in "6.4.1 To connect the electrical wiring to the indoor unit" [13].</li> <li>Wires: 0.5 mm<sup>2</sup></li> </ul>
	<b>x</b>	230 V AC control device
	EKRELSG	Smart Grid relay kit This is a Field IO input connection. See "6.3 Field IO connections" [10].
	S4S	Smart Grid photovoltaic power pulse meter This is a Field IO input connection. See "6.3 Field IO connections" [10].
	<b>1</b>	High voltage Smart Grid contact 1
	<b>2</b>	High voltage Smart Grid contact 2


## Connections in case of low voltage Smart Grid meter

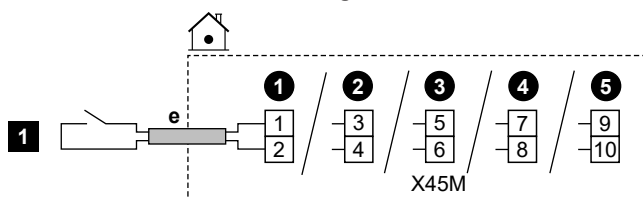


	<b>e</b>	<ul style="list-style-type: none"> <li>Follow cable route ⑤ in "6.4.1 To connect the electrical wiring to the indoor unit" [13].</li> <li>Wires: 0.5 mm<sup>2</sup></li> <li>This is a Field IO input connection. See "6.3 Field IO connections" [10].</li> </ul>
	<b>1</b>	Low voltage Smart Grid meter


## Connections in case of high voltage Smart Grid meter

- 1 Install 1 relay (K1A) from the Smart Grid relay kit (EKRELSG). (see above: Connections in case of high voltage Smart Grid contacts).
- 2 Connect as follows:

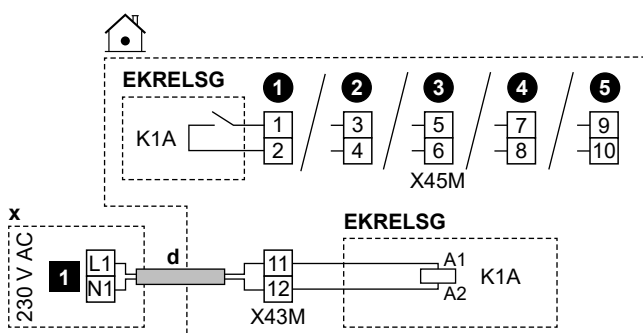


	<b>d</b>	<ul style="list-style-type: none"> <li>Follow cable route ④ in "6.4.1 To connect the electrical wiring to the indoor unit" [13].</li> <li>Wires: 1 mm<sup>2</sup></li> </ul>
	<b>x</b>	230 V AC control device
	EKRELSG	Smart Grid relay kit This is a Field IO input connection. See "6.3 Field IO connections" [10].
	<b>1</b>	High voltage Smart Grid meter

## 6.4.14 To connect the WLAN cartridge (delivered as accessory)

	[8.3] Wireless gateway
---	------------------------

- 1 Insert the WLAN cartridge into the cartridge slot on the user interface of the indoor unit.

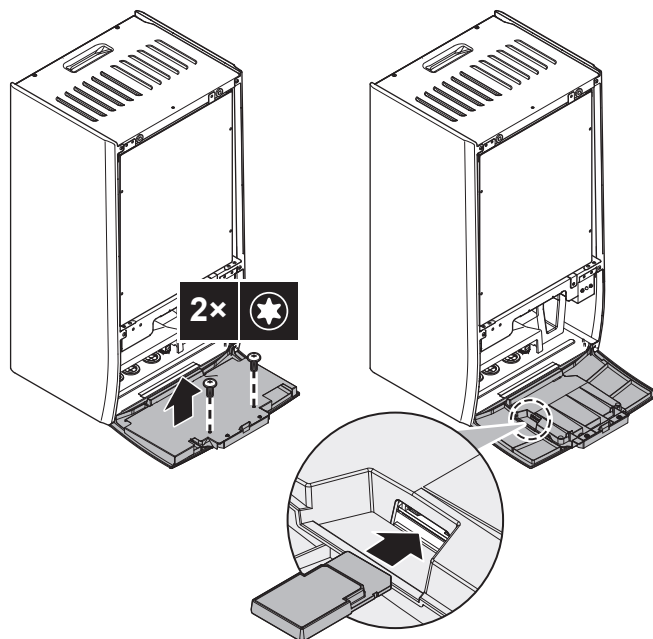



## 7 Configuration

This chapter explains only basic configuration done via the configuration wizard. For more detailed explanation and background information, see the configuration reference guide.

## User mode vs. Installer mode

On the home screen, and most other screens where applicable, you can toggle between user mode and installer mode.

	User mode
	Installer mode. Pin code: <b>5678</b>

## Menu structure vs. Overview field settings

You can access the installer settings using two different methods. However, NOT all settings are accessible via both methods.

Via the menu structure (with breadcrumbs):

- 1 From the home screen, swipe left or use the navigation buttons < ▢ ◯ >.
- 2 Go to any of the menus:


[1] Main zone	[8] Connectivity
[2] Additional zone	[9] Energy
[3] Space heating/cooling	[10] Configuration wizard
[4] Domestic hot water	[11] Malfunctioning
[5] Settings	[12] Touch
[6] Information	[13] Field IO
[7] Maintenance mode	

Via the overview of the field settings:

- 1 Go to [5.7]: Settings > Overview field settings.

## 7 Configuration

- Go to the wanted field setting. Where applicable, the field setting codes are described in the configuration reference guide. **Example:** Go to **005** for the water pipe freeze prevention function.
- Select the wanted value.

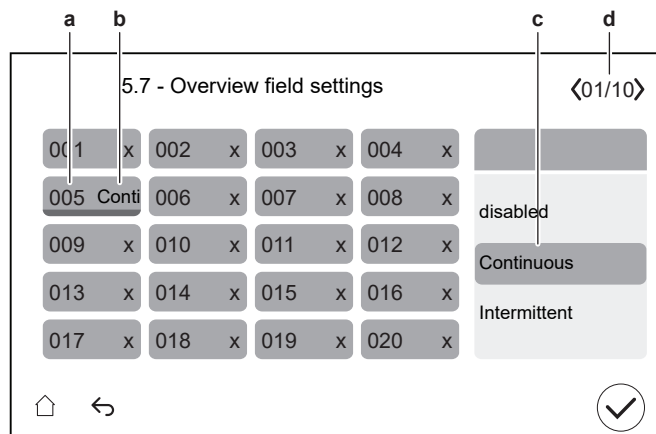

- a Field setting code
- b Selected value
- c To select the wanted value
- d To browse through the different pages


### 7.1 Configuration wizard

After first power ON of the system, the user interface starts a configuration wizard. Use this wizard to set the most important initial settings for the unit to run properly.

- If needed, you can restart the configuration wizard via the menu structure: [3.10] Configuration wizard.
- If needed, you can afterwards configure more settings via the menu structure.

#### Configuration wizard – Overview

Depending on your unit type and the selected settings, some steps will not be visible.

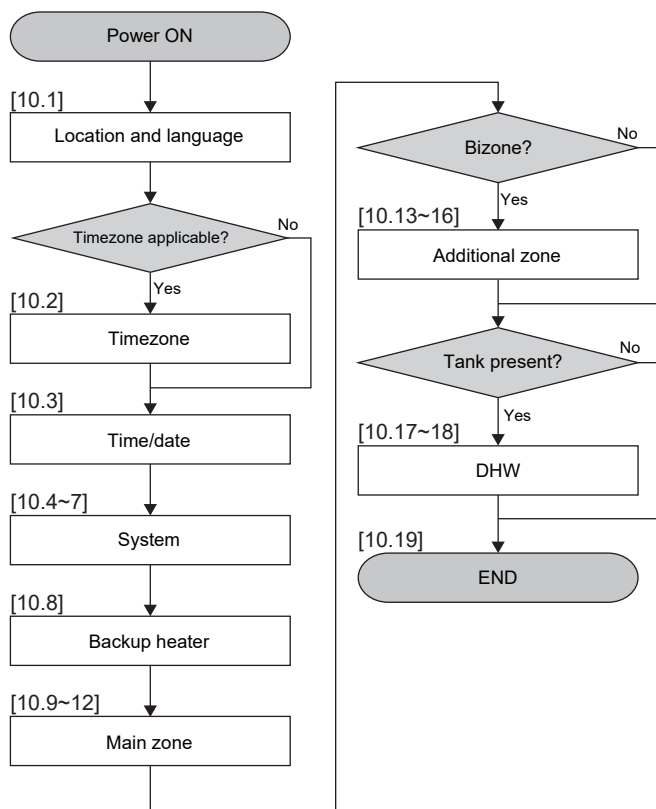

After you completed all steps in the wizard, the user interface will show an error message instructing to enter the Digital Key (i.e. perform the unlocking procedure). See "8.2.1 To unlock the outdoor unit (compressor)" ▶ 29].



#### [10.1] Location and language

Set:

- Country (this also defines the timezone if the selected country only has one timezone)
- Language

#### [10.2] Timezone

**Restriction:** This screen is only shown when there are multiple time zones within a country.

Set Timezone.

#### [10.3] Time/date

Set:

- Date
- Clock format (24 hours or AM/PM)
- Time
- Daylight savings time (ON/OFF)

#### [10.4] System 1/4


Set:

- Number of zones
- Bivalent
- DHW Tank
- DHW Tank type

#### Number of zones

The system can supply leaving water to up to 2 water temperature zones. During configuration, the number of water zones must be set.


- Single zone  
Only one leaving water temperature zone.

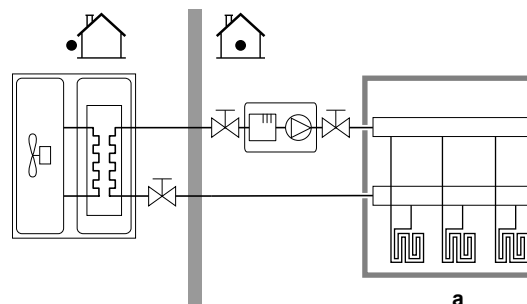

a Main LWT zone

## Dual zone

Two leaving water temperature zones. In heating, the main leaving water temperature zone consists of the lowest temperature heat emitters and a mixing station to achieve the desired leaving water temperature.

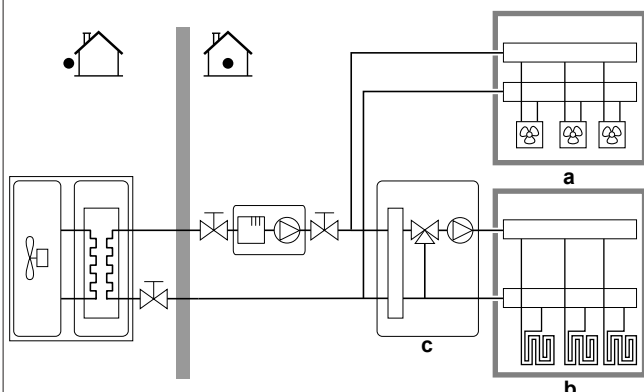

**a** Additional LWT zone: Highest temperature

**b** Main LWT zone: Lowest temperature

**c** Mixing station



### INFORMATION

**Mixing station.** If your system layout contains 2 LWT zones, you need to install a mixing station in front of the main LWT zone. However, other dual zone applications with shut-off valves are also possible. For more information, see the application guidelines in the installer reference guide.



### NOTICE

NOT configuring the system in the following way can cause damage to the heat emitters. If there are 2 zones, it is important that in heating:

- the zone with the lowest water temperature is configured as the main zone, and
- the zone with the highest water temperature is configured as the additional zone.



### NOTICE

If there are 2 zones and the emitter types are wrongly configured, water of high temperature can be sent towards a low temperature emitter (underfloor heating). To avoid this:

- Install an aquastat/thermostatic valve to avoid too high temperatures towards a low temperature emitter.
- Make sure you set the emitter types for the main zone and for the additional zone correctly in accordance with the connected emitter.

## Bivalent

Must match your system layout. Is an external heat source (bivalent) installed?

For more information, see the application guidelines in the installer reference guide, and the settings in the configuration reference guide ([5.14] Bivalent).

ON (installed) / OFF (not installed)

## DHW Tank

Must match your system layout. DHW tank installed?

ON (installed) / OFF (not installed)

## DHW Tank type

Must match your system layout. DHW tank type.

You can set the maximum temperature for the tank with setting [4.11].

- EKHWS/E 1501 (EKHWS/E 150 l)**  
Tank with booster heater installed at side of the tank with a volume of 150 l. Maximum temperature 60°C.
- EKHWS/E 1801 (EKHWS/E 180 l)**  
Tank with booster heater installed at side of the tank with a volume of 180 l. Maximum temperature 60°C.
- EKHWS/E 2001 (EKHWS/E 200 l)**  
Tank with booster heater installed at side of the tank with a volume of 200 l. Maximum temperature 75°C.
- EKHWS/E 2501 (EKHWS/E 250 l)**  
Tank with booster heater installed at side of the tank with a volume of 250 l. Maximum temperature 75°C.
- EKHWS/E 3001 (EKHWS/E 300 l)**  
Tank with booster heater installed at side of the tank with a volume of 300 l. Maximum temperature 75°C.
- EKHWP/HYC with BSH (EKHWP/HYC with BSH)**  
Tank with optional booster heater installed at top. Maximum temperature 80°C.
- 3rd party, big coil**  
Third-party tank with a coil size larger than 1.05 m<sup>2</sup>. Maximum temperature 60°C.
- 3rd party, small coil**  
Third-party tank with a coil size larger than 1.80 m<sup>2</sup>. Maximum temperature 75°C.

## [10.5] System 2/4

Not applicable.

## [10.6] System 3/4

Not applicable.

## [10.7] System 4/4

Set Emergency selection.

## Emergency selection

When the heat pump fails to operate, the backup heater can serve as an emergency heater. It then takes over the heat load either automatically or by manual interaction.

To keep energy consumption low, we recommend to set Emergency selection to auto SH reduced/DHW off if the house is unattended for longer periods.

In case of 0, 2, 3, 4: To manually recover via the user interface, go to the Malfunctioning main menu screen and confirm whether the backup heater can take over the heat load or not.

- 0: Manual:** When a heat pump failure occurs, the domestic hot water heating and space heating stops.
- 1: Automatic:** When a heat pump failure occurs, the backup heater automatically takes over the domestic hot water production and space heating.
- 2: auto SH reduced/DHW on:** When a heat pump failure occurs, space heating is reduced but domestic hot water is still available.
- 3: auto SH reduced/DHW off:** When a heat pump failure occurs, space heating is reduced and domestic hot water is NOT available.
- 4: auto SH normal/DHW off:** When a heat pump failure occurs, space heating operates as normally but domestic hot water is NOT available.

## 7 Configuration



### INFORMATION

If a heat pump failure occurs and Emergency selection is NOT set to Automatic (setting 1), the following functions will remain active even if the user does NOT confirm emergency operation:

- Room frost protection
- Underfloor heating screed dryout
- Water pipe freeze prevention
- Disinfection

### [10.8] Backup heater

Set:

- Grid configuration:
  - Single phase
  - Three phase 3x400V+N
  - Three phase 3x230V
- Maximum capacity:
  - Slider limited depending on grid configuration and fuse.
- Fuse >10A (ON/OFF)

The maximum capacity suggested by the user interface is based on the selected grid configuration and, if applicable, the size of the fuse. An installer can however lower the maximum capacity of the backup heater using the scroll list. The table below gives an overview of the dynamic maximums of the scroll list.

Grid configuration	Fuse >10A	Maximum capacity	
		4V models	9W models
Single phase	(greyed out)	Limited to 4.5 kW <sup>(a)</sup>	Limited to 6 kW <sup>(a)</sup>
Three phase 3x230V	OFF	Limited to 4.5 kW <sup>(a)</sup>	Limited to 4 kW <sup>(a)</sup>
	ON		Limited to 6 kW <sup>(a)</sup>
Three phase 3x400V+N	(greyed out)		Limited to 9 kW <sup>(a)</sup>

<sup>(a)</sup> But not lower than 2 kW.

### [10.9] Main zone 1/4

Set:

- Emitter type
- Control

#### Emitter type

Must match your system layout. Emitter type of the main zone.

- Under floor heating
- Heat pump convector
- Radiator

The setting Emitter type influences the target delta T in heating as follows:

Emitter type Main zone	Target delta T in heating
Under floor heating	3~10°C
Heat pump convector	3~10°C
Radiator	10~15°C

Heating up or cooling down the main zone can take longer. This depends on:

- The water volume of the system
- The heater emitter type of the main zone



### NOTICE

**Average emitter temperature** = Leaving water temperature – (Delta T)/2

This means that for a same leaving water temperature setpoint, the average emitter temperature of radiators is lower than that of underfloor heating because of a bigger delta T.

Example radiators: 40–10/2=**35°C**

Example underfloor heating: 40–5/2=**37.5°C**

To compensate, you can increase the weather-dependent curve desired temperatures.



### INFORMATION

The maximum leaving water temperature is decided based on setting [3.12] Overheating setpoint. This limit defines the maximum leaving water **in the system**. Depending on the value of this setting, the maximum LWT setpoint will also be reduced by 5°C to allow stable control towards the setpoint.

The maximum leaving water temperature **in the main zone** is decided based on setting [1.19] Overheating water circuit. This limit defines the maximum leaving water **in the main zone**. Depending on the value of this setting, the maximum LWT setpoint will also be reduced by 5°C to allow stable control towards the setpoint.

### Control

Defines the unit control method for the main zone.

- Leaving water: Unit operation is decided based on the leaving water temperature regardless the actual room temperature and/or heating or cooling demand of the room.
- External room thermostat: Unit operation is decided by the external thermostat or equivalent (e.g. heat pump convector).
- Room thermostat: Unit operation is decided based on the ambient temperature of the dedicated Human Comfort Interface (BRC1HH used as room thermostat).

In case of external room thermostat control, you must also set the external room thermostat type with setting [1.13]:

Must match your system layout. External room thermostat type for the main zone.

- Single contact: The used external room thermostat can only send a thermo ON/OFF condition. There is no separation between heating or cooling demand.  
Select this value in case of a connection to the heat pump convector (FWX\*).
- Dual contact: The used external room thermostat can send a separate heating/cooling thermo ON/OFF condition.  
Select this value in case of connection to multi-zoning wired controls, wired room thermostats (EKRTWA) or wireless room thermostats (EKTRT1, EKTRTB)



### NOTICE

If an external room thermostat is used, the external room thermostat will control the room frost protection.

### [10.10] Main zone 2/4

Set:

- Heating setpoint mode:
  - Fixed
  - Weather dependent
- Cooling setpoint mode:
  - Fixed
  - Weather dependent

**[10.11] Main zone 3/4 (Heating WD curve)**

Defines the weather-dependent curve used to determine the leaving water temperature of the main zone in space heating operation.

**Restriction:** The curve is only used when Heating setpoint mode (main zone) = Weather dependent.

See "7.2 Weather-dependent curve" ▶ 26].

**[10.12] Main zone 4/4 (Cooling WD curve)**

Defines the weather-dependent curve used to determine the leaving water temperature of the main zone in space cooling operation.

**Restriction:** The curve is only used when Cooling setpoint mode (main zone) = Weather dependent.

See "7.2 Weather-dependent curve" ▶ 26].

**[10.13] Additional zone 1/4**

Set:

- Emitter type
- Control

**Emitter type**

Must match your system layout. Emitter type of the additional zone. For more information, see "[10.9] Main zone 1/4" ▶ 24].

- Under floor heating
- Heat pump convector
- Radiator

**Control**

Shows (read-only) the unit control method for the additional zone. It is determined by the unit control method for the main zone (see "[10.9] Main zone 1/4" ▶ 24]).

- Leaving water if the unit control method for the main zone is Leaving water.
- External room thermostat if the unit control method for the main zone is:
  - External room thermostat, or
  - Room thermostat

In case of external room thermostat control, you must also set the external room thermostat type with setting [2.13]:

Must match your system layout. External room thermostat type for the additional zone.

For more information, see "[10.9] Main zone 1/4" ▶ 24].

- **Single contact:** The used external room thermostat can only send a thermo ON/OFF condition. There is no separation between heating or cooling demand.  
Select this value in case of a connection to the heat pump convector (FWX\*).
- **Dual contact:** The used external room thermostat can send a separate heating/cooling thermo ON/OFF condition.  
Select this value in case of connection to multi-zoning wired controls, wired room thermostats (EKRTWA) or wireless room thermostats (EKTRT1, EKTRTB)

**[10.14] Additional zone 2/4**

Set:

- Heating setpoint mode:
  - Fixed
  - Weather dependent
- Cooling setpoint mode:
  - Fixed
  - Weather dependent

**[10.15] Additional zone 3/4 (Heating WD curve)**

Defines the weather-dependent curve used to determine the leaving water temperature of the additional zone in space heating operation.

**Restriction:** The curve is only used when Heating setpoint mode (additional zone) = Weather dependent.

See "7.2 Weather-dependent curve" ▶ 26].

**[10.16] Additional zone 4/4 (Cooling WD curve)**

Defines the weather-dependent curve used to determine the leaving water temperature of the additional zone in space cooling operation.

**Restriction:** The curve is only used when Cooling setpoint mode (additional zone) = Weather dependent.

See "7.2 Weather-dependent curve" ▶ 26].

**[10.17] Configuration wizard – DHW 1/2**

Set:

- Heat-up efficiency:
- Operation mode

**Heat-up efficiency**

Defines how efficient the tank is heated up.

Comfort

**Operation mode**

Defines how the domestic hot water is prepared. The 3 different ways differ from each other by the way the desired tank temperature is set and how the unit acts upon it.

See the operation manual for more details.

- **Reheat**  
The tank can ONLY be heated by reheat operation (fixed or scheduled). Use the following settings:
  - [4.11] Maximum tank setpoint
  - [4.24] Enable reheat schedule
  - In case of fixed: [4.5] Reheat setpoint
  - In case of scheduled: [4.25] Reheat schedule.
  - [4.12] Hysteresis
- **Schedule and reheat**  
The tank is heated according to a schedule and between the scheduled heat up cycles, reheat operation is allowed. The settings are the same as for Reheat and for Scheduled.
- **Scheduled**  
The tank can ONLY be heated according to a schedule. Use the following settings:
  - [4.6] Schedule
  - [4.21] Comfort setpoint
  - [4.22] Eco setpoint

Related settings:

Setting	Description
[4.11] Maximum tank setpoint (in case of Reheat or Schedule and reheat)	You can set the maximum allowed tank temperature here. This is the maximum temperature that users can select for the domestic hot water. You can use this setting to limit the temperature at the hot water taps.  The maximum temperature is NOT applicable during disinfection function.



## 7 Configuration

Setting	Description
[4.24] Enable reheat schedule (in case of Reheat or Schedule and reheat)	The reheat setpoint for can be: <ul style="list-style-type: none"> <li>Fixed (default)</li> <li>Scheduled</li> </ul> You can switch between the two here: <ul style="list-style-type: none"> <li>OFF = Fixed. You can now set [4.5].</li> <li>ON = Scheduled. You can now set [4.25].</li> </ul>
[4.5] Reheat setpoint (in case of fixed reheat setpoint)	You can set the fixed reheat setpoint here. <ul style="list-style-type: none"> <li>20~[4.11]°C</li> </ul>
[4.25] Reheat schedule (in case of scheduled reheat setpoint)	You can program the reheat schedule here.
[4.12] Hysteresis (in case of Reheat or Schedule and reheat)	You can set the reheat hysteresis here. <p>When the tank temperature drops below the reheat temperature minus the reheat hysteresis temperature, the tank heats up to the reheat temperature.</p> <ul style="list-style-type: none"> <li>2~20°C</li> </ul>
[4.6] Schedule (in case of Scheduled or Schedule and reheat)	You can program and activate a tank schedule here. <p>When programming the tank schedule, for each timeblock you have to define which mode to use:</p> <ul style="list-style-type: none"> <li> Comfort mode. You can define its value in [4.21].</li> <li> Eco mode. You can define its value in [4.22].</li> </ul>
[4.21] Comfort setpoint (in case of Scheduled or Schedule and reheat)	You can define the value that corresponds with  Comfort mode here. <ul style="list-style-type: none"> <li>20~[4.11] °C</li> </ul>
[4.22] Eco setpoint (in case of Scheduled or Schedule and reheat)	You can define the value that corresponds with  Eco mode here. <ul style="list-style-type: none"> <li>20~[4.11]°C</li> </ul>



### INFORMATION

Risk of space heating capacity shortage for domestic hot water tank without internal booster heater: In case of frequent domestic hot water operation, frequent and long space heating/cooling interruption will happen when selecting Operation mode = Reheat (only reheat operation allowed for the tank).

### [10.18] Configuration wizard – DHW 2/2

Set:

- Tank setpoint (select value)
- Hysteresis (select value)

### [10.19] Configuration wizard

The configuration wizard is finished!

Please make sure that the commissioning check list in e-Care has been completed as well.

## 7.2 Weather-dependent curve

### 7.2.1 What is a weather-dependent curve?

#### Weather-dependent operation

The unit operates 'weather-dependent' if the desired leaving water temperature is determined automatically by the outdoor temperature. It therefore is connected to a temperature sensor on the North wall of the building. If the outdoor temperature drops or rises, the unit compensates instantly. Thus, the unit does not have to wait for feedback by the thermostat to increase or decrease the temperature of the leaving water. Because it reacts more quickly, it prevents high rises and drops of the indoor temperature and water temperature at tap points.

#### Advantage

Weather-dependent operation reduces energy consumption.

#### Weather-dependent curve

To be able to compensate for differences in temperature, the unit relies on its weather-dependent curve. This curve defines how much the temperature of the leaving water must be at different outdoor temperatures. Because the slope of the curve depends on local circumstances such as climate and the insulation of the building, the curve can be adjusted by an installer or user.

#### Type of weather-dependent curve

The type of weather-dependent curve is "2-points curve".

#### Availability

The weather-dependent curve is available for:

- Main zone - Heating
- Main zone - Cooling
- Additional zone - Heating
- Additional zone - Cooling

### 7.2.2 Using weather-dependent curves

#### Related screens

The following table describes:

- Where you can define the different weather-dependent curves
- When the curve is used (restriction)

To define the curve, go to...	Curve is used when...
[1.8] Main zone > Heating WD curve	[1.5] Heating setpoint mode = Weather dependent
[1.9] Main zone > Cooling WD curve	[1.7] Cooling setpoint mode = Weather dependent
[2.8] Additional zone > Heating WD curve	[2.5] Heating setpoint mode = Weather dependent
[2.9] Additional zone > Cooling WD curve	[2.7] Cooling setpoint mode = Weather dependent



### INFORMATION

#### Maximum and minimum setpoints


You cannot configure the curve with temperatures that are higher or lower than the set maximum and minimum setpoints for that zone. When the maximum or minimum setpoint is reached, the curve flattens out.


#### To define a weather-dependent curve

Define the weather-dependent curve using two setpoints (b, c).

**Example:**



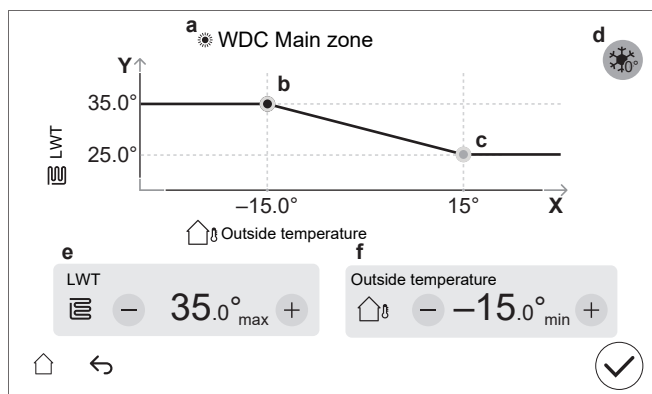

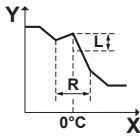Item	Description
<b>a</b>	Selected weather-dependent curve: <ul style="list-style-type: none"> <li>[1.8] Main zone – Heating (☀)</li> <li>[1.9] Main zone – Cooling (❄)</li> <li>[2.8] Additional zone – Heating (☀)</li> <li>[2.9] Additional zone – Cooling (❄)</li> </ul>
<b>b, c</b>	Setpoint 1 and setpoint 2. You can change them: <ul style="list-style-type: none"> <li>By dragging the setpoint.</li> <li>By tapping the setpoint, and then using the – / + buttons in <b>e, f</b>.</li> </ul>
<b>d</b>	Increase around 0°C (same as setting [1.26] for main zone, and [2.20] for additional zone). Use this setting to compensate for possible heat losses of the building due to the evaporation of melted ice or snow. (e.g. in cold region countries). In heating operation, the desired leaving water temperature is locally increased around an outdoor temperature of 0°C.  <p>L: Increase; R: Span; X: Outdoor temperature; Y: Leaving water temperature</p> <p>Possible values:</p> <ul style="list-style-type: none"> <li>No</li> <li>increase 2°C, span 4°C</li> <li>increase 2°C, span 8°C</li> <li>increase 4°C, span 4°C</li> <li>increase 4°C, span 8°C</li> </ul>
<b>e, f</b>	Values of the selected setpoint. You can change the values using the – / + buttons.
<b>X-axis</b>	Outdoor temperature.
<b>Y-axis</b>	Leaving water temperature for the selected zone. The icon corresponds to the heat emitter for that zone: <ul style="list-style-type: none"> <li> Underfloor heating</li> <li> Fan coil unit</li> <li> Radiator</li> </ul>

#### To fine-tune a weather-dependent curve

The following table describes how to fine-tune the weather-dependent curve of a zone:

You feel...		Fine-tune with setpoints:			
At regular outdoor temperatures ...	At cold outdoor temperatures ...	Setpoint 1 (b)		Setpoint 2 (c)	
		X	Y	X	Y
OK	Cold	↑	↑	—	—
OK	Hot	↓	↓	—	—
Cold	OK	—	—	↑	↑
Cold	Cold	↑	↑	↑	↑
Cold	Hot	↓	↓	↑	↑
Hot	OK	—	—	↓	↓
Hot	Cold	↑	↑	↓	↓
Hot	Hot	↓	↓	↓	↓

### 7.3 Menu structure: Overview installer settings



#### NOTICE

When changing a setting, the operation is temporary stopped. Operations will restart when you return to the home screen.

Depending on your unit type and the selected settings, some settings will not be visible.

#### [1] Main zone

- [1.10] Hysteresis
- [1.11] Emitter type
- [1.13] External room thermostat
- [1.14] Delta T heating
- [1.16] Cooling allowance
- [1.18] Delta T cooling
- [1.19] Overheating water circuit
- [1.20] Undercooling water circuit
- [1.22] Antifrost
- [1.26] Increase around 0°C

#### [2] Additional zone

- [2.10] Hysteresis
- [2.11] Emitter type
- [2.13] External room thermostat
- [2.14] Delta T heating
- [2.17] Delta T cooling
- [2.20] Increase around 0°C

#### [3] Space heating/cooling

- [3.3] Emergency selection
- [3.4] Antifrost
- [3.5] Operation mode schedule
- [3.7] Overshoot
- [3.8] External sensor
- [3.9] Pump limitation service
- [3.10] Bizon kit installed
- [3.11] Undercooling setpoint
- [3.12] Overheating setpoint

#### [4] Domestic hot water

- [4.12] Hysteresis

## 8 Commissioning

[4.13] DHW pump

[4.14] Booster heater

[4.15] Emergency selection

[4.23] Offset BSH setpoint

### [5] Settings

[5.1] Forced defrost

[5.2] Quiet operation

[5.5] Backup heater

[5.6] Capacity shortage

[5.7] Overview field settings

[5.8] Digital Key

[5.9] Location and language

[5.10] Timezone

[5.11] Reset fan operation hours

[5.16] Reset to factory default

[5.18] System restart

[5.19] Diverter valve Type

[5.20] Bypass valve Type

[5.21] Bizone kit mixing valve Type

[5.22] Ambient sensor

[5.23] Emergency selection

[5.24] Advanced log level

[5.25] Demand response

[5.29] Refrigerant recovery mode

[5.33] Boiler capacity

[5.34] Maximum capacity

### [7] Maintenance mode

[7.1] Actuator test run

[7.2] Air purge

[7.3] Operation test run

[7.4] UFH screed dryout

[7.5] Space heating delta T target

[7.6] Mixing kit

[7.7] Operation test run settings

### [10] Configuration wizard

See "[7.1 Configuration wizard](#)" [p. 22].

### [11] Malfunctioning

### [12] Touch

[12.2] Sensor viewer

[12.3] Draw tool

### [13] Field IO

[13.1] / [13.2] / [13.3] Terminal block X42M

[13.4] / [13.5] Terminal block X43M

[13.6] Terminal block X44M

[13.7] Terminal block X45M

## 8 Commissioning



### NOTICE

**Commissioning checklists.** Make sure to complete the different commissioning checklists:

- In the installation manuals (outdoor unit and indoor unit) or in the installer reference guide
- In the Daikin e-Care app



### NOTICE

**First operation.** The first time the unit starts in heating or domestic hot water operation, the unit will shortly start up in cooling operation to guarantee the reliability of the heat pump. For this reason, the backup heater will increase the water temperature so that the unit does not freeze up. It is required to start the first time in space heating or space cooling operation (not domestic hot water operation) to limit the backup heater consumption. If you would run in domestic hot water operation for the first time, the backup heater consumption would be expected to be larger.




### NOTICE

**ALWAYS** operate the unit with thermistors and/or pressure sensors/switches. If NOT, burning of the compressor might be the result.



### WARNING

After commissioning, do NOT turn OFF the circuit breakers (c) to the units so that the protection remains activated. In case of normal kWh rate power supply (a), there is one circuit breaker. In case of preferential kWh rate power supply (b), there are two.

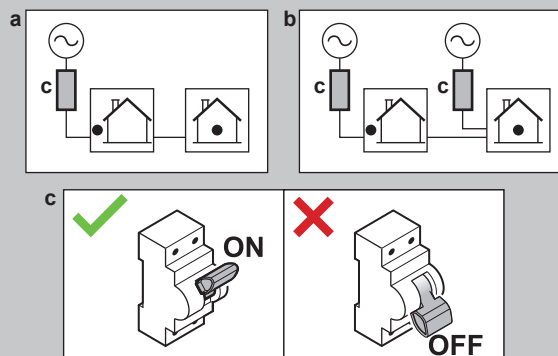

### NOTICE

If automatic air purge valves are installed in the field piping:

- Between the outdoor unit and the indoor unit (on the entering water pipe of the indoor unit), they must be closed after commissioning.
- After the indoor unit (on the emitter side), they may remain open after commissioning.

**INFORMATION**

**Protective functions – "Maintenance mode".** The software is equipped with protective functions, such as room antifrost. The unit automatically runs these functions when necessary.

During installation or service this behaviour is undesired. Therefore:

- **At first power-on:** The maintenance mode is active, and the protective functions are disabled by default. After 12 hours, the maintenance mode will be deactivated, and the protective functions will be enabled automatically.
- **Afterwards:** Whenever you go to [7] Maintenance mode the protective functions are disabled for 12 hours or until you exit Maintenance mode.

## 8.1 Checklist before commissioning

- 1 After the installation of the unit, check the items listed below. For the outdoor unit, also check the commissioning items in the outdoor unit installation manual.
- 2 Close the unit.
- 3 Power up the unit.

<input type="checkbox"/>	You read the complete installation instructions, as described in the <b>installer reference guide</b> .
<input type="checkbox"/>	The <b>indoor unit</b> is properly mounted.
<input type="checkbox"/>	The following <b>field wiring</b> has been carried out according to this document and the applicable legislation: <ul style="list-style-type: none"> <li>▪ Between the local supply panel and the outdoor unit</li> <li>▪ Between indoor unit and outdoor unit</li> <li>▪ Between the local supply panel and the indoor unit</li> <li>▪ Between the indoor unit and the valves (if applicable)</li> <li>▪ Between the indoor unit and the room thermostat (if applicable)</li> <li>▪ Between the indoor unit and the domestic hot water tank (if applicable)</li> </ul>
<input type="checkbox"/>	The <b>normally closed shut-off valve</b> (inlet leak stop) is properly installed.
<input type="checkbox"/>	The system is properly <b>earthed</b> and the earth terminals are tightened.
<input type="checkbox"/>	The <b>fuses</b> or locally installed protection devices are installed according to this document, and have NOT been bypassed.
<input type="checkbox"/>	The <b>power supply voltage</b> matches the voltage on the identification label of the unit.
<input type="checkbox"/>	There are NO <b>loose connections</b> or damaged electrical components in the switch box.
<input type="checkbox"/>	There are NO <b>damaged components</b> or <b>squeezed pipes</b> on the inside of the indoor and outdoor units.
<input type="checkbox"/>	<b>Backup heater circuit breaker</b> F1B (field supply) is turned ON.
<input type="checkbox"/>	Only for tanks with built-in booster heater: <b>Booster heater circuit breaker</b> F2B (field supply) is turned ON.
<input type="checkbox"/>	The correct pipe size is installed and the <b>pipes</b> are properly insulated.
<input type="checkbox"/>	There is NO <b>water leak</b> inside the indoor unit.
<input type="checkbox"/>	The <b>shut-off valves</b> are properly installed and fully open.

<input type="checkbox"/>	If <b>automatic air purge valves</b> are installed in the field piping: <ul style="list-style-type: none"> <li>▪ Between the outdoor unit and the indoor unit (on the entering water pipe of the indoor unit), they must be closed after commissioning.</li> <li>▪ After the indoor unit (on the emitter side), they may remain open after commissioning.</li> </ul>
<input type="checkbox"/>	The <b>pressure relief valve</b> (space heating circuit) purges water when opened. Clean water <b>MUST</b> come out.
<input type="checkbox"/>	The <b>minimum water volume</b> is guaranteed in all conditions. See "To check the water volume and flow rate" in <a href="#">"5.1 Preparing water piping" ▸ 7</a> .
<input type="checkbox"/>	(if applicable) The <b>domestic hot water tank</b> is filled completely.
<input type="checkbox"/>	The <b>water quality</b> complies with EU directive 2020/2184.
<input type="checkbox"/>	<b>No anti-freeze solution</b> (e.g. glycol) is added to the water.
<input type="checkbox"/>	The <b>"No glycol" tag</b> (delivered as accessory) is attached to the field piping near the filling point.
<input type="checkbox"/>	You explained to the user how to safely use the R290 heat pump. For more information about this, see the dedicated Service Manual ESIE22-02 "Systems using R290 refrigerant" (available on <a href="https://my.daikin.eu">https://my.daikin.eu</a> ).

## 8.2 Checklist during commissioning





<input type="checkbox"/>	To unlock the <b>outdoor unit</b> (compressor).
<input type="checkbox"/>	To open the <b>stop valve of the outdoor unit's refrigerant vessel</b> .
<input type="checkbox"/>	To update the <b>user interface software</b> to the latest version.
<input type="checkbox"/>	To check that the <b>minimum flow rate</b> during backup heater/defrost operation is guaranteed in all conditions. See "To check the water volume and flow rate" in <a href="#">"5.1 Preparing water piping" ▸ 7</a> .
<input type="checkbox"/>	To perform an <b>air purge</b> .
<input type="checkbox"/>	To perform a <b>test run</b> .
<input type="checkbox"/>	To perform an <b>actuator test run</b> .
<input type="checkbox"/>	To perform (start) an <b>underfloor screed dryout</b> (if necessary).

### 8.2.1 To unlock the outdoor unit (compressor)


#### About the unlocking procedure (Digital Key)

Who	Only trained installers with the required level of competences are authorised to perform the unlocking procedure (i.e. generate the Digital Key).
-----	---


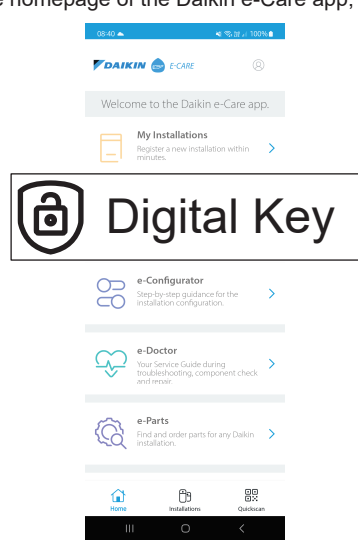


## 8 Commissioning


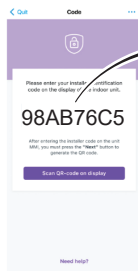
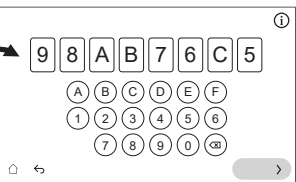

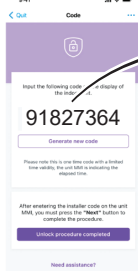
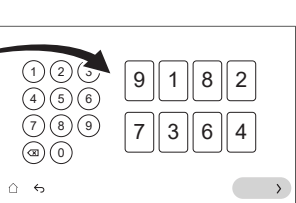


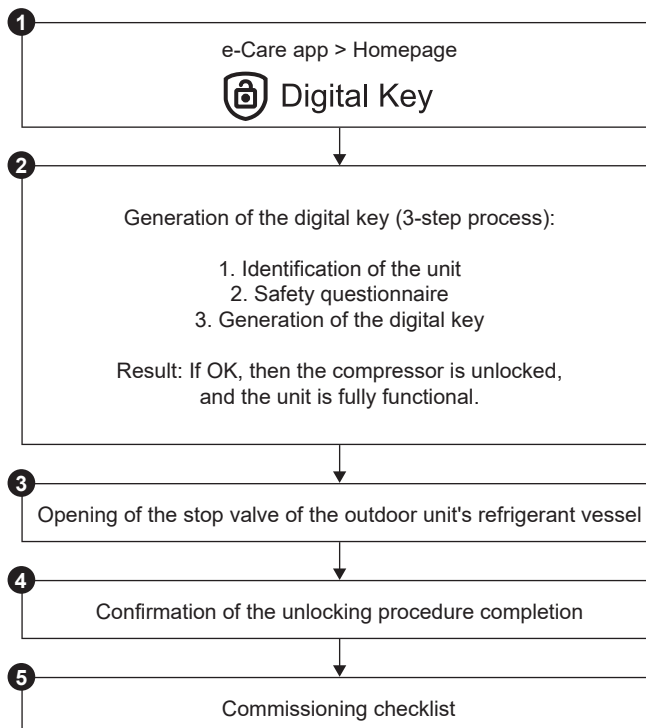
What	 <p>The compressor of Daikin Altherma 4 heat pumps is shipped in a locked state. During commissioning, it must be unlocked via the Digital Key function on the Daikin e-Care app and on the user interface of the indoor unit.</p> <div style="display: flex; justify-content: center; align-items: center;"> <div style="text-align: center;">  <p>Daikin Altherma 4</p> </div> <div style="margin: 0 10px;">+</div> <div style="text-align: center;">  <p>Daikin e-Care</p> </div> </div> <div style="text-align: center; margin-top: 10px;">  <p>Digital Key</p> </div> <p><b>Note:</b> To clear certain R290-related errors (e.g. R290 refrigerant leakage, gas sensor errors), you also need to use the Digital Key function.</p>
When	<p><b>Option 1 (configuration wizard):</b> At first power ON of the unit the configuration wizard starts automatically. After you completed all steps in the wizard (see <a href="#">"7.1 Configuration wizard" [p 22]</a>), the user interface will show an error message instructing to start the Digital Key function (i.e. perform the unlocking procedure).</p> <p><b>Option 2 (errors):</b> When there are errors that need the Digital Key to clear, you can start the Digital Key function from the respective error messages.</p>
Required	<ul style="list-style-type: none"> <li>Smartphone (iOS/Android supported) with the Daikin e-Care app installed. <ul style="list-style-type: none"> <li>To download the app, see <a href="#">"1 About this document" [p 2]</a>.</li> <li>Offline functionality to generate the Digital Key is supported (if the user was already logged in).</li> </ul> </li> <li>Stand By Me professional account (to log in to the app), with the required level of training to handle R290 units.</li> </ul>
Attention points	<ul style="list-style-type: none"> <li>Maximum 5 unlock attempts per 15 minutes are allowed. If exceeded, the unit does NOT allow any other attempts for 1 hour.</li> <li>Once the Digital Key is entered, permissions on the unit are increased for 6 hours. It is recommended for the installer to revert to user mode when leaving the site.</li> </ul>

### Unlocking procedure (flowchart)



### Unlocking procedure (detailed steps)

1	 <p>On the homepage of the Daikin e-Care app, go to:</p>  <p><b>Result:</b> The app verifies if the installer has the required level of competences to perform the unlocking procedure. If not, an error is shown and actions are restricted.</p>
2	 <p>The 3-step process to generate the Digital Key starts:</p> <ul style="list-style-type: none"> <li>2.1 Identification of the unit</li> <li>2.2 Safety questionnaire</li> <li>2.3 Generation of the Digital Key</li> </ul>
2.1	 <p><b>Identification of the unit</b></p> <p>Scan the QR code on the name plate of the indoor unit.</p> <p>The app will check if this unit is already registered and found by Stand By Me. For new installations, you will need to register the unit before you can go to the next step.</p>

2.2		<b>Safety questionnaire</b> Answer safety questions.  This short list of questions helps the installer verifying that the minimum safety requirements to activate the compressor are met.  When the checklist is completed, the app checks the answers, and generates a report. Only if all the safety requirements are met, you can go to the next step.
2.3		<b>Generation of the Digital Key</b>  2.3.1 The app shows a first code. Enter this code in the user interface. For example: <div style="display: flex; align-items: center;">   </div>
		2.3.2 The user interface generates a QR code. Scan this code with the app. For example: <div style="display: flex; align-items: center;">  </div>
		2.3.3 The app shows a second code (= Digital Key; one-time code). Enter this code in the user interface. For example: <div style="display: flex; align-items: center;">   </div>
	<b>Result:</b>	If everything is OK, then: <ul style="list-style-type: none"> <li>The user interface shows a confirmation.</li> <li>The compressor is unlocked and the unit is fully functional.</li> </ul>
3		When instructed by the user interface, open the stop valve of the outdoor unit's refrigerant vessel. See <a href="#">"8.2.2 To open the stop valve of the outdoor unit's refrigerant vessel" [p. 31]</a> .
4		On the app, confirm the completion of the unlocking procedure.
5		On the app, you will be directed to the commissioning tool where you can fill in the commissioning checklist to complete the detailed checks on the installation.  When the commissioning process is completed, the unit is ready to operate.

## 8.2.2 To open the stop valve of the outdoor unit's refrigerant vessel




### NOTICE

After installation, the stop valve must remain fully open to prevent damage to the seal.

For safe transportation, all refrigerant is stored in the refrigerant vessel of the outdoor unit. During commissioning, when performing the unlocking procedure of the outdoor unit (see ["8.2.1 To unlock the outdoor unit \(compressor\)" \[p. 29\]](#)), the stop valve of the refrigerant vessel must be fully opened (when instructed by the user interface) and remain fully open.

- 1 Make sure there is no gas leak on the circuit between the indoor unit and the outdoor unit by using a gas leak detector.
- 2 Remove the cap.
- 3 Turn the stop valve fully open (turn as shown until it cannot be turned any further) and leave it fully open.
- 4 Reattach the cap to prevent leakage.
- 5 Recheck to make sure there is no gas leak.

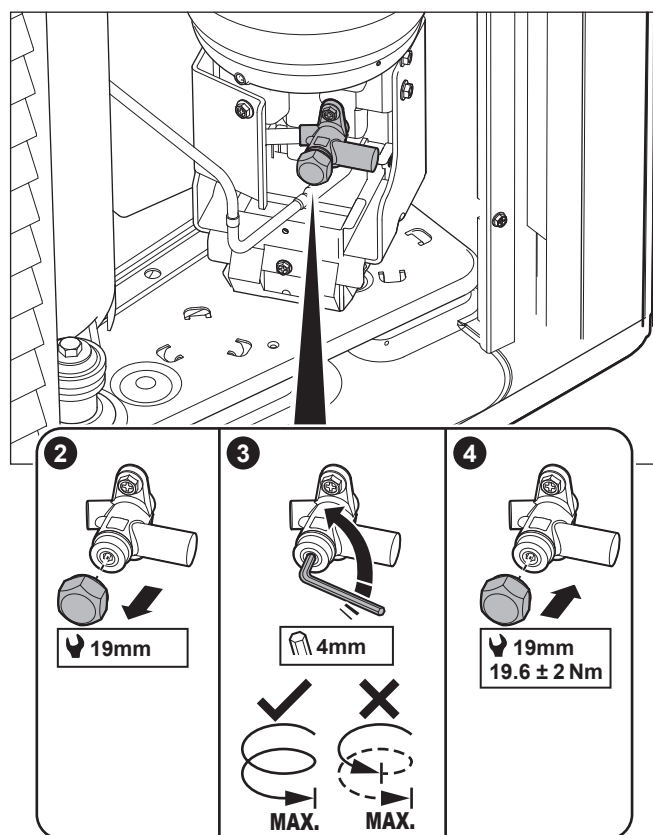


### Sticker

The sticker on the service cover of the outdoor unit contains info about opening the stop valve of the outdoor unit's refrigerant vessel. Some text is in English. This is the translation:

#	English	Translation
4	Unlock the unit before opening the valve.	Unlock the unit before opening the valve.
4a	Unlock via the MMI and e-Care app. The MMI will instruct when to open the valve.	Unlock via the MMI (user interface of indoor unit) and e-Care app. The MMI will instruct when to open the valve.
4c	Turn fully open and leave fully open.	Turn fully open and leave fully open.

## 8 Commissioning

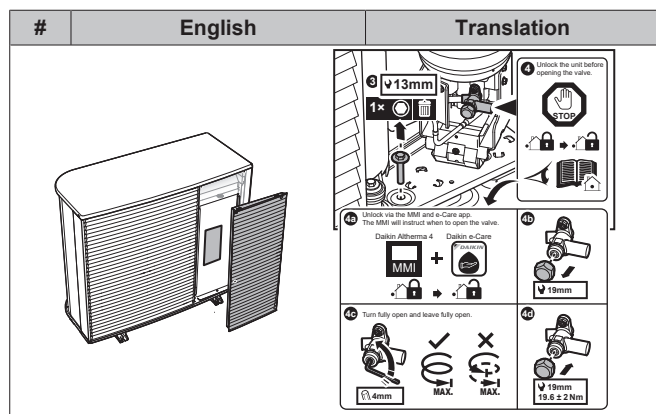


### 8.2.3 To update the user interface software

During commissioning, it is good practice to update the user interface software so that you have all latest functionality available.

- 1 Download the latest user interface software (available on <https://my.daikin.eu>; search via the Software Finder).
- 2 Put the software on a USB-stick (must be formatted as FAT32).
- 3 Power OFF the unit.
- 4 Insert the USB-stick in the USB-port located on the interface PCB (A11P).
- 5 Power ON the unit.

**Result:** The software is automatically updated. You can follow its process on the user interface.

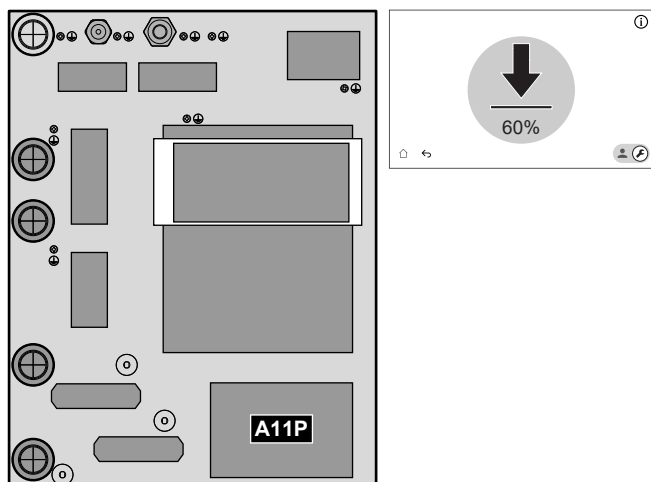

### 8.2.4 To check the minimum flow rate

- 1 Check the hydraulic configuration to find out which space heating loops can be closed by mechanical, electronic, or other valves.
- 2 Close all space heating loops that can be closed.
- 3 Start the pump test run (see "8.2.7 To perform an actuator test run" ▶ 33).
  - Choose [7.1.4] Unit pump
  - Choose pump speed: High
- 4 Read out the flow rate<sup>(a)</sup> and modify the bypass valve setting to reach the minimum required flow rate + 2 l/min.

<sup>(a)</sup> During pump test run, the unit can operate below the minimum required flow rate.

If operation is...	Then the minimum required flow rate is...
Defrost/backup heater operation	For EPBX10: 22 l/min For EPBX14: 24 l/min

If operation is...	Then the minimum required flow rate is...
Domestic hot water production	25 l/min

### 8.2.5 To perform an air purge



#### INFORMATION

The procedure below indicates that you need to tap Stop to stop the function, but the Stop button is NOT available in early versions of the user interface software. Instead,


use ← or  to stop the function.



#### NOTICE

**Second air purge.** If you need to perform an air purge a second time (after 30 minutes), you must leave the maintenance mode and then enter it again.

- 1 Switch to installer mode.
 

 5678
- 2 Go to [7] Maintenance mode and Confirm.
 

Maintenance mode


Entering maintenance mode can take up to ~15 minutes. The unit is finishing ongoing operations before changing over.


Cancel Confirm


**Result:** Operation of Space heating/cooling and Domestic hot water will be automatically turned off.



**3** Go to [7.2] Maintenance mode > Air purge .

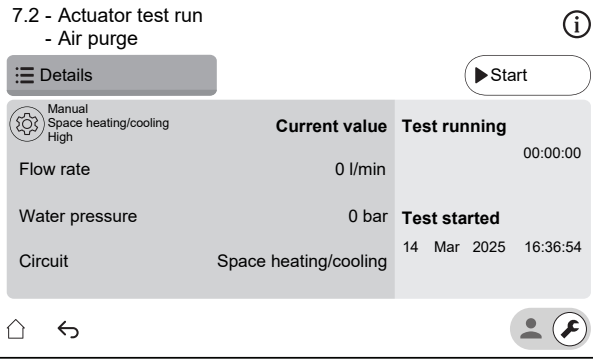

**1**  Settings: Use the settings to specify which Air purge should be performed and confirm.

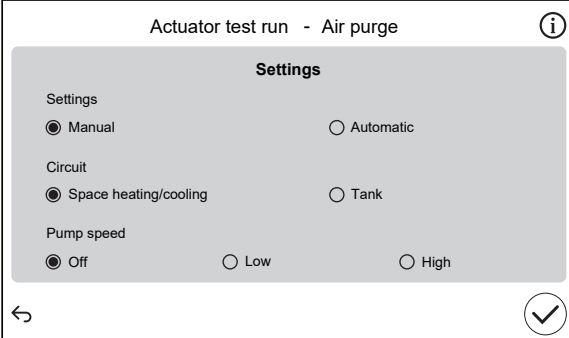

Settings

▪ Manual ▪ Automatic

Circuit:

▪ Space heating/cooling ▪ Tank

 
Pump speed:


▪ Off ▪ Low ▪ High

**2** Tap Start to run the air purge.  
**Result:** The air purge starts. It stops automatically when air purge cycle is finished.

**3** Tap Stop to stop the air purge.

**4** After the air purge test:

**1** Choose  to go back in the menu.

**2** Choose  to leave the Maintenance mode

**5** When leaving Maintenance mode, the user interface automatically restores operation (Space heating/cooling and Domestic hot water) as it was before entered Maintenance mode. Check if all operation modes are activated as expected.

### 8.2.6 To perform an operation test run





#### NOTICE

Before starting an operation test run make sure the minimum flow requirements are guaranteed (See "8.2.4 To check the minimum flow rate" [p 32]).




#### INFORMATION


The procedure below indicates that you need to tap Stop to stop the function, but the Stop button is NOT available in early versions of the user interface software. Instead,

use  or  to stop the function.

**1** Switch to installer mode.




**2** Go to [7] Maintenance mode and Confirm .

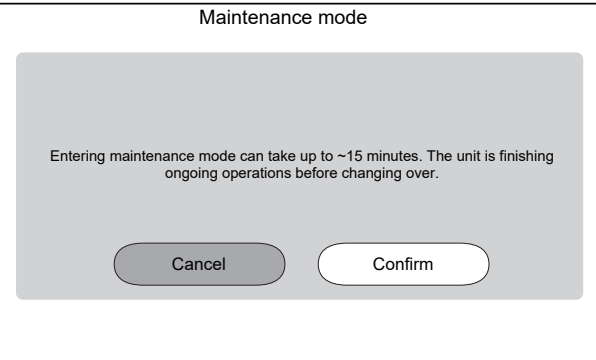

**Result:** Operation of Space heating/cooling and Domestic hot water will be automatically turned off.

**3** Go to [7.3] Maintenance mode > Operation test run


**4** Select an operation to test. **Example:** [7.3.1] Space heating

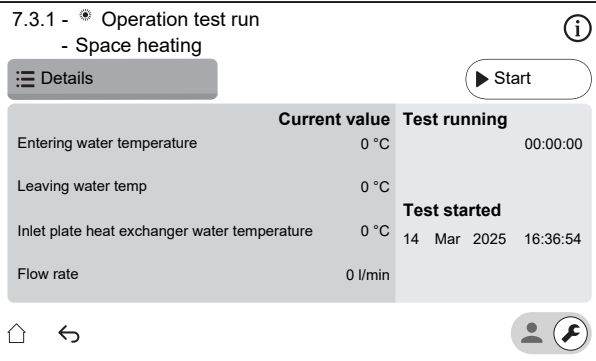


**1** Tap Start to run the operation test.  
**Result:** The operation test starts.

**2** Tap Stop to stop the operation test.

**5** After the operation test run:

**1** Choose  to go back in the menu.

**2** Choose  to leave the Maintenance mode

**6** When leaving Maintenance mode, the user interface automatically restores operation (Space heating/cooling and Domestic hot water) as it was before entered Maintenance mode. Check if all operation modes are activated as expected.

### 8.2.7 To perform an actuator test run

#### Purpose

Perform an actuator test run to confirm the operation of the different actuators. For example, when you select Unit pump, a test run of the pump will start.




#### INFORMATION


The procedure below indicates that you need to tap Stop to stop the function, but the Stop button is NOT available in early versions of the user interface software. Instead,

use  or  to stop the function.

**1** Switch to installer mode.



## 8 Commissioning

2	<p>Go to [7] Maintenance mode and Confirm .</p> <div data-bbox="140 190 737 548"> <p>Maintenance mode</p> <p>Entering maintenance mode can take up to ~15 minutes. The unit is finishing ongoing operations before changing over.</p> <p>Cancel Confirm</p> </div> <p><b>Result:</b> Operation of Space heating/cooling and Domestic hot water will be automatically turned off.</p>
3	Go to [7.1] Maintenance mode > Actuator test run.
4	<p>Select an actuator to test. <b>Example:</b> [7.1.4] Unit pump</p> <div data-bbox="140 703 737 1055"> <p>7.1.4 - Actuator test run - Unit pump</p> <p>Details Start</p> <p>High Flow rate</p> <p>Current value 0 l/min</p> <p>Test running 00:00:00</p> <p>Test started 14 Mar 2025 16:36:54</p> </div> <ol style="list-style-type: none"> <li>Settings: For certain actuators, you can define some settings before the test.</li> <li>Tap Start to run the test. <b>Result:</b> <ul style="list-style-type: none"> <li>Values for actuator shown in the detail section.</li> <li>Time measurement starts.</li> </ul> </li> <li>Tap Stop to stop the test.</li> </ol>
5	<p>After the actuator test:</p> <ol style="list-style-type: none"> <li>Choose ↶ to go back in the menu.</li> <li>Choose  to leave the Maintenance mode.</li> </ol>
6	<p>When leaving Maintenance mode, the user interface automatically restores operation (Space heating/cooling and Domestic hot water) as it was before entered Maintenance mode. Check if all operation modes are activated as expected.</p>

### Possible actuator test runs

Depending on your unit type and selected settings, some tests will not be visible.



#### INFORMATION°

During the actuator tests for Booster heater, Bivalent and Tank Boiler the setpoint is not respected. The component will be stopped when reaching its internal limits. If these limits are reached the actuator test will continue and activate that component again when the limitations allow its operation.

- [7.1.1] Booster heater test
- [7.1.2] Bivalent test
- [7.1.3] Tank Boiler test

- [7.1.4] Unit pump test



#### INFORMATION

Make sure that all air is purged before executing the test run. Also avoid disturbances in the water circuit during the test run.

- [7.1.5] Diverter valve test (3-way valve for switching between space heating and tank heating)
- [7.1.6] Backup heater test
- [7.1.7] Tank valve test
- [7.1.8] Bypass valve test

### Bizone mixing kit actuator tests



#### INFORMATION

This functionality is NOT available in early versions of the user interface software.

- [7.1.9] Bizone kit mixing valve test
- [7.1.10] Bizone kit direct pump test
- [7.1.11] Bizone kit mixed pump test

To execute an actuator test on the Bizone mixing kit go to home screen and turn on operation of Space heating/cooling and adapt the setpoint of the main zone. Then visual check if the pumps are working and the mixing valve are turning.

### 8.2.8 To perform an underfloor heating screed dryout



#### NOTICE

The installer is responsible for:

- contacting the screed manufacturer for the maximum allowed water temperature, to avoid cracking the screed,
- programming the underfloor heating screed dryout schedule according to the initial heating instructions of the screed manufacturer,
- checking the proper functioning of the setup on a regular basis,
- performing the correct program complying with the type of the used screed.



#### NOTICE

Before starting an underfloor heating screed dryout make sure the minimum flow requirements are guaranteed (See ["8.2.4 To check the minimum flow rate" \(p 32\)](#)).



#### NOTICE

When two zones are selected the underfloor heating screed dryout can only be executed on the main zone.



#### INFORMATION

The procedure below indicates that you need to tap Stop to stop the function, but the Stop button is NOT available in early versions of the user interface software. Instead,

use ↶ or  to stop the function.

1	<p>Switch to installer mode.</p> <div data-bbox="1077 1792 1220 1825">  5678         </div>
---	---

**2** Go to [7] Maintenance mode and Confirm .

Maintenance mode

Entering maintenance mode can take up to ~15 minutes. The unit is finishing ongoing operations before changing over.

Cancel Confirm

**Result:** Operation of Space heating/cooling and Domestic hot water will be automatically turned off.

**3** Go to [7.4] Maintenance mode > UFH screed dryout

7.4 - UFH screed dryout

Details Program Start

All zones

No program defined

Create program

**1** Tap on Create program or tap on Program and + to define a program step. A program can consists of multiple program-steps and a maximum of 30 program-steps.

7.4 - UFH screed dryout

Details Program Start

Duration	C°	
09	22	
10	23	
11	24	
12	25	
13	26	
14	27	
15	28	

01 12h - 20°C ✓

03 24h - 30°C

05 24h - 40°C

02 24h - 25°C

04 24h - 35°C

06 12h - 30°C

Each program step contains the sequence number, the duration and desired leaving water temperature.

**2** Settings:

**Note:** This functionality is NOT available in early versions of the user interface software. Underfloor heating screed dryout can only be executed on the main zone.

**3** Tap Start to run the underfloor heating screed dryout.

7.4 - UFH screed dryout

Details Program Start

All zones

Test running

Test started  
14 Mar 2025 16:36:54


Estimated end time  
15 Mar 2025 18:36:54

**Result:**

- The underfloor heating screed dryout starts. It stops automatically when all steps are done.
- A progress bar indicates where the program is currently situated.
- The program start time and estimated end time based on the current time and duration of the program are displayed
- The underfloor heating screen is used as home screen until the finish of the program.

**4** Tap Stop to stop the underfloor heating screed dryout.


## 9 Hand-over to the user

4	After the underfloor heating screed dryout:
	1 Choose ↩ to go back in the menu.
	2 Choose  to leave the Maintenance mode
5	When leaving Maintenance mode, the user interface automatically restores operation (Space heating/cooling and Domestic hot water) as it was before entered Maintenance mode. Check if all operation modes are activated as expected.

## 9 Hand-over to the user

Once the test run is finished and the unit operates properly, make sure the following is clear for the user:

- Fill in the installer setting table (in the operation manual) with the actual settings.
- Make sure that the user has the printed documentation and ask him/her to keep it for future reference. Inform the user that he/she can find the complete documentation at the URL mentioned earlier in this manual.
- Explain to the user how to properly operate the system and what to do in case of problems.
- Show the user what to do for the maintenance of the unit.
- Explain about energy saving tips to the user as described in the operation manual.
- Explain to the user to NOT turn OFF the circuit breakers (c) to the units so that the protection remains activated. In case of normal kWh rate power supply (a), there is one circuit breaker. In case of preferential kWh rate power supply (b), there are two.

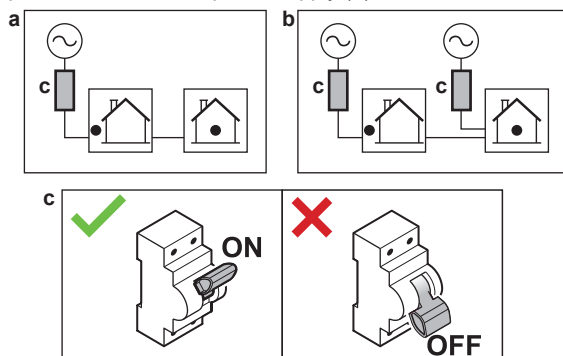


- Explain to the user that when they want to dispose of the unit, that they cannot do it themselves, but that they need to contact a Daikin certified technician.
- Explain to the user how to safely use the R290 heat pump. For more information about this, see the dedicated Service Manual ESIE22-02 "Systems using R290 refrigerant" (available on <https://my.daikin.eu>).

## 10 Technical data

A **subset** of the latest technical data is available on the regional Daikin website (publicly accessible). The **full set** of the latest technical data is available on the Daikin Business Portal (authentication required).

### 10.1 Piping diagram: Indoor unit

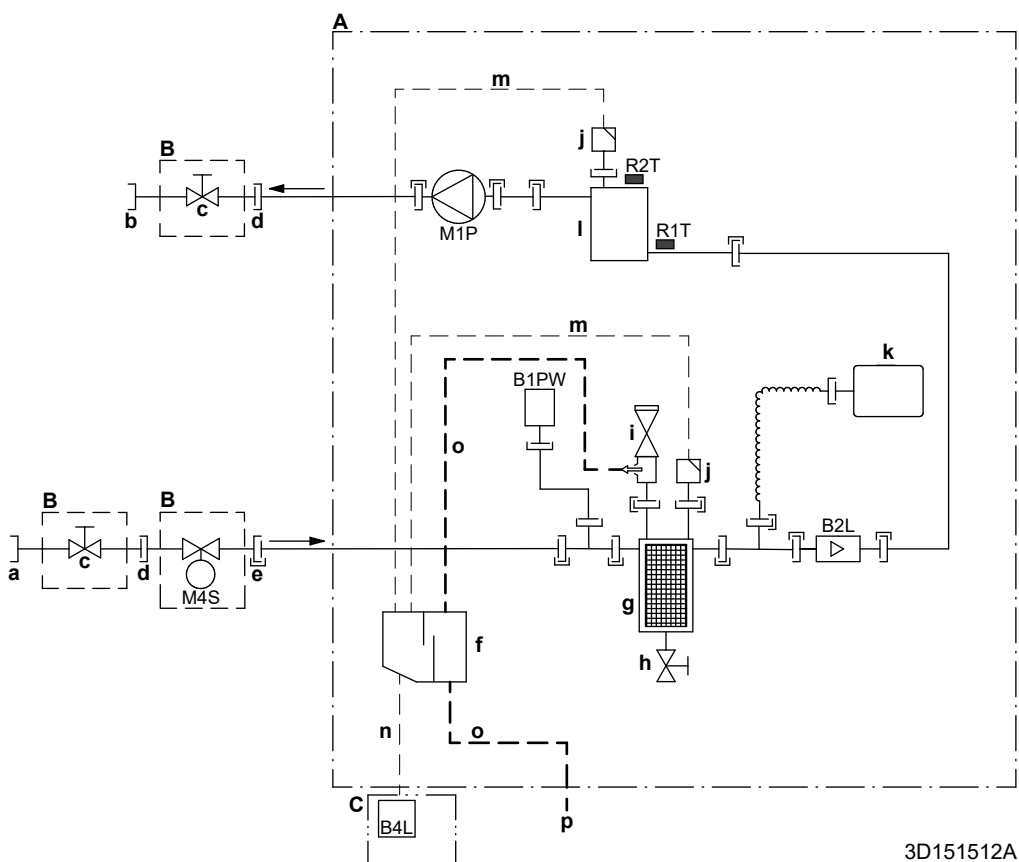

- A** Indoor unit  
**B** Field installed (delivered as accessory)  
**C** Gas sensor box  
**a** Water IN from outdoor unit (screw connection, female, 1 1/4")  
**b** Water OUT to space heating (screw connection, female, 1 1/4")  
**c** Shut-off valve (male 1" – female 1 1/4")  
**d** Screw connection, female, 1"  
**e** Quick coupling  
**f** Gas separator  
**g** Magnetic filter/dirt separator  
**h** Drain valve  
**i** Safety valve  
**j** Air purge  
**k** Expansion vessel  
**l** Backup heater  
**m** Hose for air purge  
**n** Hose for gas  
**o** Drain hose for water  
**p** Drain outlet ID18  
**B1PW** Space heating water pressure sensor  
**B2L** Flow sensor  
**B4L** Gas sensor  
**M1P** Pump  
**M4S** Normally closed shut-off valve (inlet leak stop)(quick coupling – female 1")

#### Thermistors:

- R1T** Inlet water  
**R2T** Backup heater – Water OUT

#### Connections:





- Screw connection  
 Flare connection  
 Quick coupling  
 Braze connection

## 10 Technical data

### 10.2 Wiring diagram: Indoor unit

See the internal wiring diagram supplied with the unit (on the inside of the indoor unit switch box cover). The abbreviations used are listed below.
    
#### Notes to go through before starting the unit

English	Translation
Notes to go through before starting the unit	Notes to go through before starting the unit
X2M	Main terminal – Outdoor unit
X40M	Main terminal – Indoor unit
X41M	Main terminal – Backup heater
X42M, X43M	Field wiring for high voltage
X44M, X45M	Field wiring for SELV (Safety Extra Low Voltage)
X7M, X8M	Booster heater power supply terminal
-----	Earth wiring
-----	Field supply
①	Several wiring possibilities
	Option
	Not mounted in switch box
	Wiring depending on model
	PCB
Note 1: Connection point of the power supply for the BUH should be foreseen outside the unit.	Note 1: Connection point of the power supply for the backup heater should be foreseen outside the unit.
<b>Backup heater power supply</b>	<b>Backup heater power supply</b>
<input type="checkbox"/> 4.5 kW (1N~, 230 V)	<input type="checkbox"/> 4.5 kW (1N~, 230 V)
<input type="checkbox"/> 4.5 kW (3N~, 400 V)	<input type="checkbox"/> 4.5 kW (3N~, 400 V)
<input type="checkbox"/> 4.5 kW (3~, 230 V)	<input type="checkbox"/> 4.5 kW (3~, 230 V)
<input type="checkbox"/> 4.5 kW (2~, 230 V)	<input type="checkbox"/> 4.5 kW (2~, 230 V)
<input type="checkbox"/> 6 kW (1N~, 230 V)	<input type="checkbox"/> 6 kW (1N~, 230 V)
<input type="checkbox"/> 9 kW (3N~, 400 V)	<input type="checkbox"/> 9 kW (3N~, 400 V)
<b>User installed options</b>	<b>User installed options</b>
<input type="checkbox"/> Remote user interface	<input type="checkbox"/> Dedicated Human Comfort Interface (BRC1HH used as room thermostat)
<input type="checkbox"/> Ext. indoor thermistor	<input type="checkbox"/> External indoor thermistor
<input type="checkbox"/> Ext outdoor thermistor	<input type="checkbox"/> External outdoor thermistor
<input type="checkbox"/> Safety thermostat	<input type="checkbox"/> Safety thermostat
<input type="checkbox"/> Smart Grid	<input type="checkbox"/> Smart Grid
<input type="checkbox"/> WLAN cartridge	<input type="checkbox"/> WLAN cartridge
<input type="checkbox"/> Bizone mixing kit	<input type="checkbox"/> Bizone mixing kit
<b>Main LWT</b>	<b>Main leaving water temperature</b>
<input type="checkbox"/> On/OFF thermostat (wired)	<input type="checkbox"/> ON/OFF thermostat (wired)
<input type="checkbox"/> On/OFF thermostat (wireless)	<input type="checkbox"/> ON/OFF thermostat (wireless)
<input type="checkbox"/> Ext. thermistor	<input type="checkbox"/> External thermistor
<input type="checkbox"/> Heat pump convactor	<input type="checkbox"/> Heat pump convactor
<b>Add LWT</b>	<b>Additional leaving water temperature</b>
<input type="checkbox"/> On/OFF thermostat (wired)	<input type="checkbox"/> ON/OFF thermostat (wired)
<input type="checkbox"/> On/OFF thermostat (wireless)	<input type="checkbox"/> ON/OFF thermostat (wireless)
<input type="checkbox"/> Ext. thermistor	<input type="checkbox"/> External thermistor
<input type="checkbox"/> Heat pump convactor	<input type="checkbox"/> Heat pump convactor

#### Position in switch box

English	Translation
Position in switch box	Position in switch box

#### Legend

A1P		Hydro PCB
A2P	*	ON/OFF thermostat (PC=power circuit)
A3P	*	Heat pump convactor
A5P		Power supply PCB
A6P		Multistep backup heater PCB
A11P		Interface PCB
A12P		User interface PCB
A14P	*	PCB of the dedicated Human Comfort Interface (BRC1HH used as room thermostat)
A15P	*	Receiver PCB (wireless ON/OFF thermostat)
A30P	*	Bizone mixing kit PCB
F1B	#	Overcurrent fuse - Backup heater
F2B	#	Overcurrent fuse - Main
F3B	#	Overcurrent fuse - Booster heater
K1A, K2A	*	High voltage Smart Grid relay
K*M	*	Contact booster heater
M2P	#	Domestic hot water pump
M2S	#	2-way valve for cooling mode
M4S		Normally closed shut-off valve (inlet leak stop)
M5S	*	3-way valve for floorheating/domestic hot water
P* (A14P)	*	Terminal
PC (A15P)	*	Power circuit
Q*DI	#	Earth leakage circuit breaker
Q1L		Thermal protector backup heater
Q4L	#	Safety thermostat
R1H (A2P)	*	Humidity sensor
R1T (A2P)	*	Ambient sensor ON/OFF thermostat
R1T (A14P)	*	Ambient sensor user interface
R1T (A15P)	*	Ambient sensor user interface
R2T (A2P)	*	External sensor (floor or ambient)
R5T (A1P)	*	Domestic hot water thermistor
R6T	*	External indoor or outdoor ambient thermistor
S1S	#	Preferential kWh rate power supply contact
S2S	#	Electricity meter pulse input 1
S3S	#	Electricity meter pulse input 2
S4S	#	Smart Grid feed-in (Smart Grid photovoltaic power pulse meter)
S10S-S11S	#	Low voltage Smart Grid contact
ST6 (A30P)	*	Connector
X*A, X*Y, X*Y*		Connector
X*M		Terminal strip

\* Optional

# Field supply



 
## Translation of text on wiring diagram

English	Translation
(1) Main power connection	(1) Main power connection
2-pole fuse	2-pole fuse
Indoor unit supplied from outdoor	Indoor unit supplied from outdoor
Indoor unit supplied separately	Indoor unit supplied separately
Normal kWh rate power supply	Normal kWh rate power supply
Outdoor unit	Outdoor unit
Standard	Standard
SWB	Switch box
(2) Backup heater power supply	(2) Backup heater power supply
2-pole fuse	2-pole fuse
4-pole fuse	4-pole fuse
For these connections use the optional adapter wire harnesses.	For these connections use the optional adapter wire harnesses.
Only for 4.5 kW MBUH units	Only for 4.5 kW multistep backup heater units
Only for 9 kW MBUH units	Only for 9 kW multistep backup heater units
(3) Shut-off valve - Inlet leak stop	(3) Normally closed shut-off valve (inlet leak stop)
(4) Ext. thermistor	(4) External thermistor
External ambient sensor option (indoor or outdoor)	External ambient sensor option (indoor or outdoor)
Voltage	Voltage
(5) Domestic hot water tank	(5) Domestic hot water tank
3 wire type SPDT	3-wire type SPDT
For DHW tank option	For DHW tank option
Max. load	Maximum load
Only for DHW tank option	Only for DHW tank option
Only when DHW option is installed	Only when DHW option is installed
OR	OR
(6) Field supplied options	(6) Field supplied options
230 V AC Control Device	230 V AC Control Device
Alarm output	Alarm output
Bizone mixing kit	Bizone mixing kit
Contact rating	Contact rating
Continuous	Continuous current
DHW pump output	Domestic hot water pump output
DHW pump	Domestic hot water pump
Electric pulse meter input	Electricity meter
Ext. heat source	External heat source
For HV Smart Grid	For high voltage Smart Grid
For LV Smart Grid	For low voltage Smart Grid
Inrush	Inrush current
Max. load	Maximum load
ON/OFF output	ON/OFF output
Preferential kWh rate power supply contact	Preferential kWh rate power supply contact
Safety thermostat contact	Safety thermostat contact
Shut-off valve NC	Shut-off valve – Normally closed
Shut-off valve NO	Shut-off valve – Normally open
Smart Grid PV power pulse meter	Smart Grid photovoltaic power pulse meter
Space cooling/heating	Space cooling/heating
Voltage	Voltage

English	Translation
(7) User interface	(7) User interface
3rd generation WLAN cartridge	Third generation WLAN cartridge
Remote user interface	Dedicated Human Comfort Interface (BRC1HH used as room thermostat)
SD card	Card slot for WLAN cartridge
Voltage	Voltage
(8) External On/OFF thermostats and heat pump convector	(8) External ON/OFF thermostats and heat pump convector
Additional LWT zone	Additional leaving water temperature zone
For external sensor (floor or ambient)	For external sensor (floor or ambient)
For heat pump convector	For heat pump convector
For wired On/OFF thermostat	For wired ON/OFF thermostat
For wireless On/OFF thermostat	For wireless ON/OFF thermostat
Main LWT zone	Main leaving water temperature zone
Max. load	Maximum load

### Electrical connection diagram

## POWER SUPPLY




## OPTIONAL PART

## Main LWT zone

Wired ON/OFF thermostat

 A2P



Max. load: 0.1 A - 230 V AC

Heat pump convector


A3P




Max. load: 0.1 A - 230 V AC

Wireless ON/OFF thermostat EKRTRB

A15P

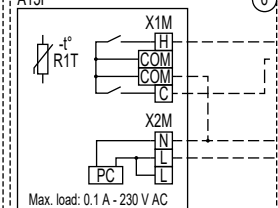


Max. load: 0.1 A - 230 V AC

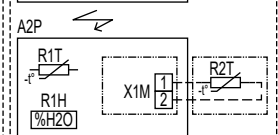

## Additional LWT zone

Wired ON/OFF thermostat

 A2P



Max. load: 0.1 A - 230 V AC

Heat pump convector


A3P




Max. load: 0.1 A - 230 V AC

Wireless ON/OFF thermostat EKRTRB

A15P









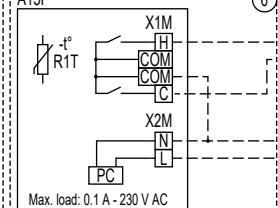


Max. load: 0.1 A - 230 V AC

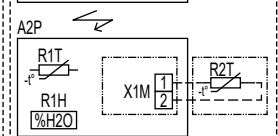

## STANDARD PART
         
## INDOOR UNIT



Alarm output

Max. load: 0.3 A - 230 V AC

External heat source

Max. load: 0.3 A - 230 V AC

Space cooling/heating ON/OFF output

Max. load: 0.3 A - 230 V AC

Shut-off valve (normally closed)

Max. load: 0.1 A - 230 V AC

Shut-off valve (normally open)

Max. load: 0.1 A - 230 V AC

DHW pump output

Max. load:  
2 A (inrush) - 230 V AC  
1 A (continuous)

External ambient sensor option (indoor or outdoor)

Voltage: 5 V DC

Human Comfort Interface

Voltage: 16 V DC

Bizone mixing kit

Voltage: 12 V DC

DHW tank option

Max. load: 0.1 A - 230 V AC  
3-wire type (SPDT)

DHW tank option

Max. load: 0.3 A - 230 V AC

4D152877B (2/2)







4P773385-1 B 00000004

Copyright 2024 Daikin

**DAIKIN EUROPE N.V.**

Zandvoordestraat 300, B-8400 Oostende, Belgium

4P773385-1B 2025.01