







INSTALLATION AND OPERATION MANUAL

Solar kit for air to water heat pump system

EKHW*150*
EKHW*200*
EKHW*300*

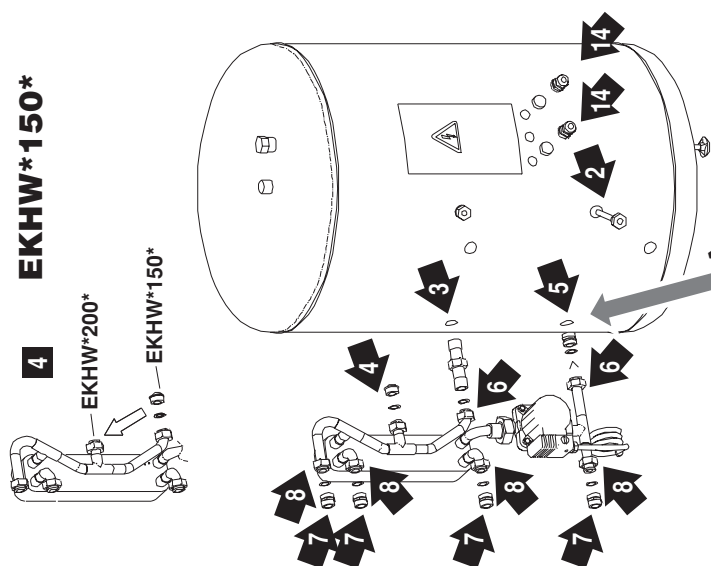

EKHW*200+300*

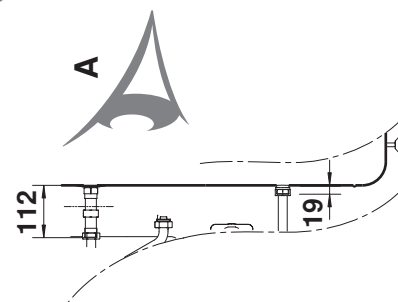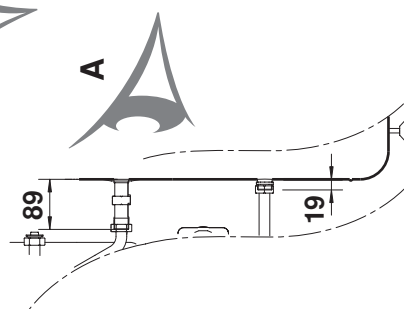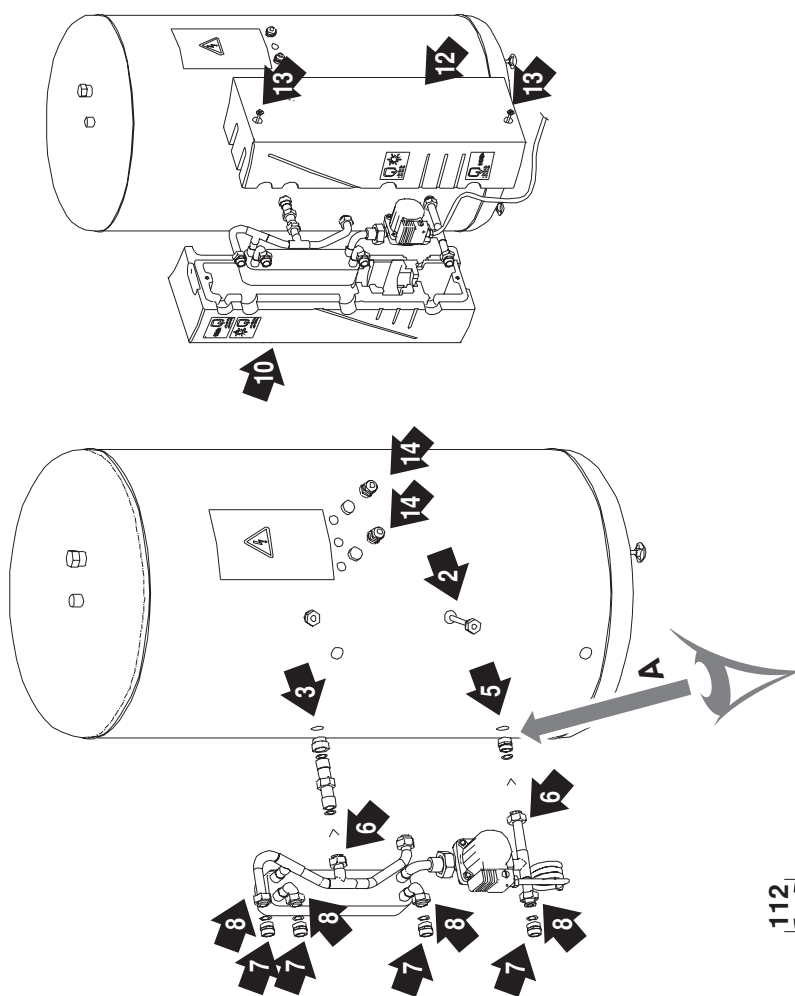

CONTENTS

	Page
Introduction.....	1
General information	1
Scope of this manual	1
Model identification	1
General system setup and operation.....	2
General system setup	2
Accessories	2
Accessories supplied with the solar kit	2
Overview of the solar kit	3
Main components.....	3
Installation of the solar kit	3
Selecting an installation location.....	3
Dimensions and service space	3
Installation guidelines.....	4
Installing the solar kit	4
Field wiring	5
Start up.....	8
Operating instructions.....	9
Configuring your system	9
Troubleshooting and servicing	10
General guidelines	10
General symptoms.....	10
Error codes	11
Disposal requirements.....	11
Technical specifications	11
Annexes.....	12
Decision flow of heating the domestic water by heat pump or by solar kit.....	12
Decision flow of heating the domestic water by booster heater	13



READ THESE INSTRUCTIONS CAREFULLY BEFORE INSTALLATION.

PLEASE LEAVE THIS MANUAL WITH THE EKSOLHW SOLAR KIT AFTER INSTALLATION.

IMPROPER INSTALLATION OR ATTACHMENT OF EQUIPMENT OR ACCESSORIES COULD RESULT IN ELECTRIC SHOCK, SHORT-CIRCUIT, LEAKS, FIRE OR OTHER DAMAGE TO THE EQUIPMENT. BE SURE ONLY TO USE ACCESSORIES MADE BY DAIKIN WHICH ARE SPECIFICALLY DESIGNED FOR USE WITH THE EQUIPMENT AND HAVE THEM INSTALLED BY A PROFESSIONAL.

IF UNSURE OF INSTALLATION PROCEDURES OR USE, ALWAYS CONTACT YOUR DAIKIN DEALER FOR ADVICE AND INFORMATION.

THE UNIT DESCRIBED IN THIS MANUAL IS DESIGNED FOR INDOOR INSTALLATION ONLY AND FOR AMBIENT TEMPERATURES RANGING 0°C~35°C.

The English text is the original instruction. Other languages are translations of the original instructions.

INTRODUCTION

General information

Thank you for purchasing this EKSOLHWAV1 solar kit.

The solar kit must be installed by a competent person and be installed in compliance with the instructions in this manual.

The solar kit is to be connected to the EKHWS*/EKHWE* domestic hot water tank.


The solar kit will enable you to heat up your domestic water by means of the sun whenever the sun is available.

To get the most comfort and energy savings out of your system, make sure to observe the section "Configuring your system" on page 9 of this manual.

Scope of this manual


This installation manual describes the procedures for installing and operating the EKSOLHWAV1 solar kit.

Model identification

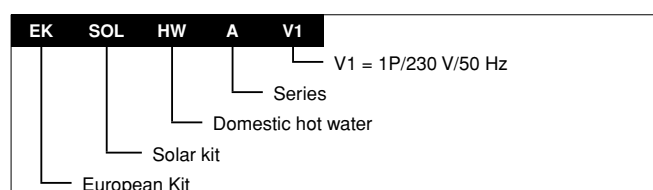

General system setup

The solar kit is designed to transfer the heat from the Daikin solar panels to the heat exchanger of the domestic hot water tank EKHWS*/EKHWE* and is to be installed in the system as shown in the scheme below.

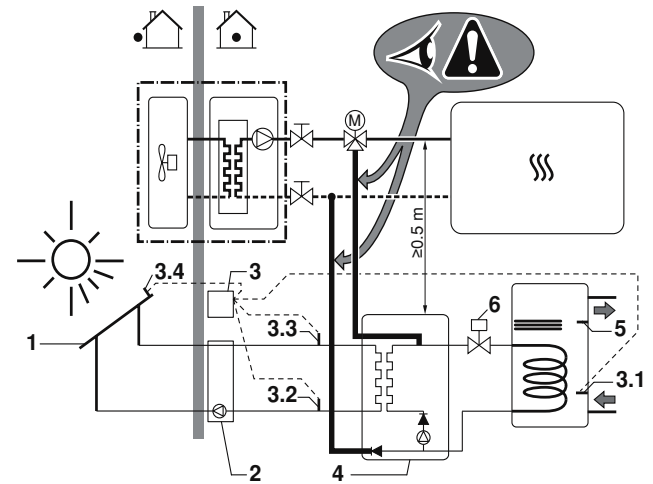


- 1 Solar panels (EKS*26)
- 2 Solar pump station (EKS RDS1A)
- 3 Solar pump station controller with temperature sensors (EKS R3PA)
- 3.1 Tank temperature sensor
- 3.2 Return temperature sensor to solar panels, T_R
- 3.3 Supply temperature sensor with flow meter from solar panels (option EKS FLP12A)
- 3.4 Solar panel temperature sensor, T_K
- 4 Solar kit (EKSOL*)
- 5 Domestic hot water temperature sensor of the unit
- 6 Solenoid 2-way valve (only for UK)
Obligatory for compliance to UK building regulation G3. Refer to the EKHUHW* kit.
- Heating system.
Refer to the unit installation manual.
- Example of unit

The solar panels (1) catch the heat of the sun. When the temperature of the glycol solution in the solar panel has become higher than the water temperature in the domestic hot water tank, the pump of the solar pump station (2) and the pump of the solar kit (4) start to operate as to transfer the heat to the heat exchanger of the domestic hot water tank, unless priority is given to the heat pump. Refer to "Operating instructions" on page 9 (subsection: Configuring your system).

WARNING
Due to heat conduction, the piping between heating circuit and solar kit connection can become very hot.
For this reason this pipe must be made of copper, at least 0.5 m long and insulated.


Accessories supplied with the solar kit

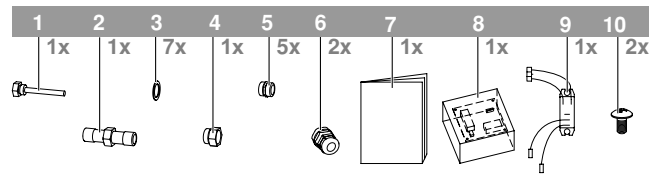

	Quantity	Necessary accessory for installation of the solar kit for each type of domestic hot water tank								
		EKHWS			EKHWSU			EKHWE		
		150	200	300	150	200	300	150	200	300
1	Thermistor socket 1/2" Male BSP (internal diameter 6.1)	1	1	1	1	1	1	—	—	—
2	Connection pipe 3/4" Male BSP x 3/4" Male BSP	1	1	1	—	—	—	1	1	1
3	Sealing	7	6	7	7	6	6	6	7	7
4	Adaptor 3/4" Female BSP x 3/4" Male BSP	1	—	1	—	—	—	—	1	1
5	Adaptor 3/4" Male BSP x 3/4" Male BSP	5	5	5	4	5	5	5	5	5
6	PG nipple and nut	2	2	2	2	2	2	—	—	—
7	Installation manual	1	1	1	1	1	1	1	1	1
8	EKR P1HB solar/remote alarm address card	1	1	1	1	1	1	1	1	1
9	Solar contactor assembly K7M	1	1	1	1	1	1	1	1	1
10	Contactor fixing screw	2	2	2	2	2	2	2	2	2

OVERVIEW OF THE SOLAR KIT

Main components

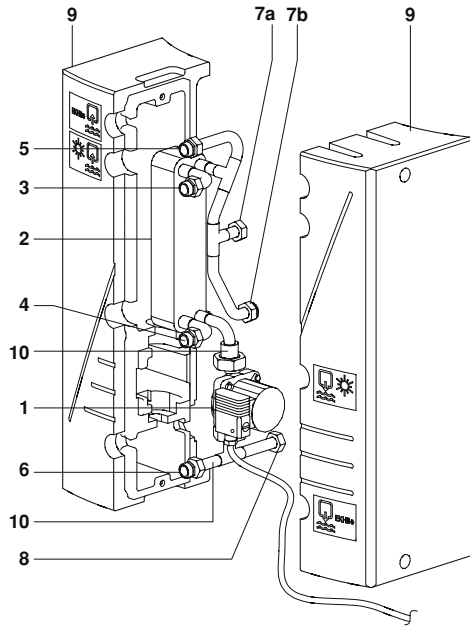

- 1 Solar kit circulation pump
- 2 Heat exchanger
- 3 Inlet connection from solar pump station
- 4 Return connection to solar pump station
- 5 Inlet connection from the unit
- 6 Return connection to the unit
- 7a Return connection to the 200/300 l domestic hot water tank heat exchanger
- 7b Return connection to the 150 l domestic hot water tank heat exchanger
- 8 Inlet connection from the domestic hot water tank heat exchanger
- 9 EPP casing
- 10 Non-return valves

Safety functions

Thermal cut out

The solar kit is electrically connected with the thermal cut out safety of the domestic hot water tank. (refer to "Field wiring" on page 5).

When the thermal cut out safety of the domestic hot water trips, the power supply to the pump of the solar pump station is interrupted so that no more solar heat can be transferred to the domestic hot water tank.

Domestic hot water tank thermostats (only for UK)

If the domestic hot water tank temperature becomes too high, the thermostats will stop the pump of the solar pump station (73°C) and will close the solenoid 2-way valve (79°C).

INSTALLATION OF THE SOLAR KIT

Selecting an installation location

- The solar kit is to be installed in a frost free indoor space, directly connected to the domestic hot water tank.
- Make sure the service space is available as indicated in below drawing.
- The space around the unit has to allow sufficient air circulation.
- It shall be made sure that in the case of a leak, leaking water will not cause any damage or unsafe situations.
- The equipment is not intended for use in a potentially explosive atmosphere.
- Do not install or operate the unit in rooms mentioned below:
 - Where corrosive gas like sulphurous gas exists: copper tubing and brazed spots may corrode.
 - Where volatile flammable gas like thinner or gasoline is used.
 - Where machines generating electromagnetic waves exist: the control system may malfunction.
 - Where the air contains high levels of salt such as air near the ocean and where voltage fluctuates a lot (e.g. in factories). This applies also to vehicles or vessels.


Dimensions and service space

Service space dimensions below relate to requirements for installation of the solar kit only.

For service space dimensions of the domestic hot water tank, refer to the domestic hot water tank installation manual.



NOTE For installation of the solar kit to the EKHWSU150* domestic hot water tank (UK only), the solar kit will not fit entirely tight to the tank.

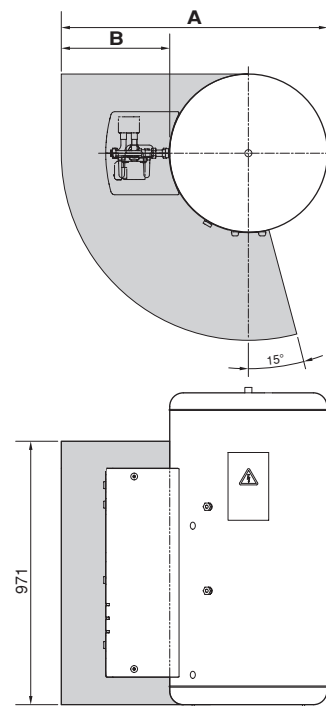

	A	B
EKHWS150*	980	400
EKHWS200*		
EKHWS300*		
EKHWSU200*		
EKHWSU300*		
EKHWSU150*	1010	430

	A	B
EKHWE150*	945	400
EKHWE150*		
EKHWE200*		
EKHWE300*	1060	400

Installation guidelines

- Make sure that all the piping to the solar kit is insulated.
- Make sure that all the piping to the solar kit is sufficiently supported so that it will not cause any stress on the solar kit.
- Make sure the piping is protected against dirt during installation. Dirt in the piping might clog the heat exchanger of the solar panel and reduce its performance.

Installing the solar kit

- At delivery, the unit should be checked and any damage should be reported immediately to the carrier claims agent.
- Check if all unit's accessories are enclosed. Refer to ["Accessories supplied with the solar kit" on page 2](#).
- Bring the unit as close as possible to its final installation position in its original package in order to prevent damage during transport.

Procedure

Refer to the installation drawings. The numbers on the drawings refer to the steps described below.

figure 1	figure 2	figure 3
EKHW*150*	EKHWSU150*	EKHWSU200*
EKHW*200*		EKHWSU300*
EKHW*300*		

- 1 Locate the domestic hot water tank in a suitable position to facilitate the installation of the solar kit. It is therefore recommended to first read the entire installation procedure. Refer to the installation guidelines in the installation manual of the domestic hot water tank.

EKHWS(U) only:

Fit the thermistor socket in the thermistor hole for the domestic hot water temperature sensor of the solar pump station. (Refer to ["Accessories supplied with the solar kit" on page 2](#), part 1).

- 2 Refer to the corresponding sub-step, depending on your tank capacity. For UK, refer to 2.3.

- EKHW*200/300*:

- 2.1 Fit the adaptor 3/4" Female BSP x 3/4" Male BSP in the flow inlet connection of the domestic hot water tank. Refer to ["Accessories supplied with the solar kit" on page 2](#), part 4.
- 2.2 Fit the connection pipe 3/4" Male BSP x 3/4" Male BSP and sealing in the flow inlet connection of the domestic hot water tank. Refer to ["Accessories supplied with the solar kit" on page 2](#), part 2 and 3.

- EKHW*150*: Fit the connection pipe 3/4" Male BSP x 3/4" Male BSP in the flow inlet connection of the domestic hot water tank. Refer to ["Accessories supplied with the solar kit" on page 2](#), part 2.

- EKHWSU*:

- 2.3 Fit the adaptor 3/4" Male BSP x 3/4" Male BSP (x2) in the solenoid 2-way valve supplied as accessory with the EKUHW* kit. Refer to ["Accessories supplied with the solar kit" on page 2](#), part 5.

- 2.4 Fit the solenoid 2-way valve in the flow inlet connection of the domestic hot water tank.
The valve must be mounted so that the valve head is above horizontal level of pipework to prevent that in the highly unlikely event of a leak, a safety hazard results.
The valve must be mounted so that the valve head is pointed to the front of the domestic hot water tank with the cable entry at the bottom. Check direction of the flow arrow cast on the solenoid valve body. Do not grip the valve head while making and tightening up connections.

- 3 For EKHW*150* only:

- 3.1 Unscrew the stop 3/4" Male on the return connection to the 150 l domestic hot water tank heat exchanger. Keep sealing.

- 3.2 Fit the stop 3/4" Male + sealing on the return connection to the 200/300 l domestic hot water tank heat exchanger.

- 4 Fit the adaptor 3/4" Male BSP x 3/4" Male BSP in the heat exchanger outlet connection of the domestic hot water tank. Refer to ["Accessories supplied with the solar kit" on page 2](#), part 5.

For the EKHWSU150* (UK only): Fit a pipe 3/4" Male BSP x 3/4" Male BSP in the heat exchanger outlet connection of the domestic hot water tank (field supply, L = 50 mm).

- 5 Fit the solar kit and sealings (x2) on the heat exchanger inlet connection and heat exchanger outlet connection of the domestic hot water tank. Torque 5 N•m. Refer to ["Accessories supplied with the solar kit" on page 2](#), part 3.

- 6 Fit the adaptors 3/4" Male BSP x 3/4" Male BSP (x4) to the field piping:

- Inlet connection from the unit.
- Return connection to the unit.
- Inlet connection from solar pump station.
- Return connection to solar pump station.

Refer to ["Accessories supplied with the solar kit" on page 2](#), part 5.



WARNING

Due to heat conduction, the piping between heating circuit and solar kit connection can become very hot. For this reason this pipe must be made of copper, at least 0.5 m long and insulated.

- 7 Fit the solar kit and sealings (x4) to the field piping. Torque 5 N•m. Refer to ["Accessories supplied with the solar kit" on page 2](#), part 3.

- 8 For EKHWSU* (UK only): Cut out EPP material of the EPP lid.

- 9 Mount the left side of the EPP casing onto the solar kit.

- 10 Mount the EPP lid onto the right side of the EPP casing.

- 11 Mount the right side of the EPP casing onto the solar kit.

Take care, that the pump cable is routed via the holes in the bottom of the EPP casing.



Ensure that the pump cable cannot come into contact with piping below the pump when cable is routed out.

- 12 Use the screws and washers (x2) to fix the EPP casing. Screw until tight position.



Do not switch inlet and outlet connections.

Refer to the chapter "Typical application examples" described in the installation manual delivered with the unit for details on connecting the water circuits and the motorised 3-way valve.

NOTE



To install adequate connections between the unit and the solar kit, it is important that the 3-way valve is fitted correctly.



Ensure that the water piping connected to the solar kit coming from the solar panel and the unit are sufficiently supported and do not cause any stress on the solar kit.

Charging water

Charge the water on the unit and the tank (refer to the installation manuals of the unit and the domestic hot water tank).

Charge the solar panel circuit with a glycol solution.



Observe the instructions as given by your solar panel supplier. Make sure to use non-toxic glycol.


Field wiring



- Switch off the power supply before making any connections.
- All field wiring and components must be installed by a licensed electrician and must comply with relevant European and national regulations.
- The field wiring must be carried out in accordance with the wiring diagram and the instructions given below.

Overview

The illustration below gives an overview of the required field wiring between several parts of the installation. Refer also the wiring diagram, the installation manual of the unit, the domestic hot water tank and the solar pump station.

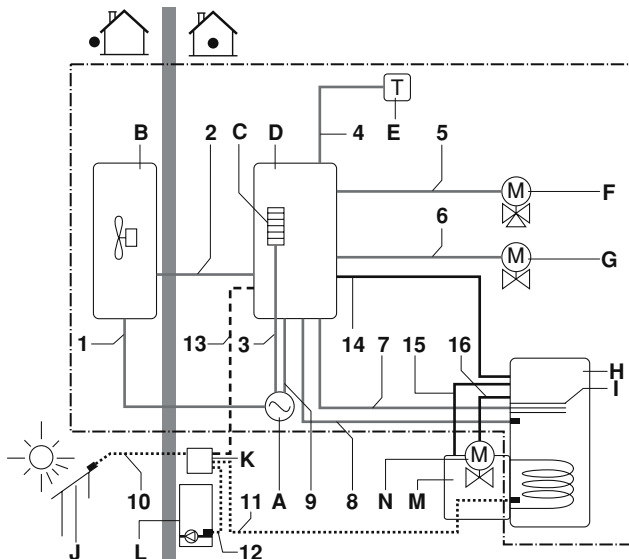

- A...I** Refer to the unit installation manual
J Solar panel
K Solar pump station controller (EKSR3PA)
L Solar pump station (EKSRDS1A)
M Solar kit
N Only for EKHWSU: solenoid 2-way valve
 --- Example of unit

Item	Description	Required number of conductors	Maximum running current
1 ... 9	Refer to the installation manual of the unit		
10	Solar panel sensor cable	2	—
11	Domestic hot water temperature sensor of the solar pump station	2	—
12	Solar return temperature sensor	2	—
13	Operating signal cable from solar pump station controller to unit	2	—
14	Power supply cable from unit to tank (Field supply)	EKHWS 2 ^(a)	1 A
		EKHWE 2 ^(a)	
		EKHWSU 4 ^(a)	
15	Power supply cable from solar kit to tank	2 + GND	1 A
16	For EKHWSU only. Power supply cable from solenoid 2-way valve to tank	2 + GND	1 A


(a) Minimum cable section: 0.75 mm²

Installing the EKR1HB in the unit

Install the PCB delivered with the solar kit in the unit.


Refer to "Accessories supplied with the solar kit" on page 2, part 8.

- 1 Open the EKR1HB box.

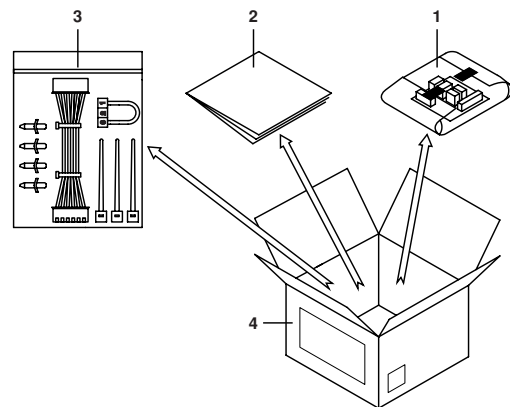

- 1 Wrapped PCB (solar/remote alarm address card)
- 2 Installation manual
- 3 Accessories bag
- 4 EKR1HB box

- 2 Take out the PCB and unwrap it.
- 3 Open the accessories bag and take the connector labelled X1A.
- 4 Place this connector on the EKR1HB PCB (on the connector X1A/CN1).

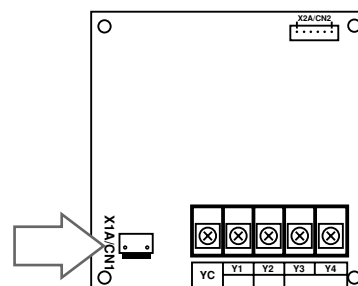


- 5 Mount the plastic raisers from the accessories bag on the switch box backplate.

6 Mount the EKR1HB PCB on the plastic raisers.


■ For EKHBH/X units only:

Mount the control cable (from the accessories bag) between A1P: X33A (the main PCB) and A4P: X2A/CN2 (the EKR1HB PCB).

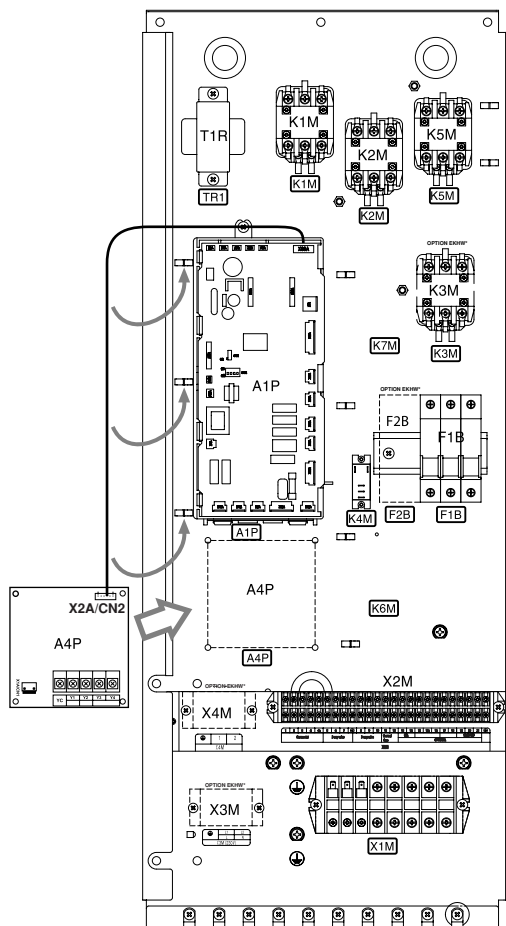

■ For EDH, EBH, EDL and EBL units only:

Mount the control cable (from the accessories bag) between A11P: X33A (the main PCB) and A4P: X2A/CN2 (the EKR1HB PCB).

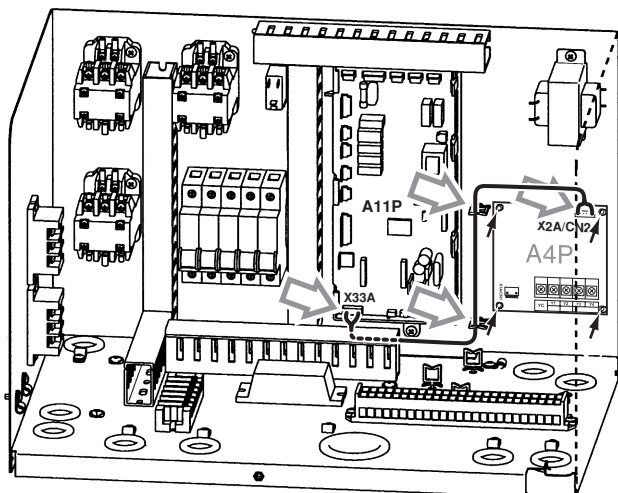

Installing the solar contactor assembly K7M in the unit



Installation of the solar contactor assembly K7M is **REQUIRED ONLY** for:


- EKHBH/X_AA and EKHBH/X_AB.
- EDH_AA, EBH_AA, EDL_AA and EBL_AA.

Installation of the solar contactor assembly K7M is **NOT REQUIRED** for EKHBH/X_BA.


Refer to "Accessories supplied with the solar kit" on page 2, part 9.

- 1 Fix the solar contactor assembly K7M above the K7M label in the unit. Use the 2 supplied contactor fixing screws. Refer to "Accessories supplied with the solar kit" on page 2, part 10.

■ For EKHBH/X_AA and EKHBH/X_AB units only:

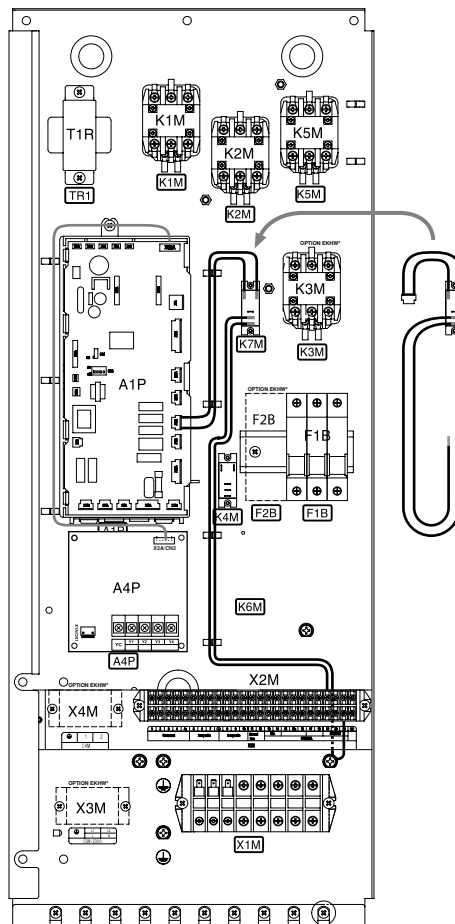

■ For EDH_AA, EBH_AA, EDL_AA and EBL_AA units only:

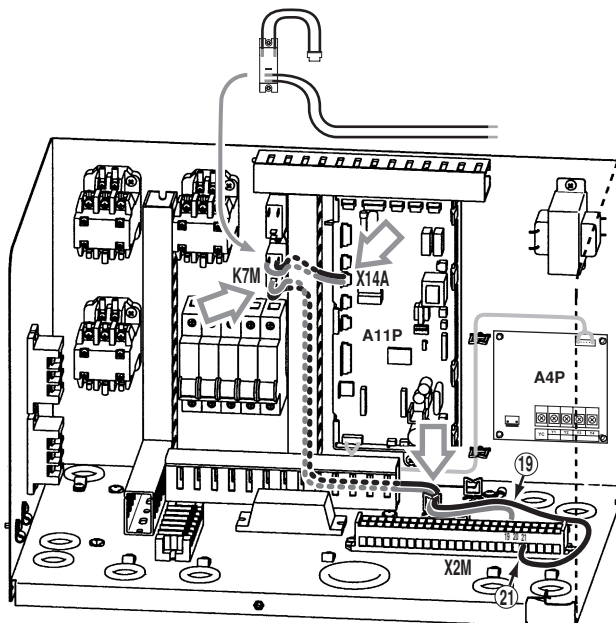

- 2 Place the K7M connector on the X14A connector of the A11P (EKHB)/A11P (EDH, EBH, EDL, EBL) PCB.
- 3 Mount the K7M wire labelled X2M/19 on terminal block X2M at upper position of terminal 19.
- 4 Pass the K7M wire labelled X2M/21 under (EKHBH/X)/around (EDH, EBL, EDH and EDL) terminal block X2M first, and then mount that wire on terminal block X2M at lower position of terminal 21 (at field connection side of terminal block X2M).


Connecting the temperature sensors

- 1 Mount the solar panel sensor of the solar pump station in the solar panel according to the instructions of the solar pump station and solar panel.
- 2 Mounting the domestic hot water temperature sensor of the solar pump station

■ EKHWS(U)

Mount the domestic hot water temperature sensor of the solar pump station in the lower sensor holder of the domestic hot water tank.
Insert the sensor as deep as possible in the holder and use thermal paste.

■ EKHWE

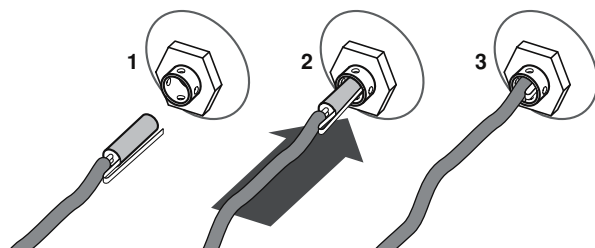

NOTE



- The domestic hot water temperature sensor of the unit is mounted in the upper sensor holder of the domestic hot water tank.
- The distance between the thermistor cables and power supply cable must always be at least 5 cm to prevent electromagnetic interference on the thermistor cables.

Connecting the power supply cable from the unit to the domestic hot water tank

Connect the unit terminals to the domestic hot water tank.

Make sure to fix the cables with the cable tie mountings to ensure strain relief.

Refer to the installation manual of the domestic hot water tank.

Connecting the solar pump station controller, solar pump station, indoor unit, domestic hot water tank and solar kit


Refer to the figure below.

- 1 Make required connections between option PCB A4P and terminal X2M of the indoor unit,
- 2 connect solar pump station controller to pump station,
- 3 connect solar pump station controller to indoor unit,
- 4 connect indoor unit to the domestic hot water tank,
- 5 connect power supply cable from solar kit to the domestic hot water tank.




Refer to the wiring diagram sticker in the domestic hot water tank switch box.

■ For EKHBH/X_AA and EKHBH/X_AB units only:

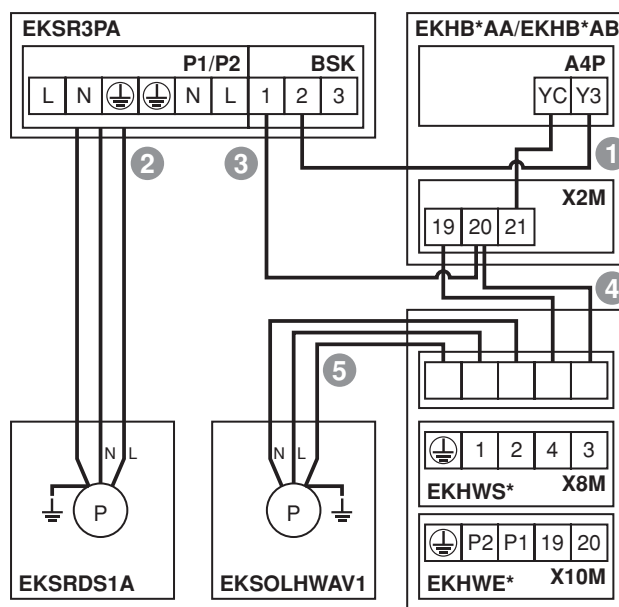


■ For EKHBH/X_BA units only:

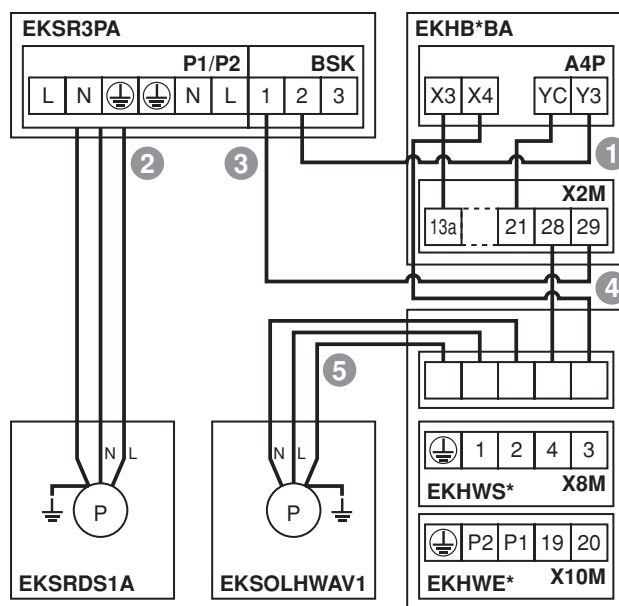

- For connection to the domestic hot water tank:




- Make sure to connect the earth conductor.
- EKHWS(U)

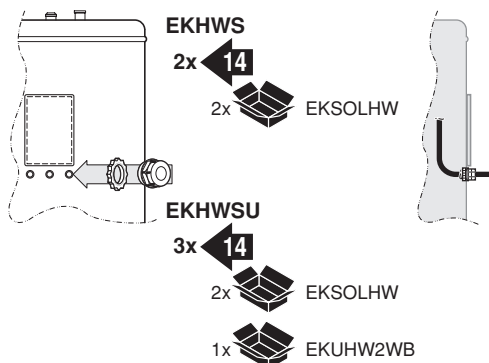

Make sure to ensure strain relief of the cables by correct use of the PG nipples and PG nuts (to be mounted on the domestic hot water tank).

Refer to "Accessories supplied with the solar kit" on page 2, part 6. Positions where PG nipples and PG nuts need to be screwed in the domestic hot water tank are indicated on figures 1, 2 and 3 as actions 14.

- EKHWE

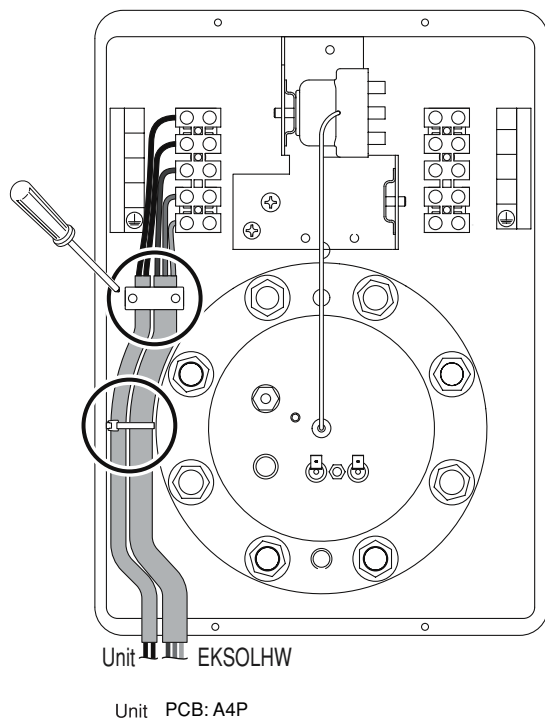

Unit PCB: A4P

START UP

Commissioning the system before initial start up

Besides the checks before initial start up of the unit (refer to the installation manual of the unit) you must check the following items on the solar kit installation before switching on the circuit breaker:

- The domestic hot water tank is filled with water. Refer to the installation manual of the domestic hot water tank.
- The circuit connected to the solar kit is filled with water. Refer to the installation manual of the unit.
- The solar collector circuit is filled with glycol. Refer to the installation manual of the solar circuit.
- Make sure the solar kit is properly fixed to the domestic hot water tank and that there are no leaks.
- Field wiring and earthing
 - Make sure the pump of the solar kit is connected to the domestic hot water tank as shown in the wiring diagram and the pump earth wires have been connected properly. The earth terminals should be tightened.
- Ensure that the auxiliary contact of the solar pump station is connected to the unit.
- Ensure the power supply cable from the unit is connected to the domestic hot water tank.
- Mounting of sensors
 - Make sure the solar panel temperature sensor and the domestic hot water temperature sensor of the solar pump station are properly mounted.
- Verify that following settings are made on the solar pump station:
 - Maximum solar panel temperature: $\leq 110^{\circ}\text{C}$
 - Maximum tank temperature:
 - For EKHWS domestic hot water tank: 80°C
 - For EKHWSU domestic hot water tank: 70°C
 - For EKHWE domestic hot water tank: 75°C
 - Minimum temperature difference between domestic hot water tank and solar panel before starting pump operation: $\geq 10^{\circ}\text{C}$



WARNING

Due to heat conduction, the piping between heating circuit and solar kit connection can become very hot. For this reason this pipe must be made of copper, at least 0.5 m long and insulated.

Checklist for proper functioning

Following items should be checked to assure proper functioning:

- When the temperature of the solar panel becomes 10°C higher than the domestic hot water tank temperature, the pump of the solar pump station and the pump of the solar kit will start operation.⁽¹⁾
- When the temperature of the solar panel becomes lower than the domestic hot water tank temperature, the pump of the solar pump station and the pump of the solar kit will stop operation.

(1) Unless the domestic water heating mode is enabled, the solar priority parameter = 1 and the heat pump is heating the domestic water tank at that moment. Refer to "Configuring your system" on page 9 for more information.

OPERATING INSTRUCTIONS

Configuring your system

In order to guarantee maximum energy savings combined with maximum comfort, it is important to configure your system in a proper way.

For this reason, it is strongly recommended to do the following:

Use of schedule timers


- Check the orientation of your solar panel, and find out during what time of the day the intensity of the sun on it is expected to be strong and weak. For example, a solar panel oriented to the east will receive strong intensity during the morning, weak intensity during the afternoon.

- Check your usual pattern of peak domestic hot water consumption. E.g. showering during the morning from 7 to 9 a.m. and again in the evening from 5 p.m. onwards.
- Set the schedule timer for 'domestic water heating' and 'booster heating' as to disable heating of the domestic water tank by the unit before solar radiation on the solar panel can become intensive.
On the other hand, enable 'domestic water heating' and/or 'booster heating' about 1 hour before you usually expect domestic hot water consumption or during night time. In this way, the unit and/or booster heater will heat up the domestic water tank and guarantee domestic hot water in the event there has been no sun.

Example

Your domestic hot water consumption pattern is from 7 a.m. to 9 a.m. in the morning and from 5 p.m. till 11 p.m. in the evening.

Since the solar panel is oriented towards the south-east, the radiation can be intensive on the solar panel from 8 a.m to 6 p.m.

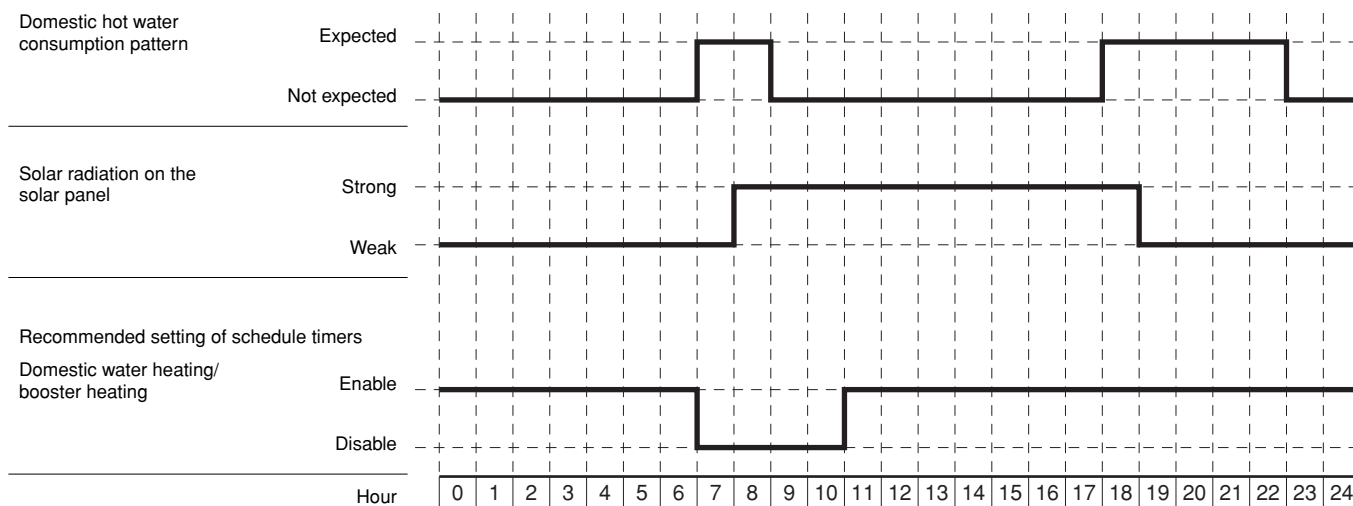

If the domestic hot water tank has not been heated enough by the sun during the day, or a lot of warm water was consumed the evening before, the domestic hot water tank must be heated up during the night time by the unit, so that in the morning domestic hot water is available for consumption. For this reason, in the example above, domestic water heating is enabled during the night, until consumption of warm water is expected to start.

In the morning, the domestic water heating/booster heating is disabled. In this way, the domestic hot water tank is not reheated after or during consumption of warm water and the sun will get the chance to reheat the water as much as possible.

Since domestic hot water consumption is expected again from 5 p.m. onwards, the domestic water heating and/or booster heating is enabled again 1 hour before, from 4 p.m. onwards. This will guarantee, in the case of absence of sun during the day, maximum warm water capacity by 5 p.m.

NOTE
To set schedule timers, refer to the operation manual of the unit.

Setting of domestic hot water tank temperature

The domestic hot water tank has 2 temperature sensors.

The upper temperature sensor is the thermostat sensor of your unit. This temperature can be set on your unit (refer to the operation manual of the unit). It is advised to set this temperature as low as possible. Start with a low temperature, e.g. 48°C. If with this temperature you face shortage of warm water during normal tapping patterns, increase gradually until you find the temperature of warm water that covers your daily demand.

NOTE
Refer to the operation manual of the unit to change the domestic hot water temperature setting.

The lower temperature sensor is the thermostat sensor of the solar pump station. This temperature can be set on the solar pump station. Put this temperature as high as possible but not higher than the listed temperatures in function of domestic hot water tanks installed, as otherwise the thermal protection in the tank might trip.

- For EKHWS domestic hot water tank: 80°C
- For EKHWSU domestic hot water tank: 70°C
- For EKHWE domestic hot water tank: 75°C

NOTE
For optimal solar efficiency and system operation it is advised that domestic hot water temperature setting on the unit controller is lower than the temperature setting on the solar pump station controller.

With above settings, the heating of the water by heat pump/booster heater will be limited to the minimum required, and solar heat will be stocked in the domestic hot water tank to the maximum.

Setting of the solar priority parameter

Simultaneous water heating by the sun and water heating by the heat pump is not possible.

By default, heating of the tank by the heat pump has priority over heating by the sun.

This means that, whenever there is a request of the domestic hot water thermostat and domestic water heating is enabled (by the schedule timer or domestic water heating ON/OFF button, refer to the operation manual of the unit), heating will be done by the heat pump. In case solar heating is busy, solar heating will be stopped.

This is to avoid shortage of domestic hot water in case the solar radiation is very weak, or solar radiation only became high shortly before domestic hot water demand is expected (e.g. on a cloudy day).

This default setting can be changed, so that at all times, when solar heat becomes available, domestic water heating by the heat pump will be (if busy) interrupted and taken over by the sun.

In order to change this, put the field parameter [C-00] to 0. Refer to the installation manual of the unit, paragraph "Field settings" to find out how to access and change field parameters. [C-00] put to 0 means solar priority, [C-01] put to 1 means heat pump priority.

NOTE Be aware that setting this parameter to 0 might cause insufficient warm water at the time of domestic hot water demand during days with weak solar intensity.

If you are not sure about the availability of hot water, check the domestic hot water temperature on the controller (see operation manual of the unit) and if too low, push the 'booster domestic hot water' button. This will trigger domestic water heating by the heat pump immediately.

NOTE The booster heater in the domestic hot water tank can work independent from the solar heating or domestic water heating by the heat pump.

For a detailed decision flow on domestic water heating by solar kit or by heat pump, and/or booster heater, refer to the annexes "Decision flow of heating the domestic water by heat pump or by solar kit" on page 12 and "Decision flow of heating the domestic water by booster heater" on page 13.

TROUBLESHOOTING AND SERVICING

This section provides useful information for diagnosing and correcting certain troubles which may occur with the unit.

General guidelines

Before starting the troubleshooting procedure, carry out a thorough visual inspection of the unit and look for obvious defects such as loose connections or defective wiring.

Before contacting your local Daikin dealer, read this chapter carefully, it will save you time and money.



When carrying out an inspection on the switch box of the unit, always make sure the main switch of the unit is switched off.

When a safety device was activated, stop the unit and find out why the safety device was activated before resetting it. Under no circumstances safety devices may be bridged or changed to a value other than the factory setting. If the cause of the problem cannot be found, call your local dealer.

General symptoms

Symptom 1: The pump of the solar pump station starts operation, but the pump of the solar kit is not working.

	POSSIBLE CAUSE	CORRECTIVE ACTION
1	The tank has reached its maximum allowed temperature (see the temperature reading on the unit display)	Refer to "Thermal cut out" on page 3.
2	The auxiliary contact from the solar pump station to the unit is not properly wired	Check the wiring.
3	The pump of the solar kit is not properly wired to the unit through the tank	Check the wiring.
4	The priority for domestic water heating is given to the heat pump	Refer to "Setting of the solar priority parameter" on page 10.
5	The thermal cut out of the tank has operated	Refer to error code RR in "Error codes" on page 11.

Symptom 2: There is a lot of sun intensity but the solar pump station and solar kit pumps do not start.

	POSSIBLE CAUSE	CORRECTIVE ACTION
1	The maximum temperature of the domestic hot water tank is reached	Check the domestic hot water temperature on the controller of the unit (refer to the operation manual of the unit) and check the maximum temperature setting on your solar pump station.
2	The outdoor unit is heating up the domestic water tank, since the priority for domestic water heating is given to the heat pump	Refer to "Setting of the solar priority parameter" on page 10.

Symptom 3: Only for EKHWSU

The pump of the solar pump station starts operation, but the pump of the solar kit is not working.





	POSSIBLE CAUSE	CORRECTIVE ACTION
1	The temperature settings of the domestic hot water tank thermostats were lowered.	Refer to the wiring diagram in the domestic hot water tank switch box and check the temperature settings.
2	The 2-way valve remains closed.	Check the wiring. Refer to the wiring diagram in the domestic hot water tank switch box and check the temperature settings.

Error codes

When a safety device is activated, the user interface LED will be flashing, and an error code will be displayed.

Following error codes might be related to a malfunction of your solar system. First, check also the corrective actions as mentioned in the installation manual.

Reset the safety by turning the unit OFF and back ON.

Instruction to turn the unit OFF			
User interface mode (heating/cooling )	Domestic water heating mode ()	Push the  button	Push the  button
ON	ON	1 time	1 time
ON	OFF	1 time	—
OFF	ON	—	1 time
OFF	OFF	—	—

In case this procedure for resetting the safety is not successful, contact your local dealer.

Error code	Failure cause	Corrective action
BH	Outlet water temperature of unit too high (>65°C)	Check the 3-way valve and its wiring: <ul style="list-style-type: none"> • 3-way valve is broken or wrongly connected and remains in the 'domestic hot water' position during operation of the solar kit. • One of the non-return valves in the solar kit is broken. Check the non-return valves.
RR	Booster heater thermal protector is open	The maximum allowed temperature setting on the solar pump station is set too high. (should be set below 80°C for EKHWS, below 70°C for EKHWSU and below 75°C for EKHWE domestic hot water tanks). Reset the booster heater thermal protector on the domestic hot water tank.

DISPOSAL REQUIREMENTS

Dismantling of the unit, treatment of the refrigerant, of oil and of other parts must be done in accordance with relevant local and national legislation.



Your product is marked with this symbol. This means that electrical and electronic products shall not be mixed with unsorted household waste.


Do not try to dismantle the system yourself: the dismantling of the system, treatment of the refrigerant, of oil and other parts must be done by a qualified installer in accordance with relevant local and national legislation.

Units must be treated at a specialized treatment facility for re-use, recycling and recovery. By ensuring this product is disposed off correctly, you will help to prevent potential negative consequences for the environment and human health. Please contact the installer or local authority for more information.

TECHNICAL SPECIFICATIONS


• Maximum operating pressure of the connections to and from the solar pump station	2.5 MPa
• Maximum operating pressure of the connections to and from the unit and connections to and from the domestic hot water tank heat exchanger	0.3 MPa
• Minimum/maximum ambient temperature	1/35°C
• Minimum/maximum fluid temperature	1/110°C
• Heat transfer liquid (solar side)	propylene glycol

Decision flow of heating the domestic water by heat pump or by solar kit

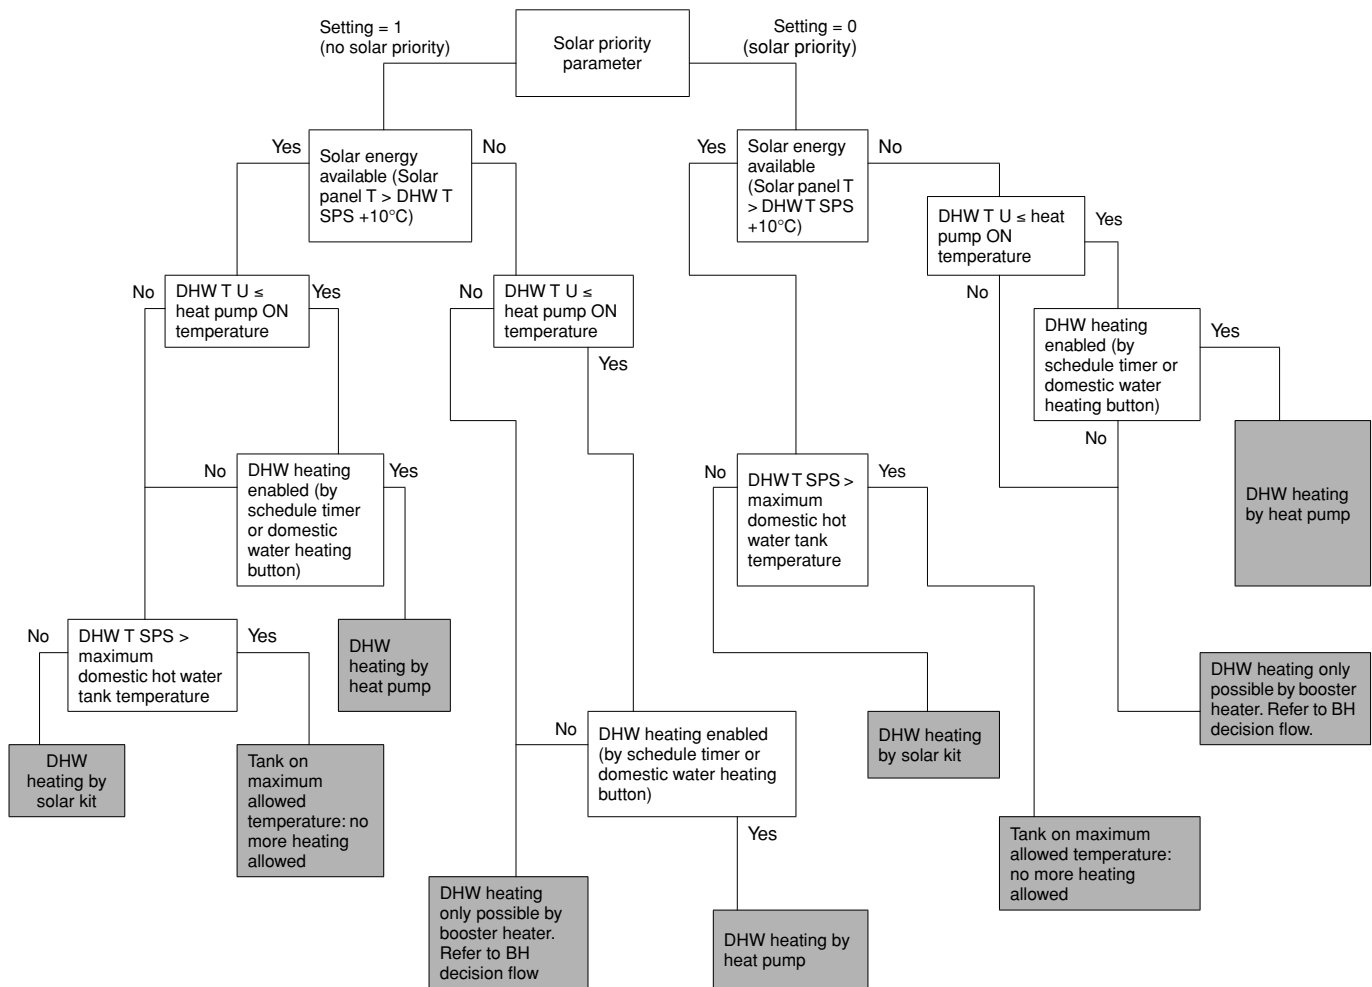



DHW Domestic Hot Water
DHW T SPS Domestic Hot Water Temperature by the Solar Pump Station temperature sensor
DHW T U Domestic Hot Water Temperature by the Unit temperature sensor
BH Booster Heater

Decision flow of heating the domestic water by booster heater

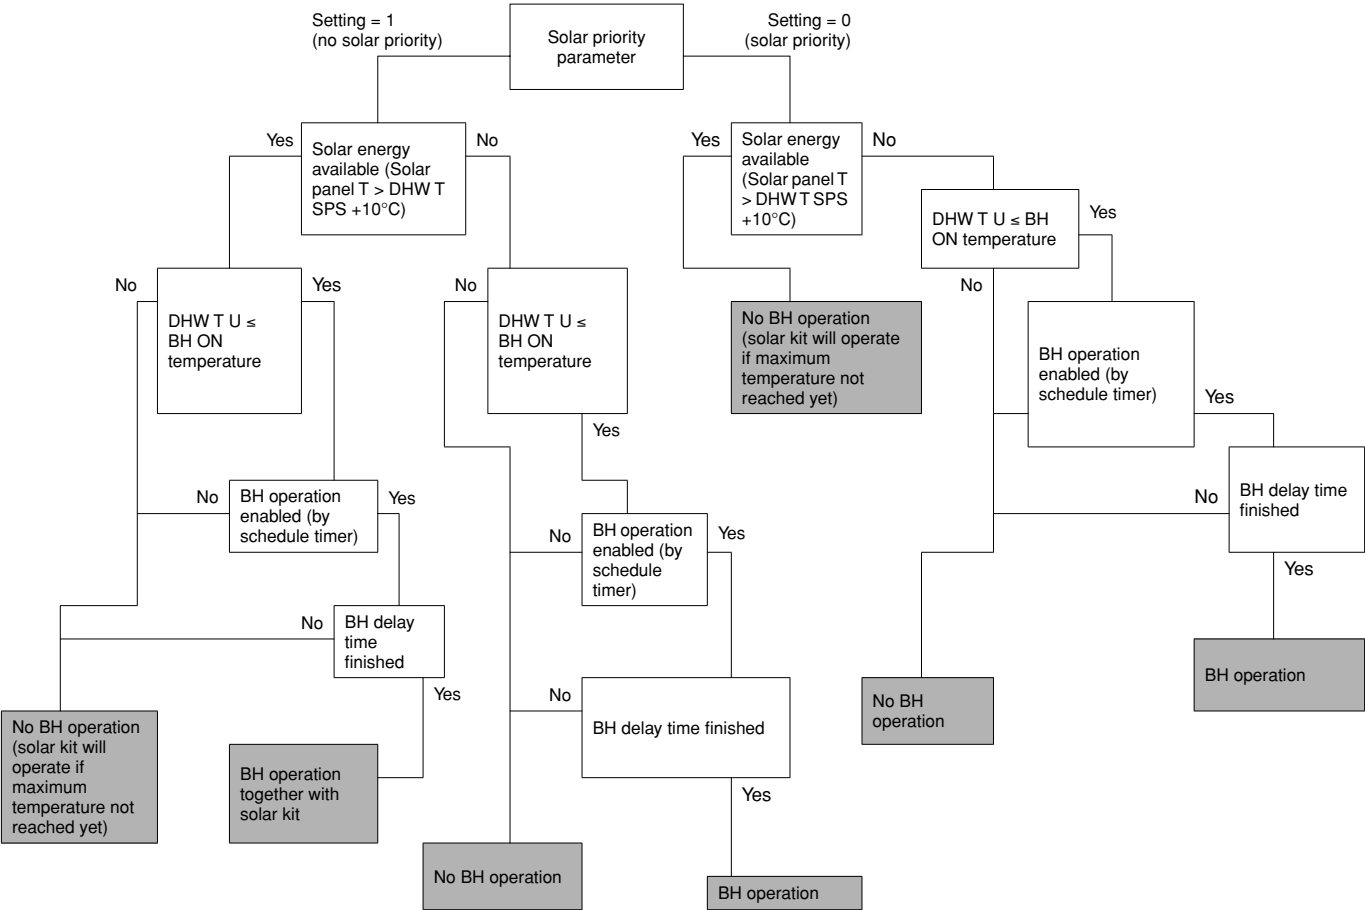


DHW Domestic Hot Water
DHW T SPS Domestic Hot Water Temperature by the Solar Pump Station temperature sensor
DHW T U Domestic Hot Water Temperature by the U nit temperature sensor
BH Booster Heater

EKHWSU150*

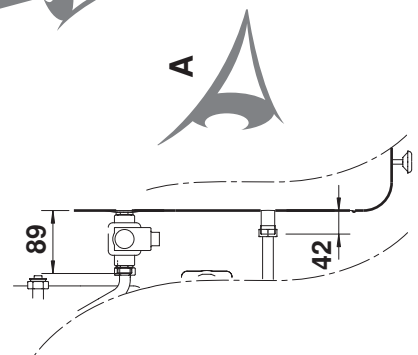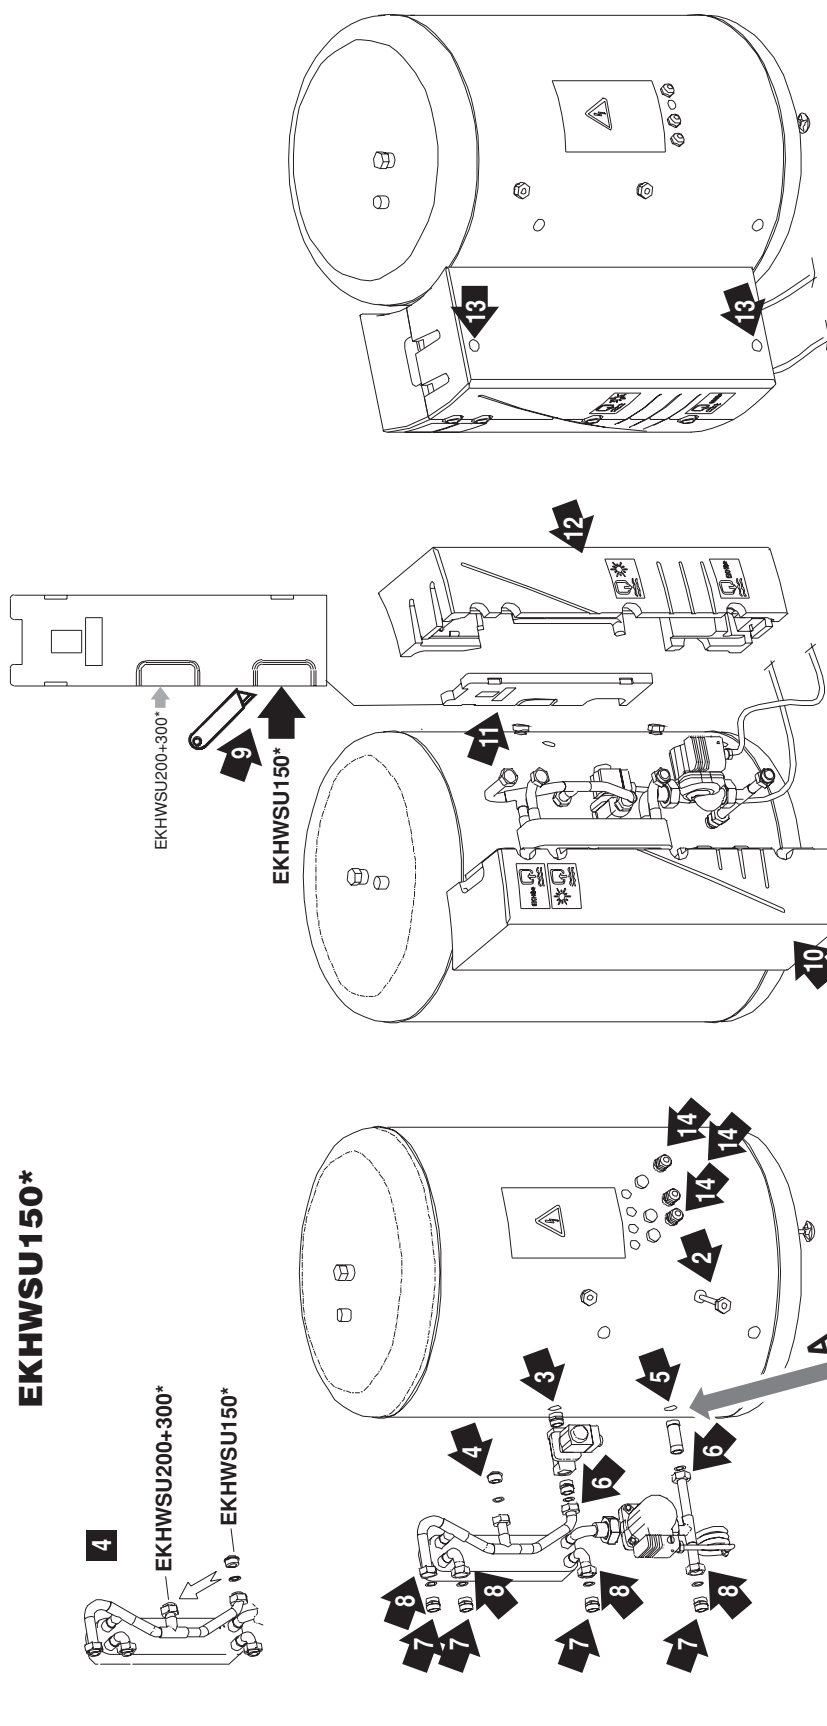


EKHWSU150*

EKHWSU200+300*

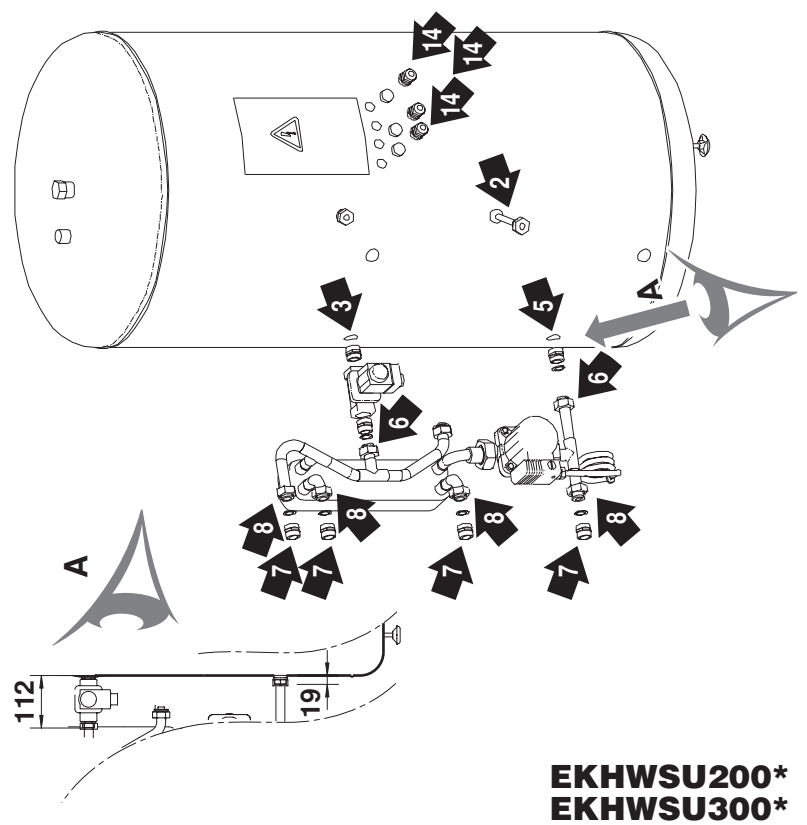

EKHWSU200*
EKHWSU300*

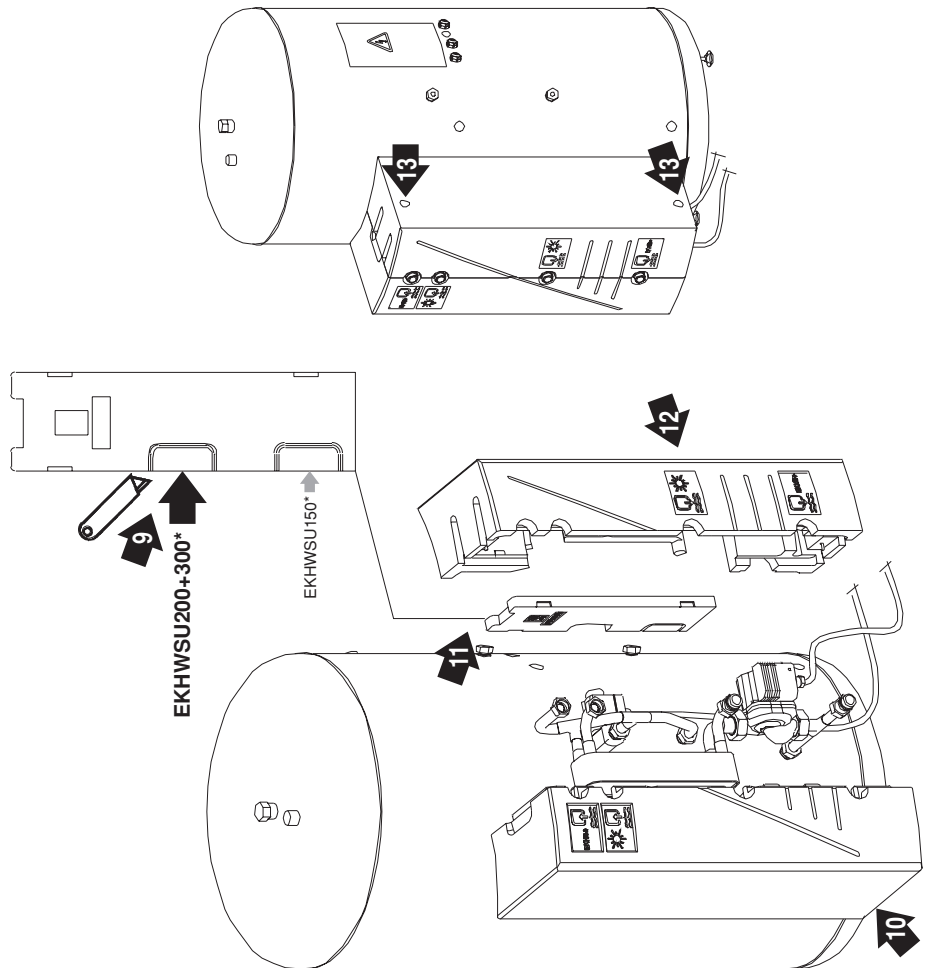



4PW41598-1 E 0000000X

Copyright © Daikin

DAIKIN EUROPE N.V.

Zandvoordestraat 300, B-8400 Oostende, Belgium

4PW41598-1E